


PARTS LIST

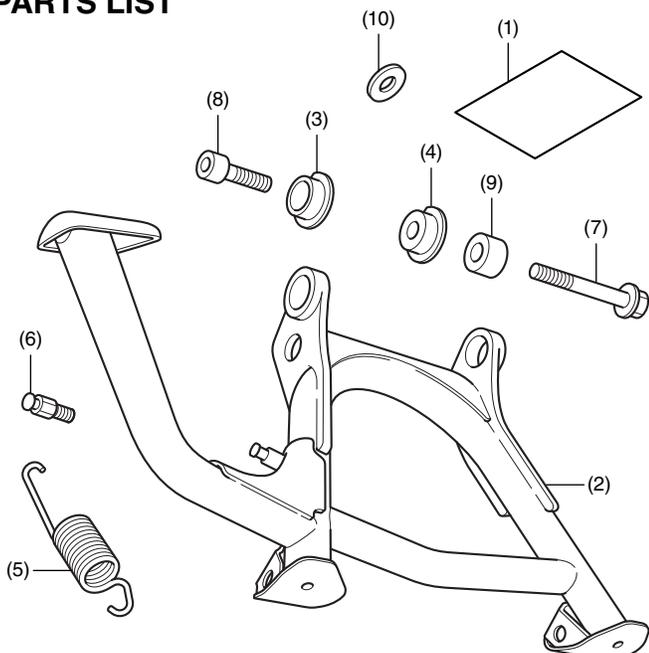

No.	Description	Qty
(1)	Installation Instruction URL	1
(2)	Centerstand	1
(3)	Left collar (large hole diameter)	1
(4)	Right collar (small hole diameter)	1
(5)	Spring	1
(6)	Spring hook	1
(7)	10 mm flange bolt (left hand thread)	1
(8)	10 mm socket bolt	1
(9)	Collar	1
(10)	Washer	8

TOOLS AND SUPPLIES REQUIRED

Socket (10 and 14 mm)

Ratchet

Hex wrench (8 mm)

Spring tool

Grease

Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N-m	kgf-m	lbf-ft
Spring hook	22	2.2	16
10 mm socket bolt	54	5.5	39.9
10 mm flange bolt	54	5.5	39.9

INSTALLATION

▲ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc. to cool before installing the accessory.


NOTE:

- Be extremely careful when installing the spring as the combined tension of the spring is very strong.
- The spring installation must be performed by two people. While one person holds the motorcycle, another person installs the spring.


- Remove the screw and the clip as shown.

- Repeat on the left side.

<Right side>

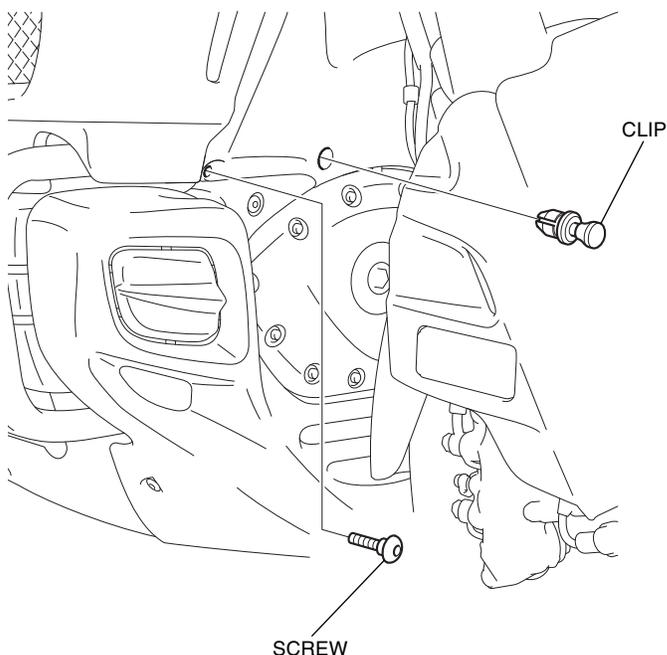


2. Remove the front lower cowl and the front upper cowl as shown.

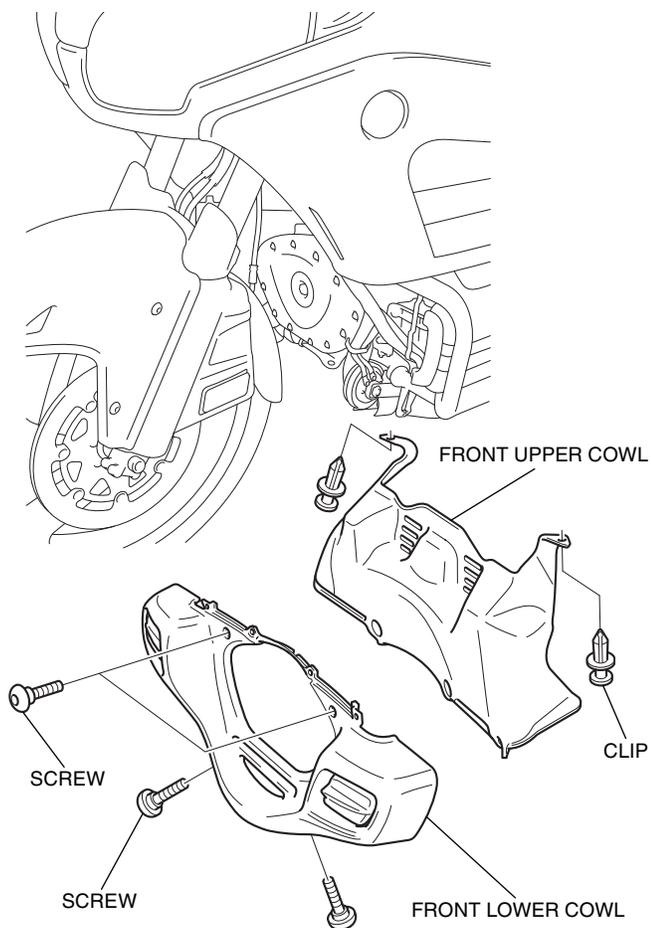


3. Remove the left rear lower cowl as shown.

- Repeat on the right side.

<Left side>

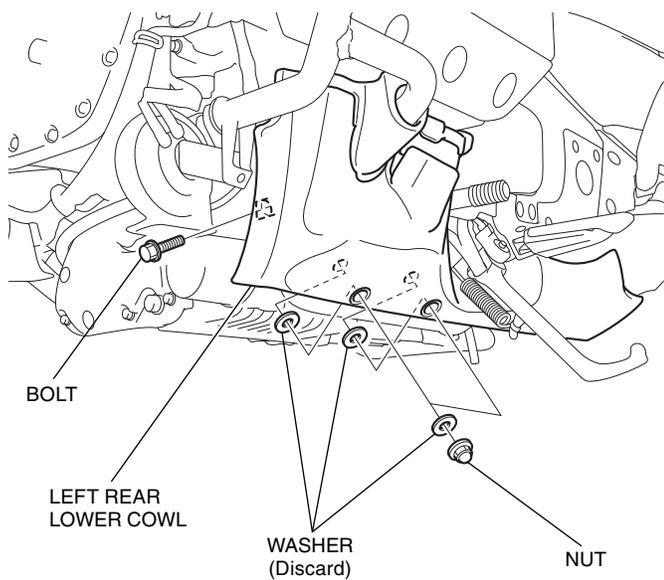


4. Apply grease to the shaded areas shown.

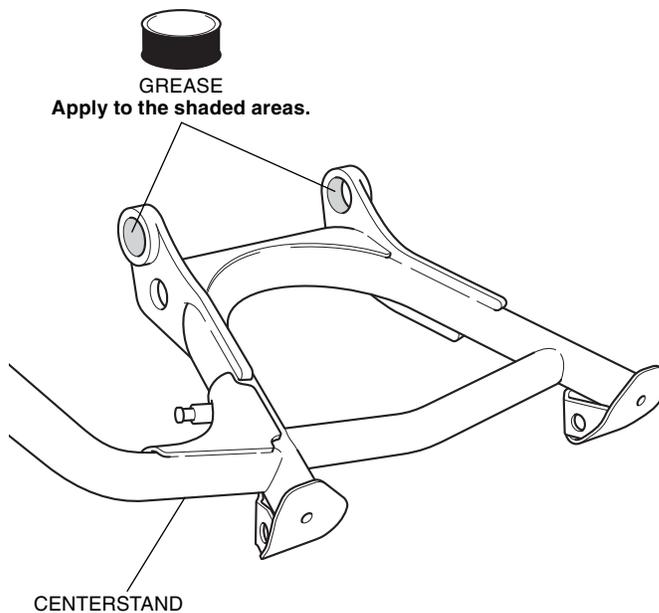


5. Install the spring hook as shown.

<Left side>

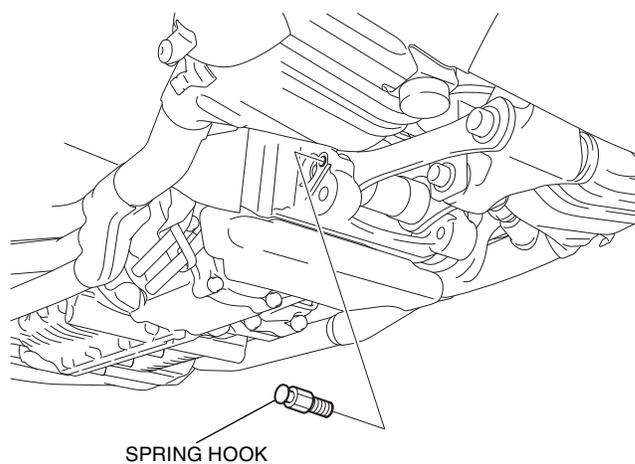


6. Install the centerstand as shown.

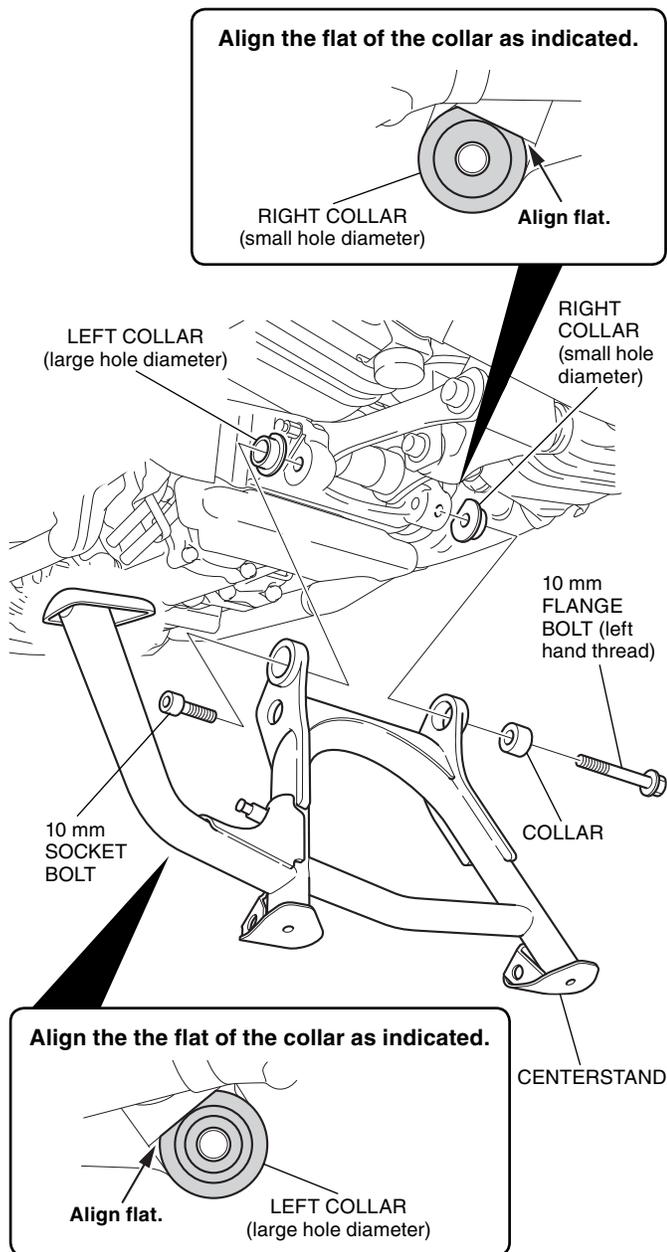

7. Install the spring as shown.


- First install the spring hook, then install the spring on the centerstand.
- The spring installation shall be performed by two persons. While one person holds the motorcycle, another person installs the spring.

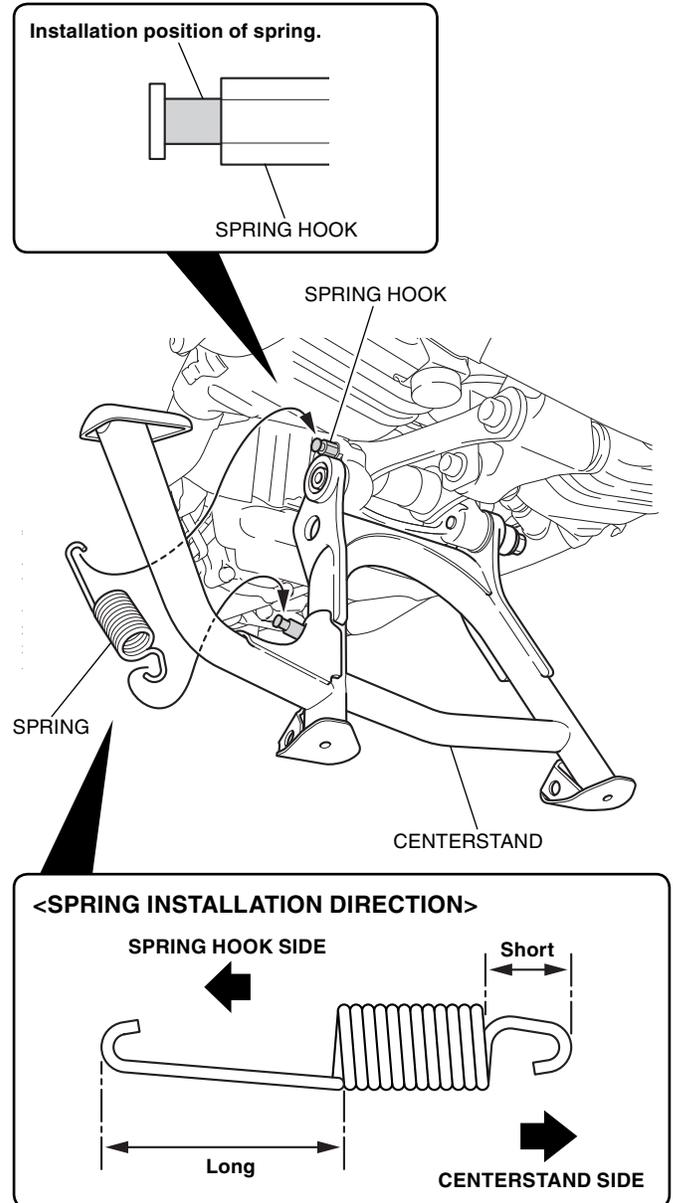

8. Install the left rear lower cowl in the reverse order of removal.

- Repeat on the right side.

<Left side>

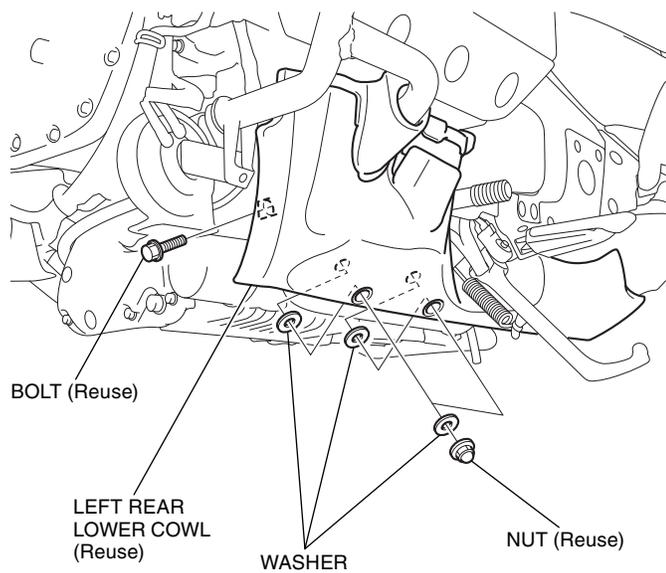

9. Install the motorcycle's parts in the reverse order of removal.