


## PARTS LIST

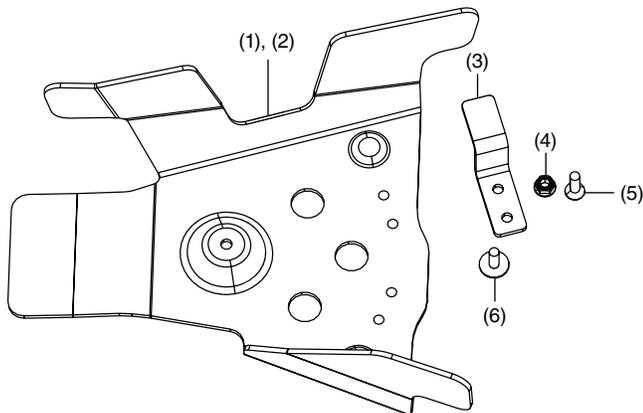

No.	Description	Qty
(1)	Rear right A-arm guard	1
(2)	Rear left A-arm guard	1
(3)	Bracket	4
(4)	6 mm U-nut	8
(5)	6 x 20 mm flat screw	8
(6)	6 x 16 mm flange bolt	2

## TOOLS AND SUPPLIES REQUIRED

- Torque wrench
- 10 mm socket
- Phillips screwdriver
- Hondalock 2 or equivalent thread lock

## TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values.


Item	N-m	kgf-m	lbf-ft
6 mm U-nut	10	1	7
6 x 16 mm flange bolt	12	1.2	8.9

## USE AND CARE INFORMATION


Check the accessory mounts frequently and retighten if necessary.

## INSTALLATION


- Remove the bolt and existing guard as shown.

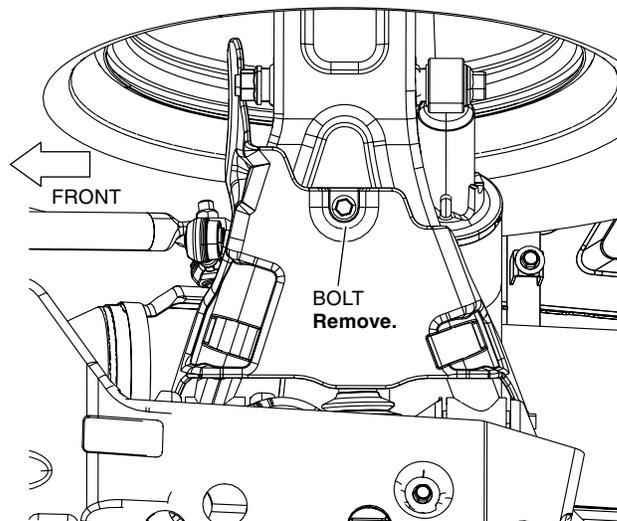


- Carefully bend the plastic guard away from the A-arm until the locking tabs slide over the tube.

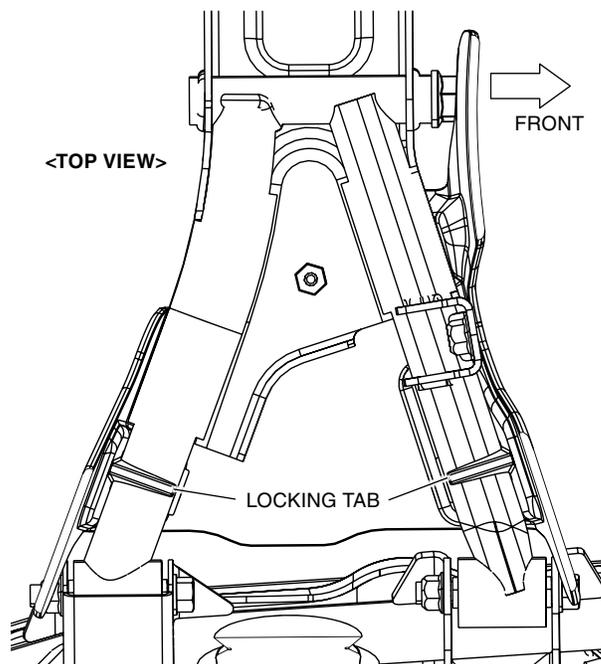


- Place the guard onto the A-arm as shown.  
Align the bolt hole and install one 6 x 16 mm flange bolt at the position shown.  
Tighten the bolt to the specification in the Torque Chart.

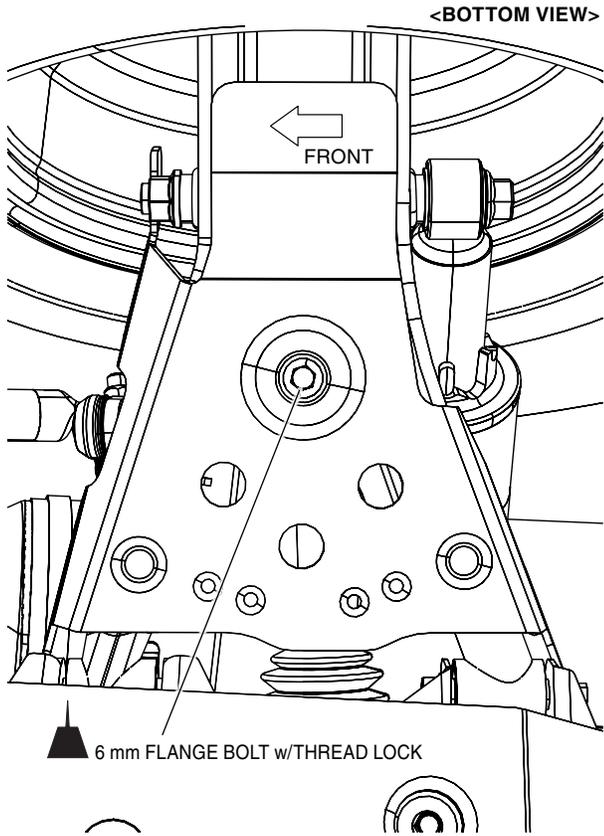


- Insert two 6 x 20 mm flat screws up through the holes at the indicated location.

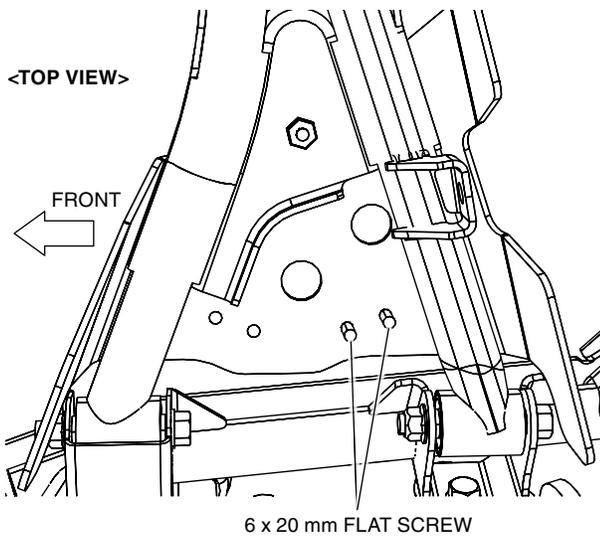


- Install a bracket over the two inserted screws as shown.

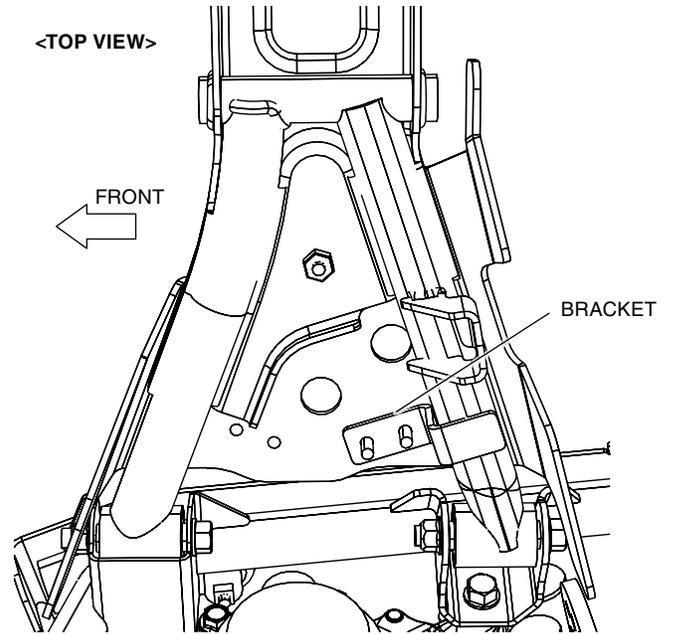

- Install a 6 mm U-nut onto each screw as shown.  
Tighten the nuts to the specification in the Torque Chart.

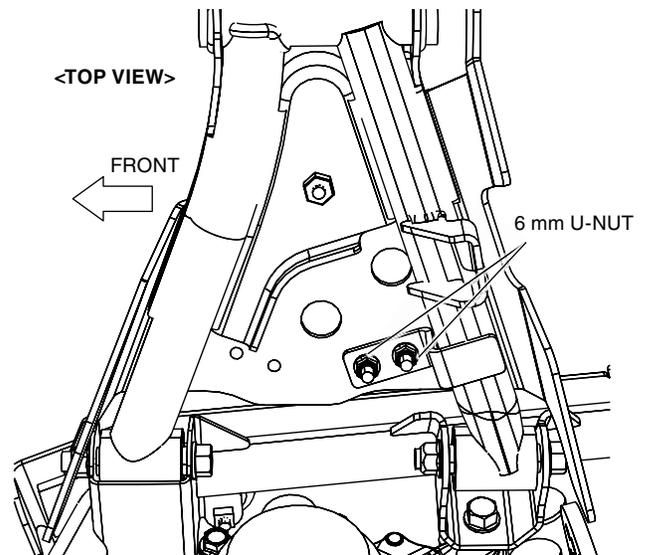

7. Repeat Steps 4 through 6 for the other bracket.

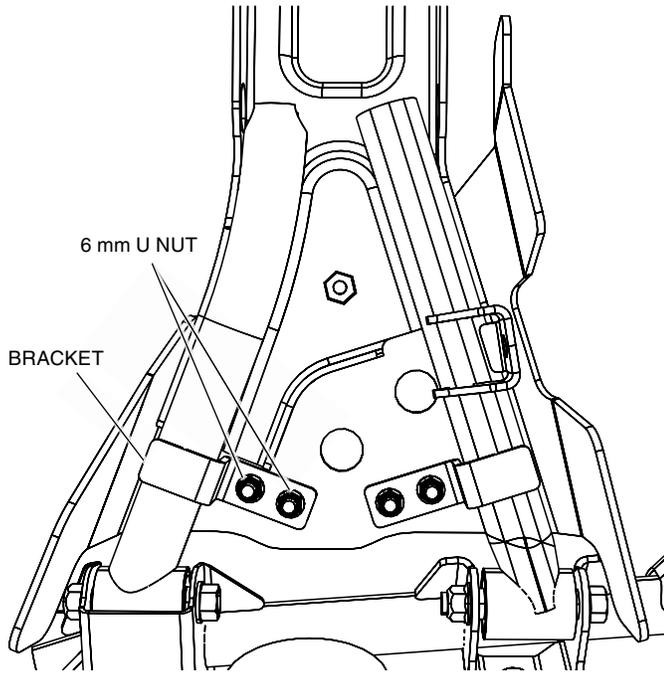

8. Repeat Steps 1 through 7 for the other A-arm guard.