



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Honda CBR1000RR-R / SP Brake Protector Kit


Installation Instructions





Kit Contents PRN014778-014779

- (A) 1 x Bar End
- (B) 1 x M6 x 65mm Caphead
- (C) 1 x M6 x 90mm Caphead
- (D) 1 x Brake Protector Bracket
- (E) 1 x Bar End Inner
- (F) 1 x Bar End Outer
- (G) 1 x Collet
- (H) 1 x O-Ring
- (I) 1 x M6 Cone

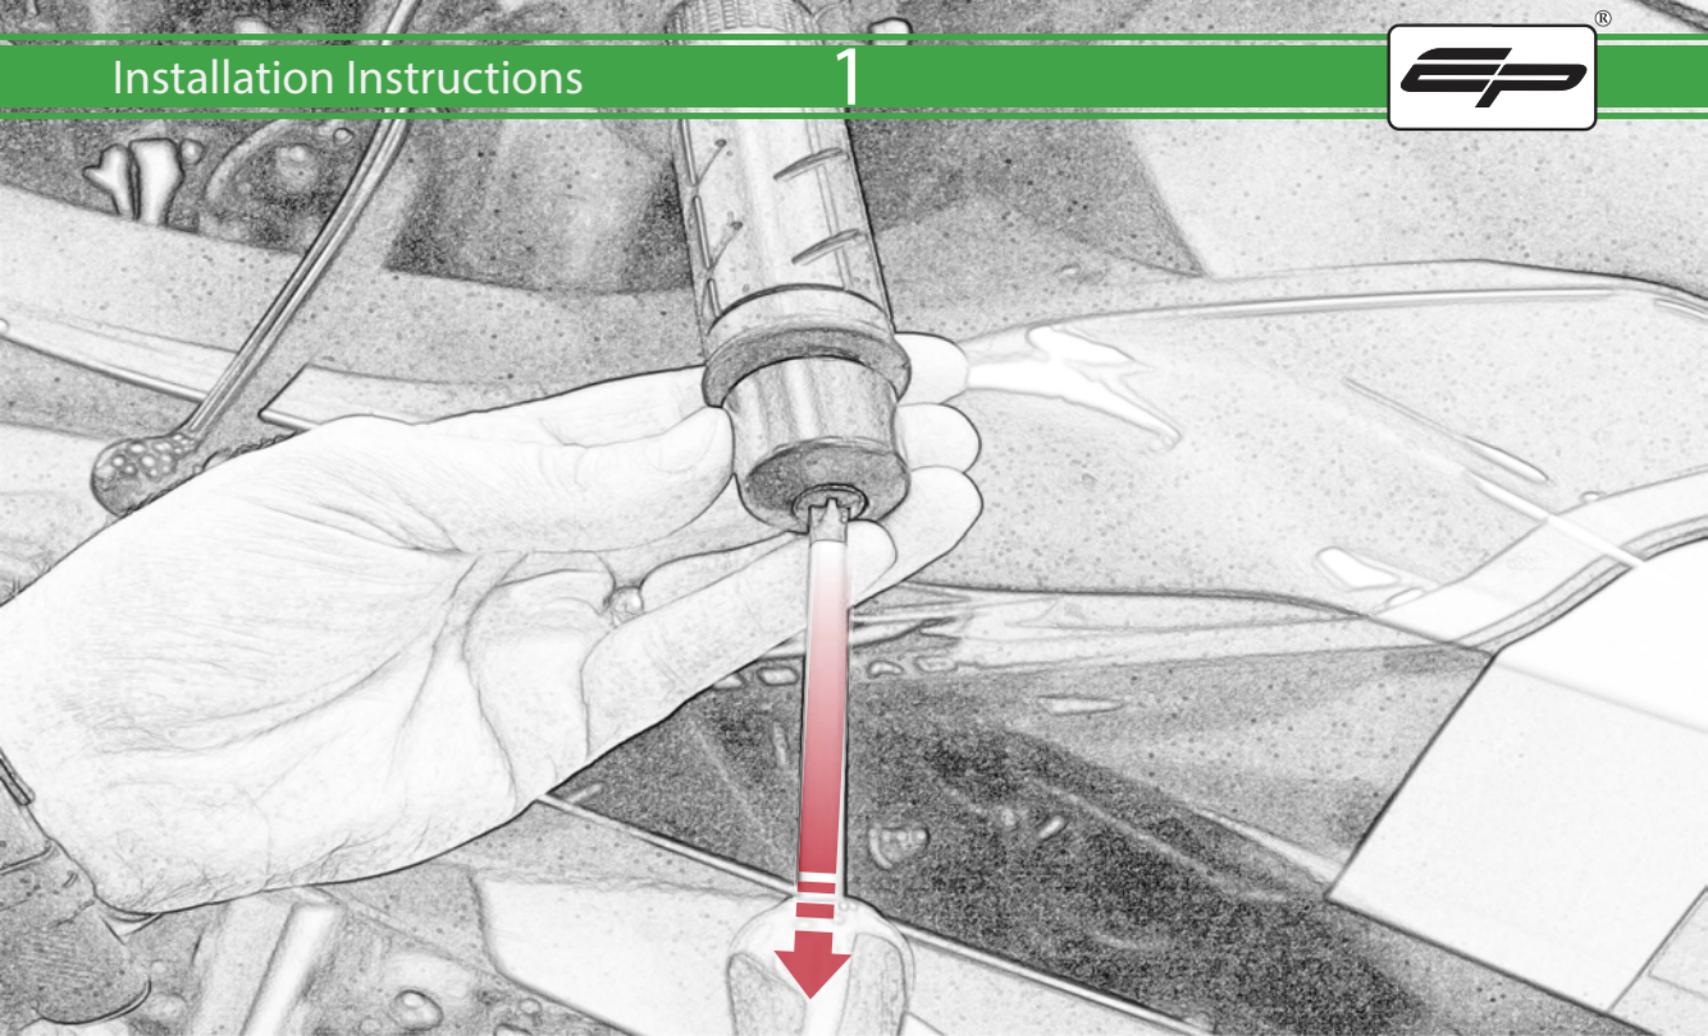

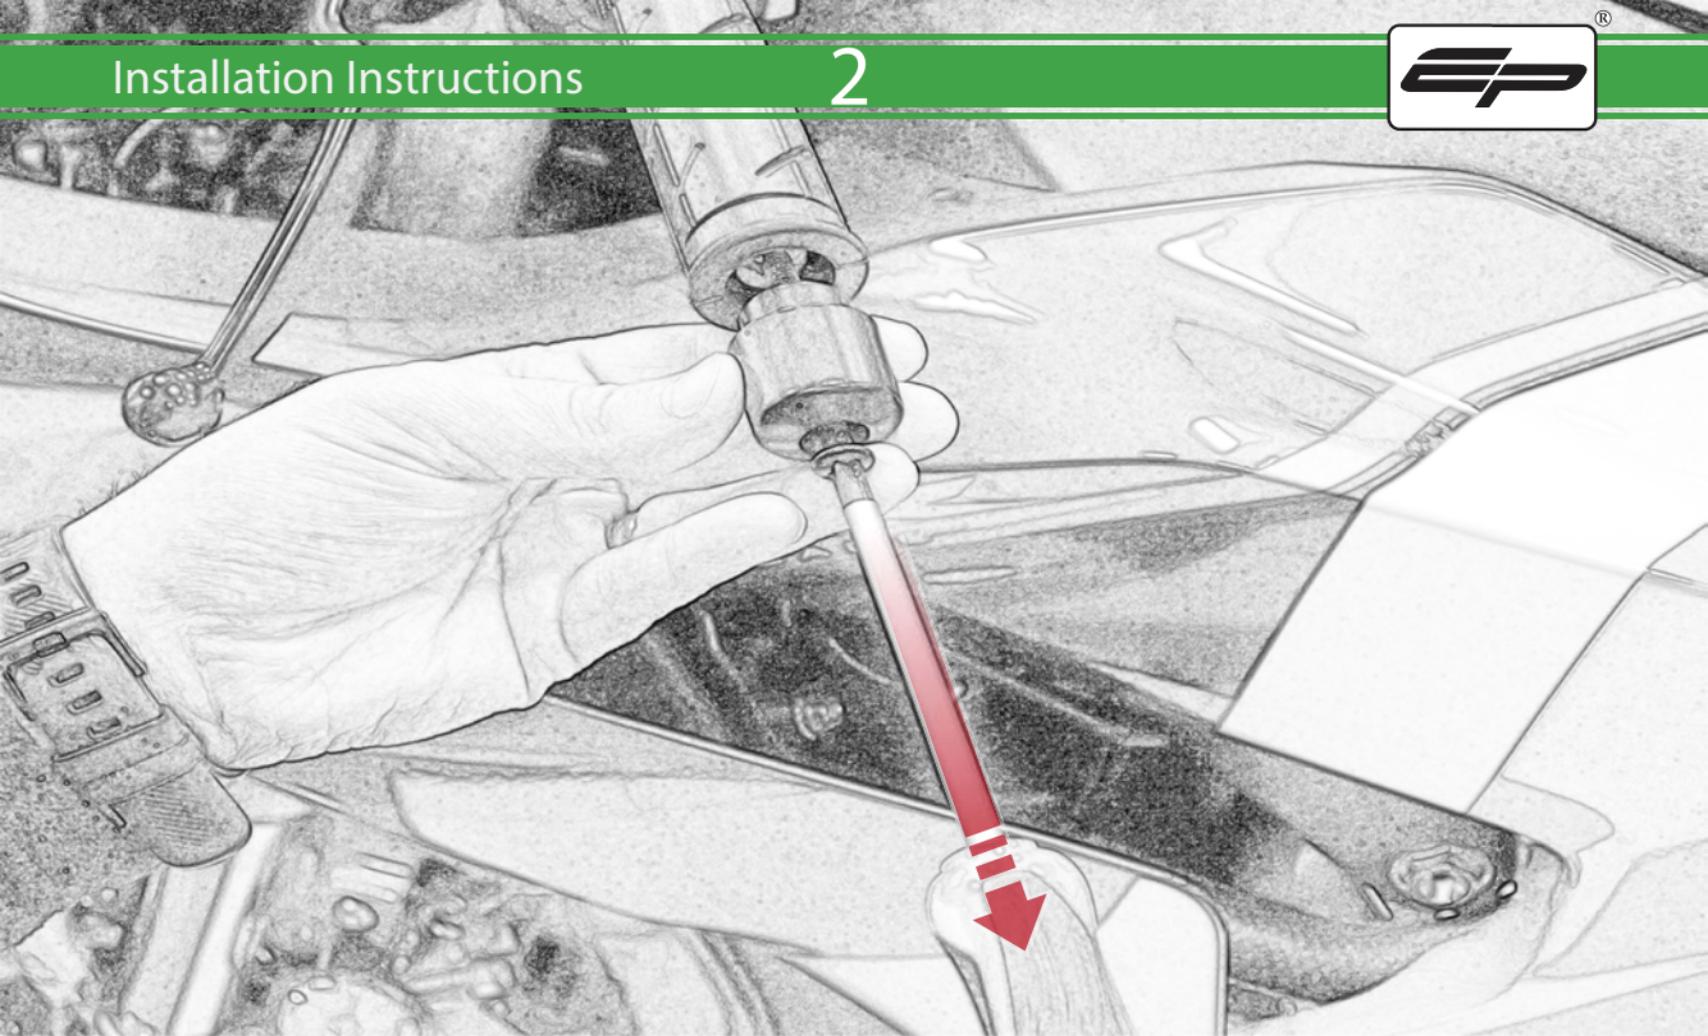


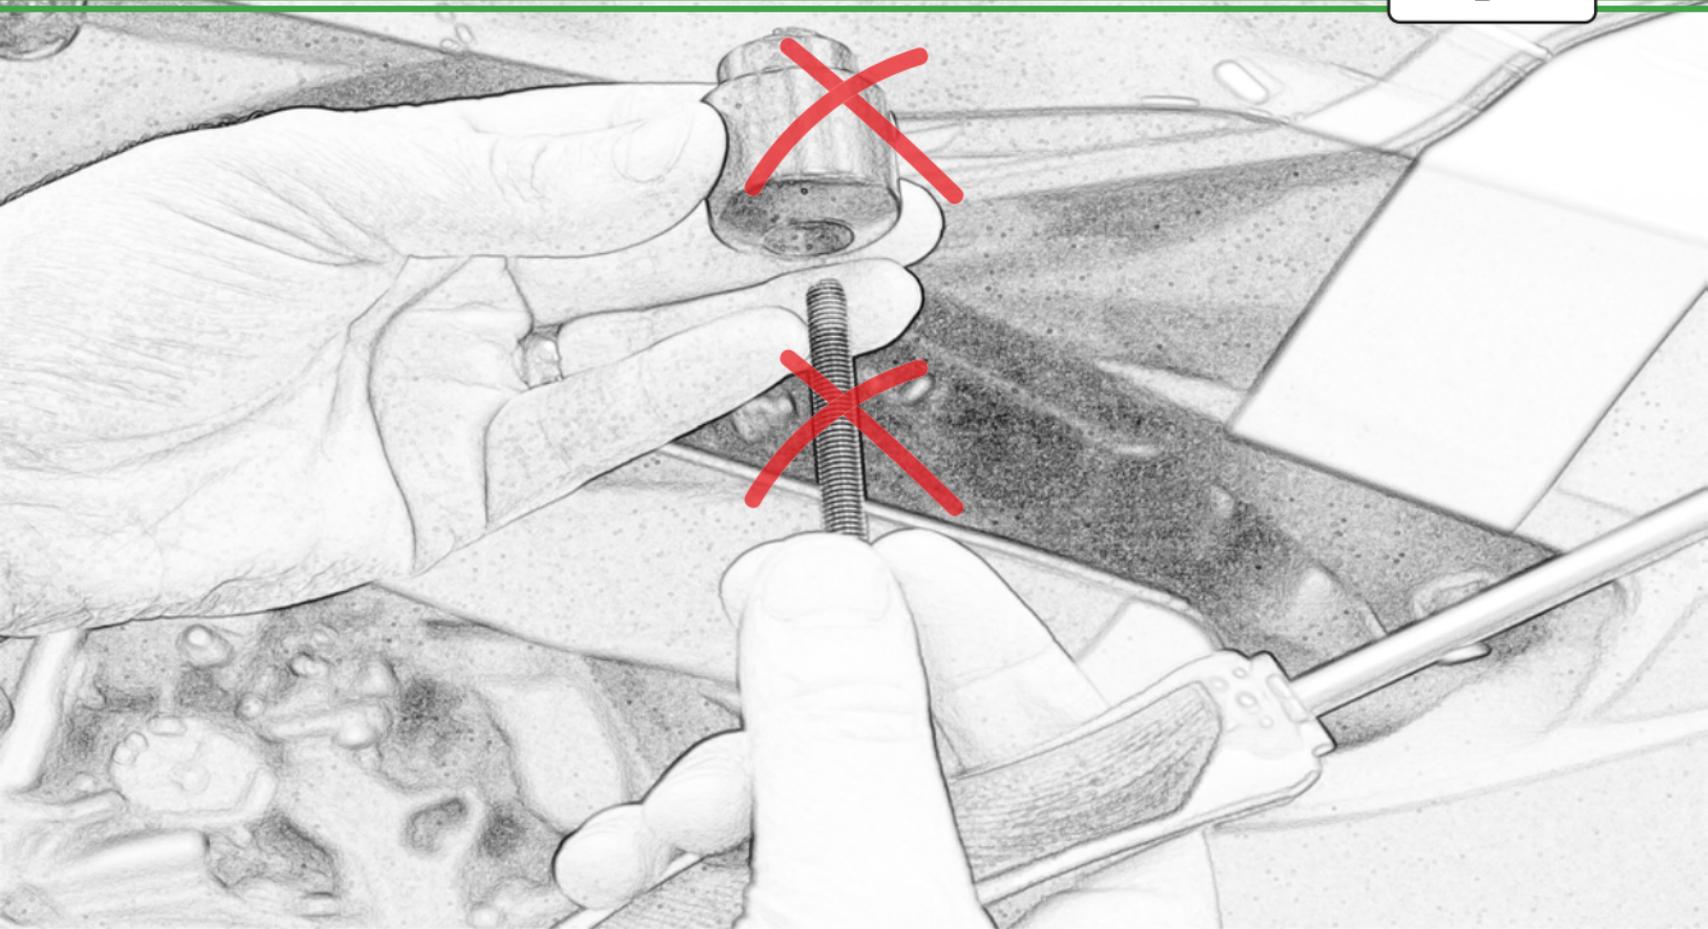


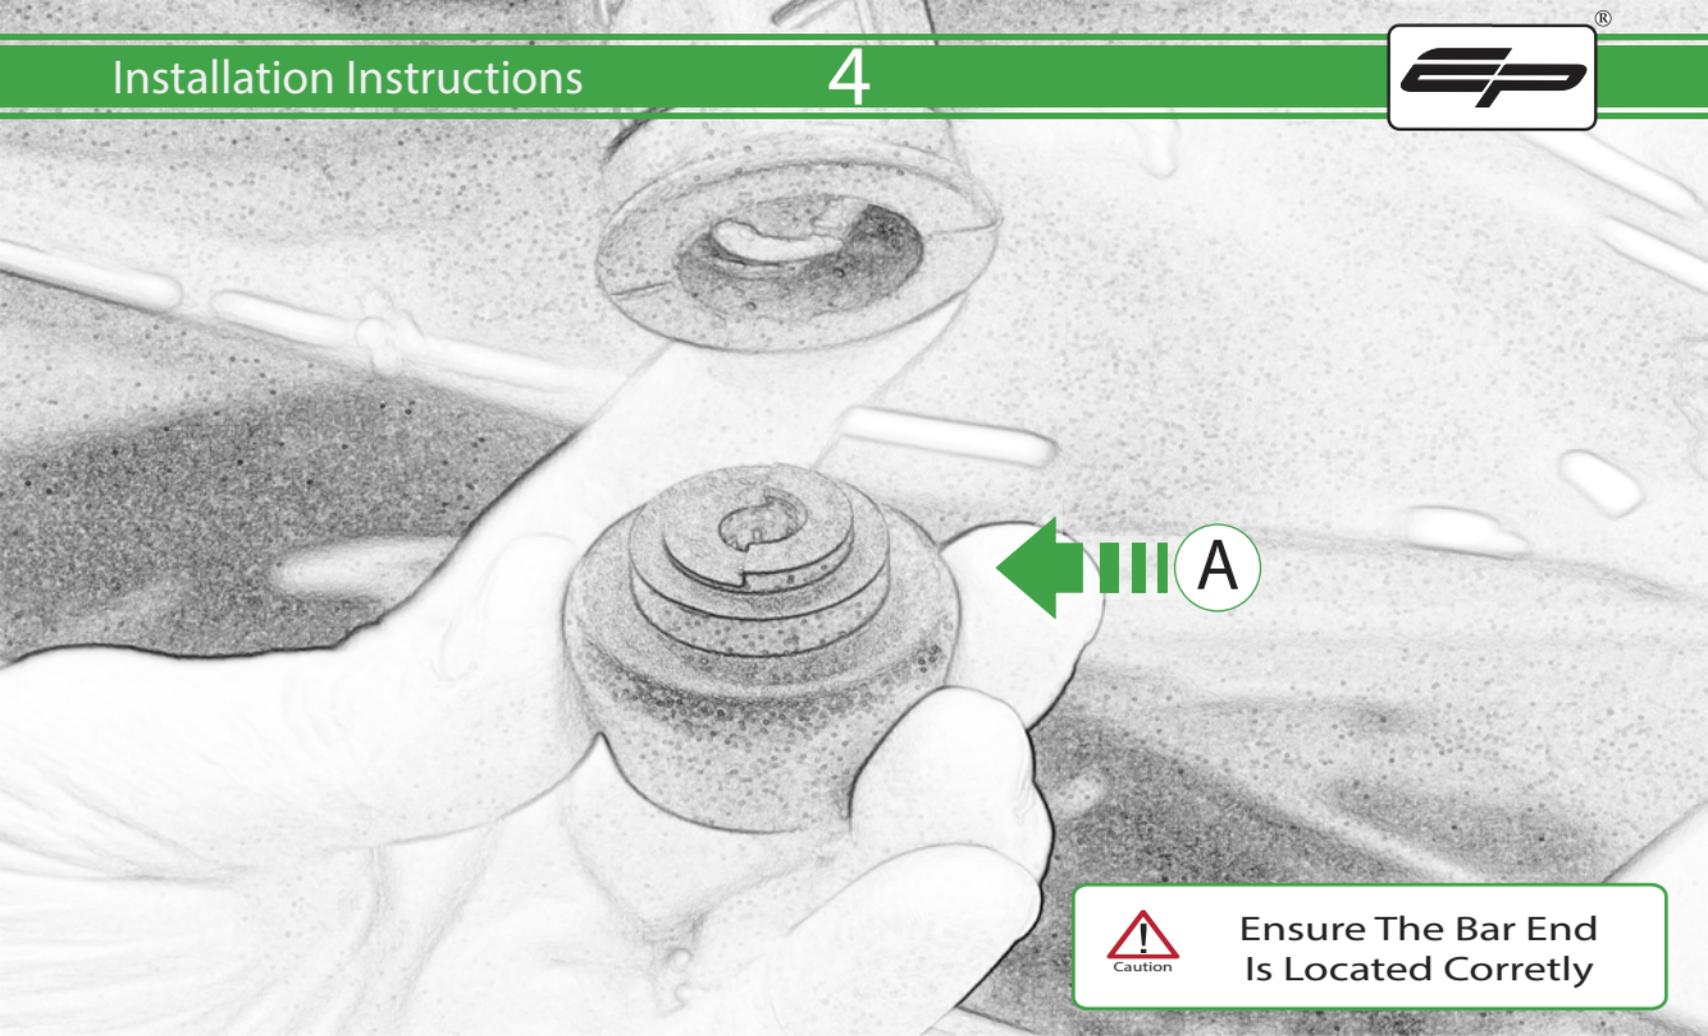


Caution

Ensure The Bar End
Is Located Corretly

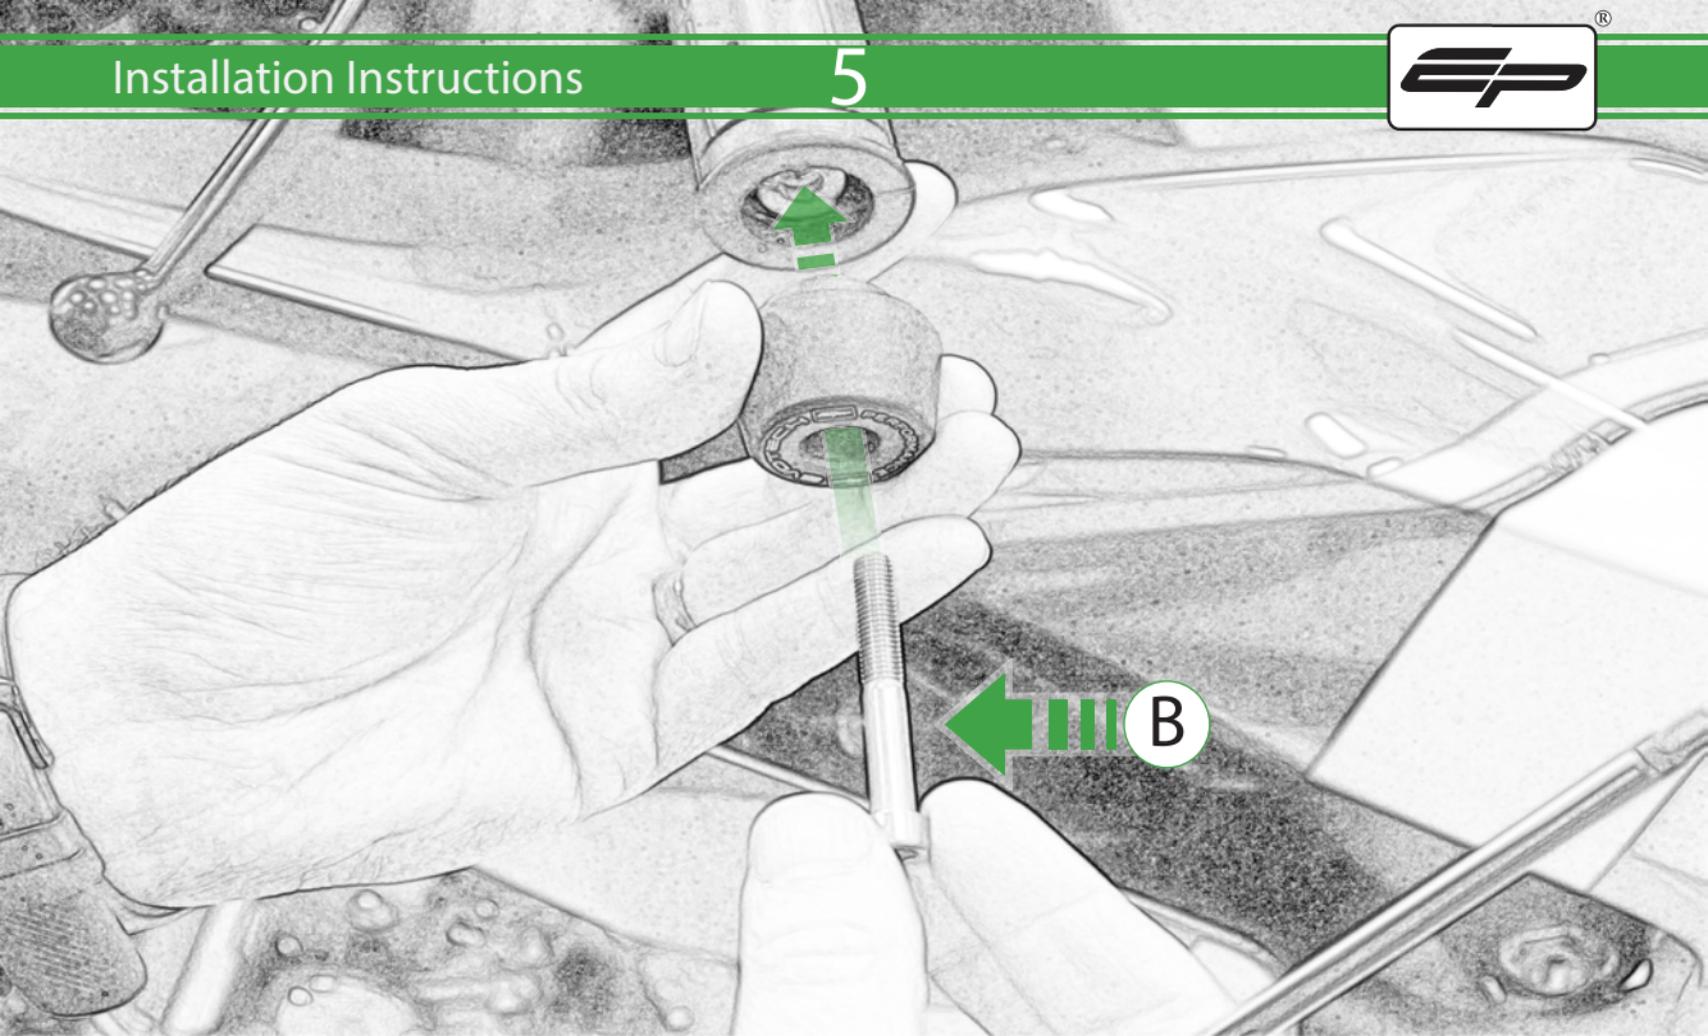

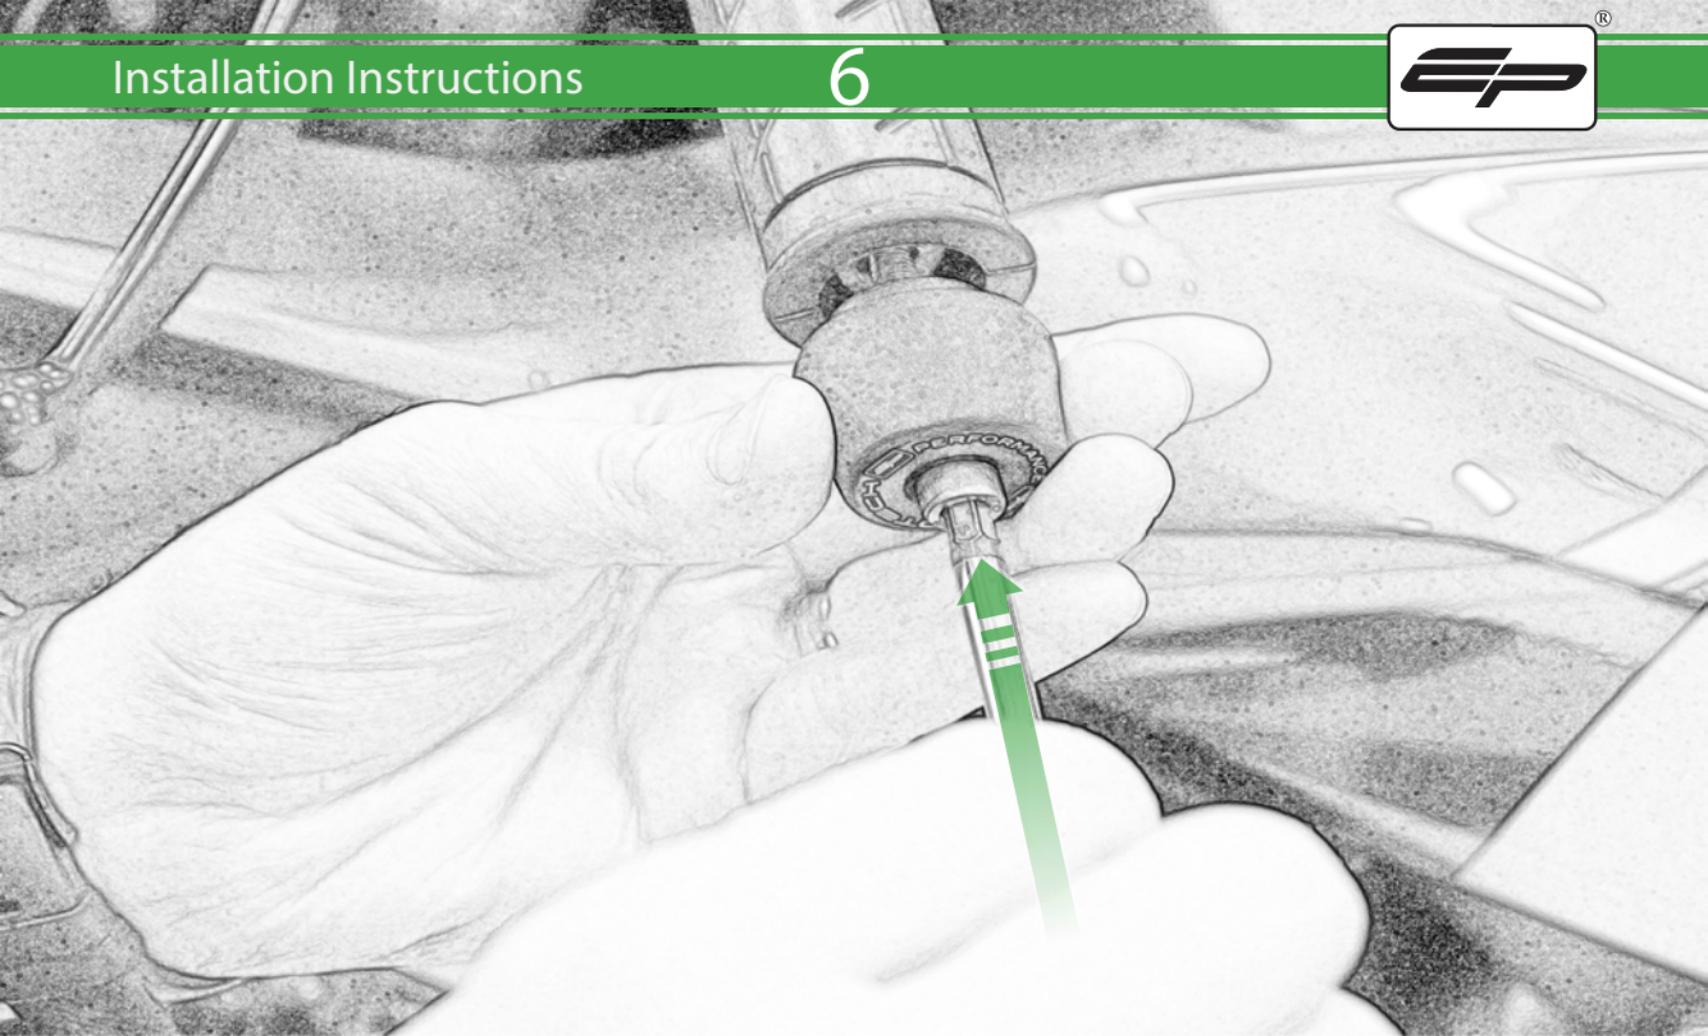


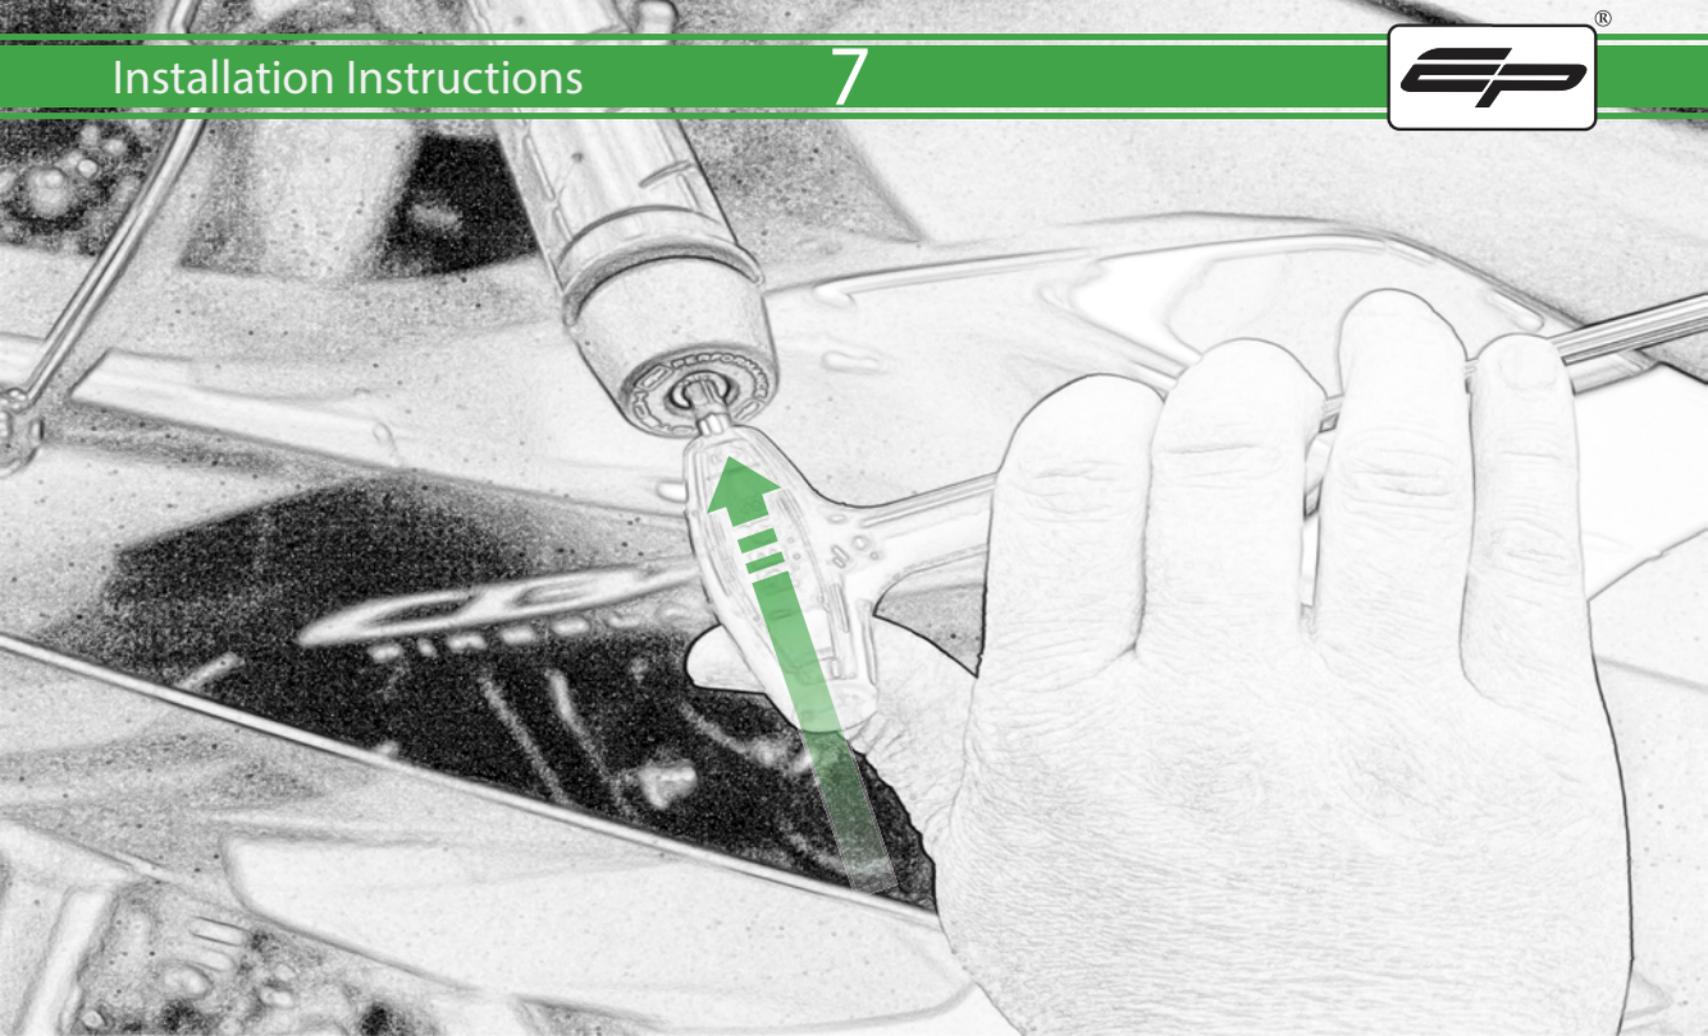











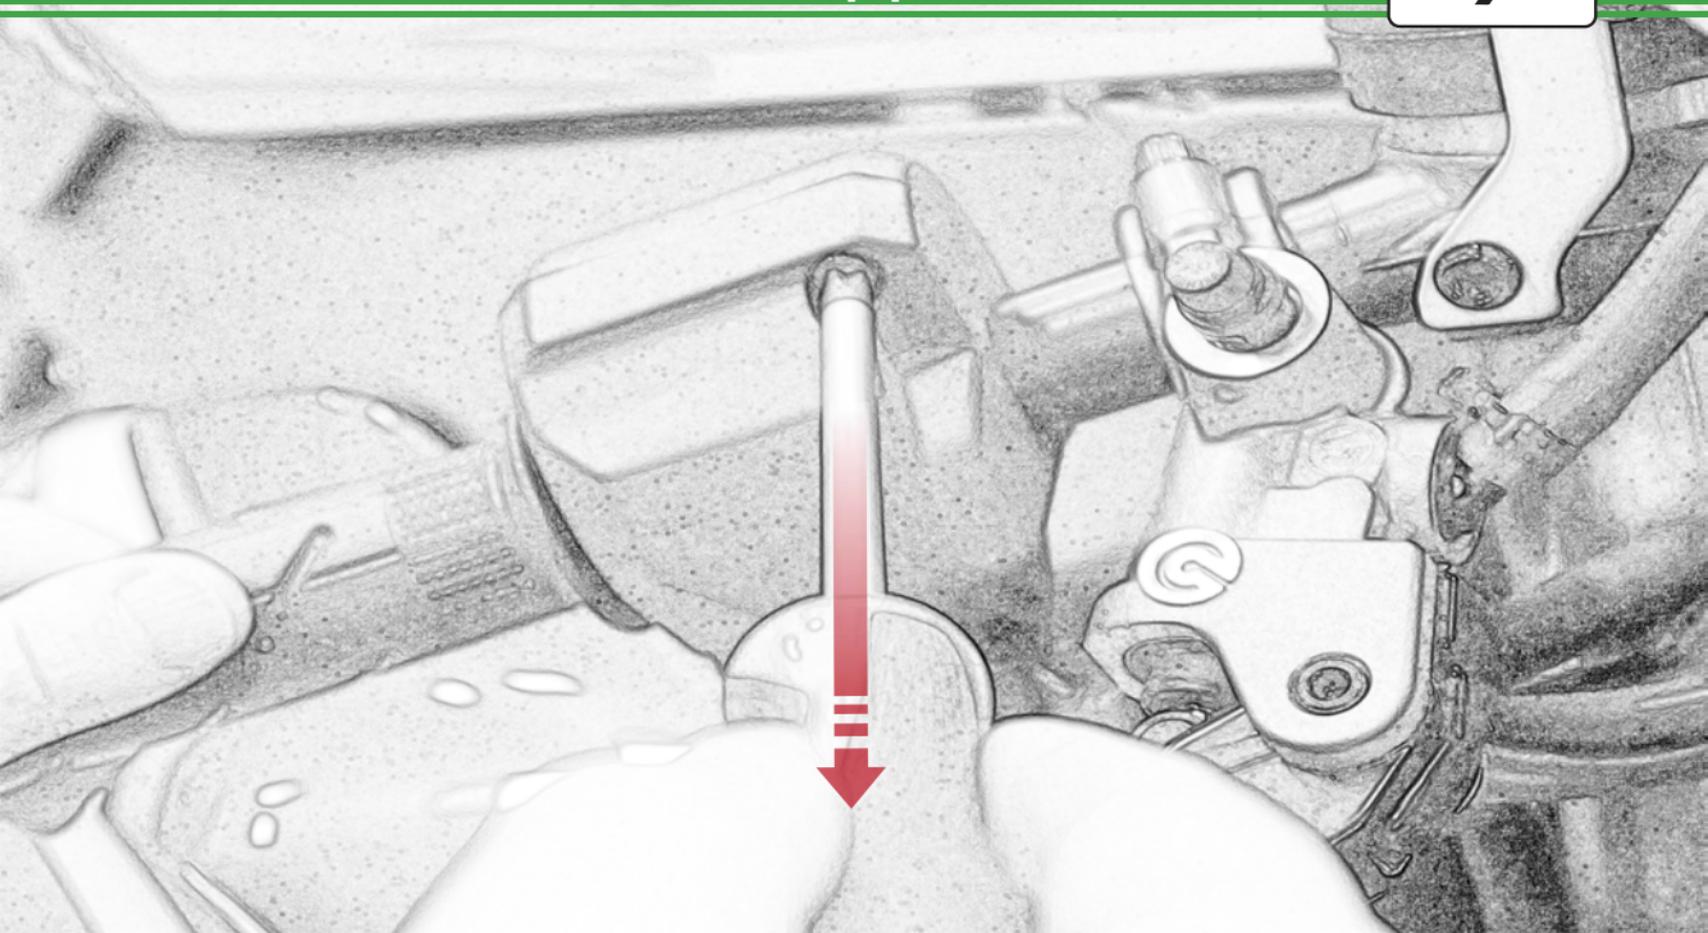

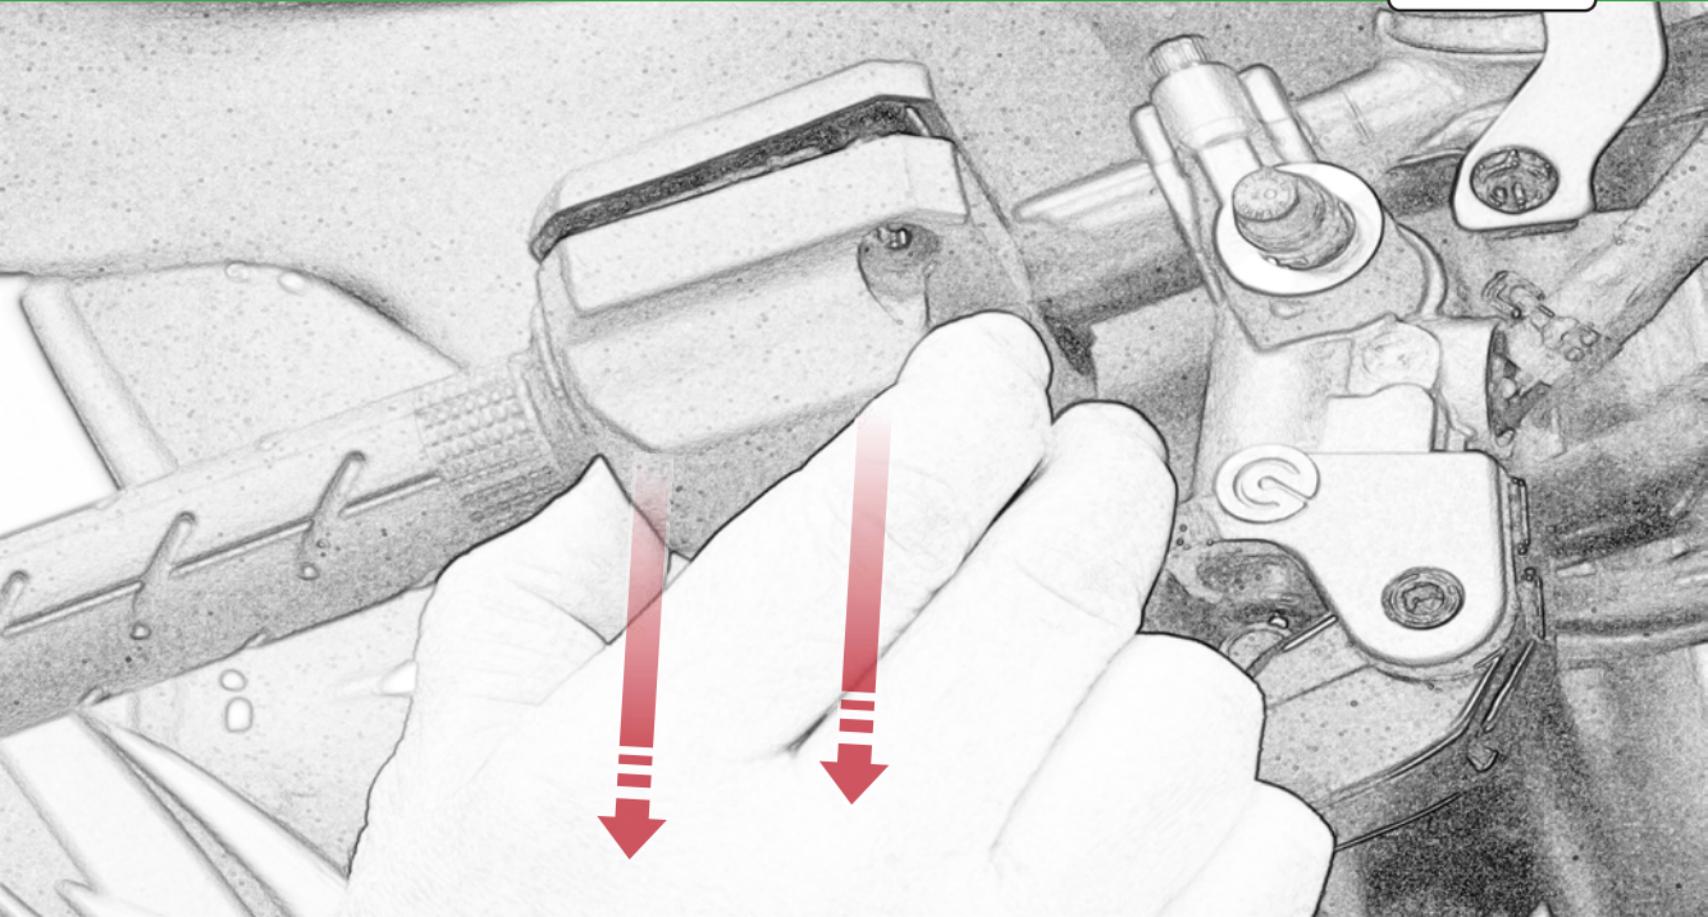

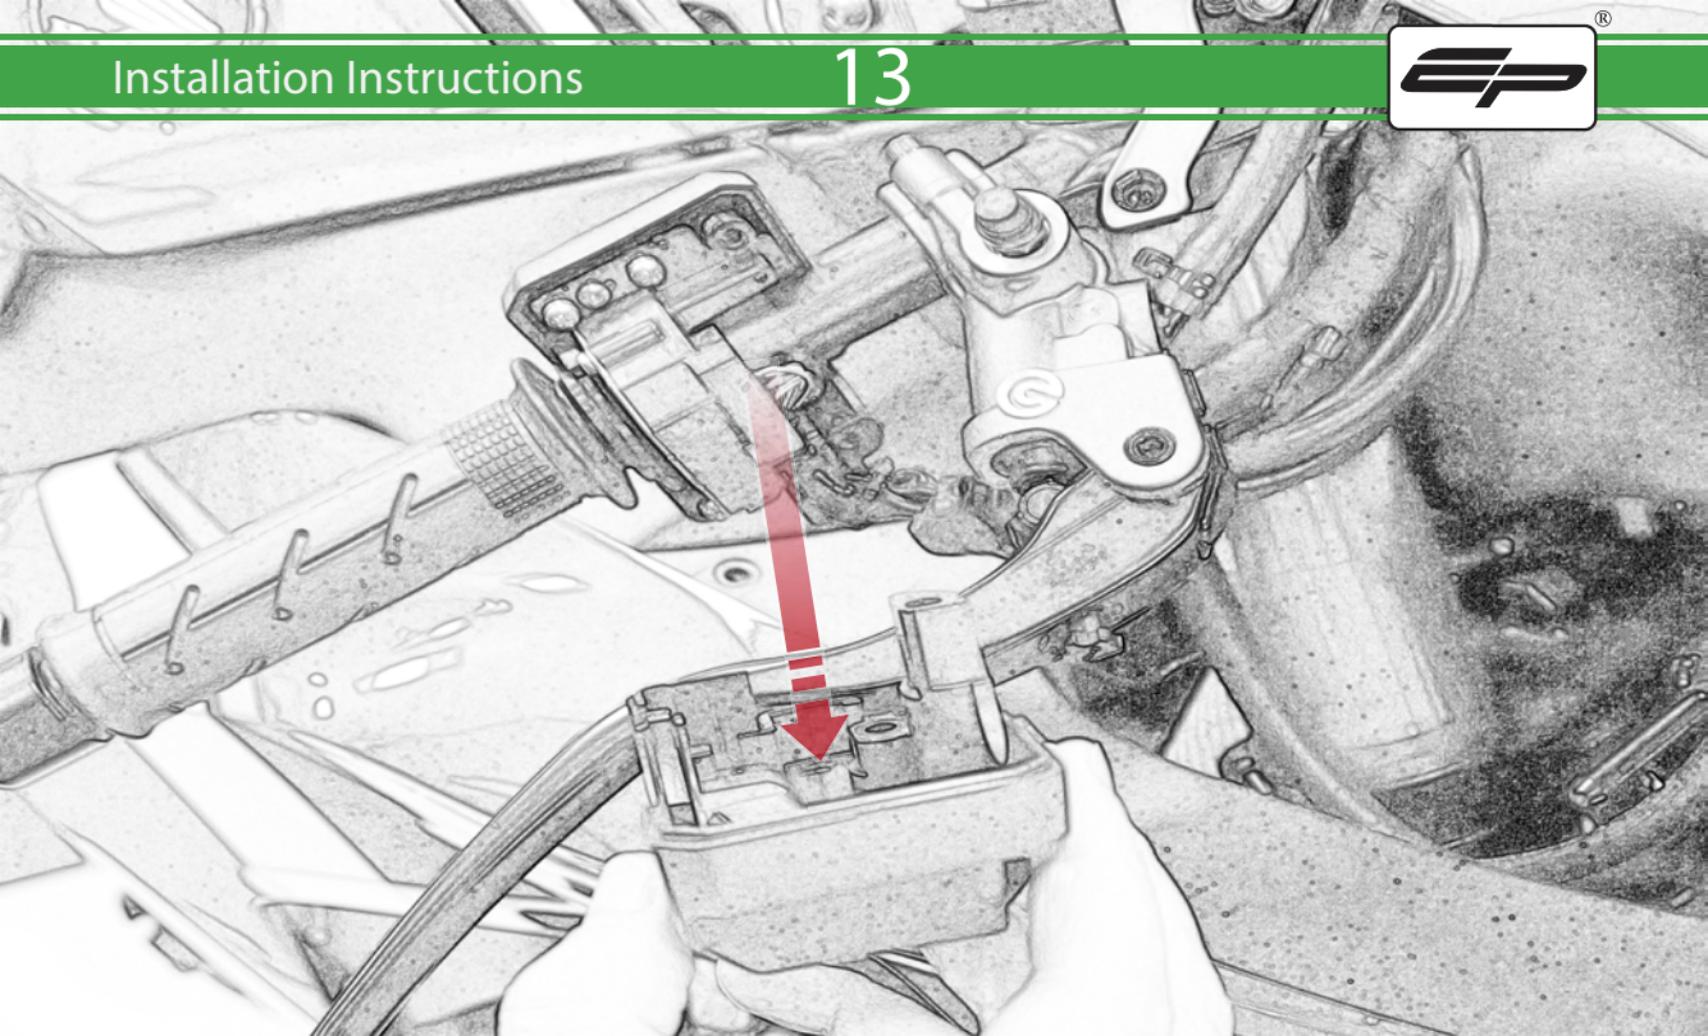


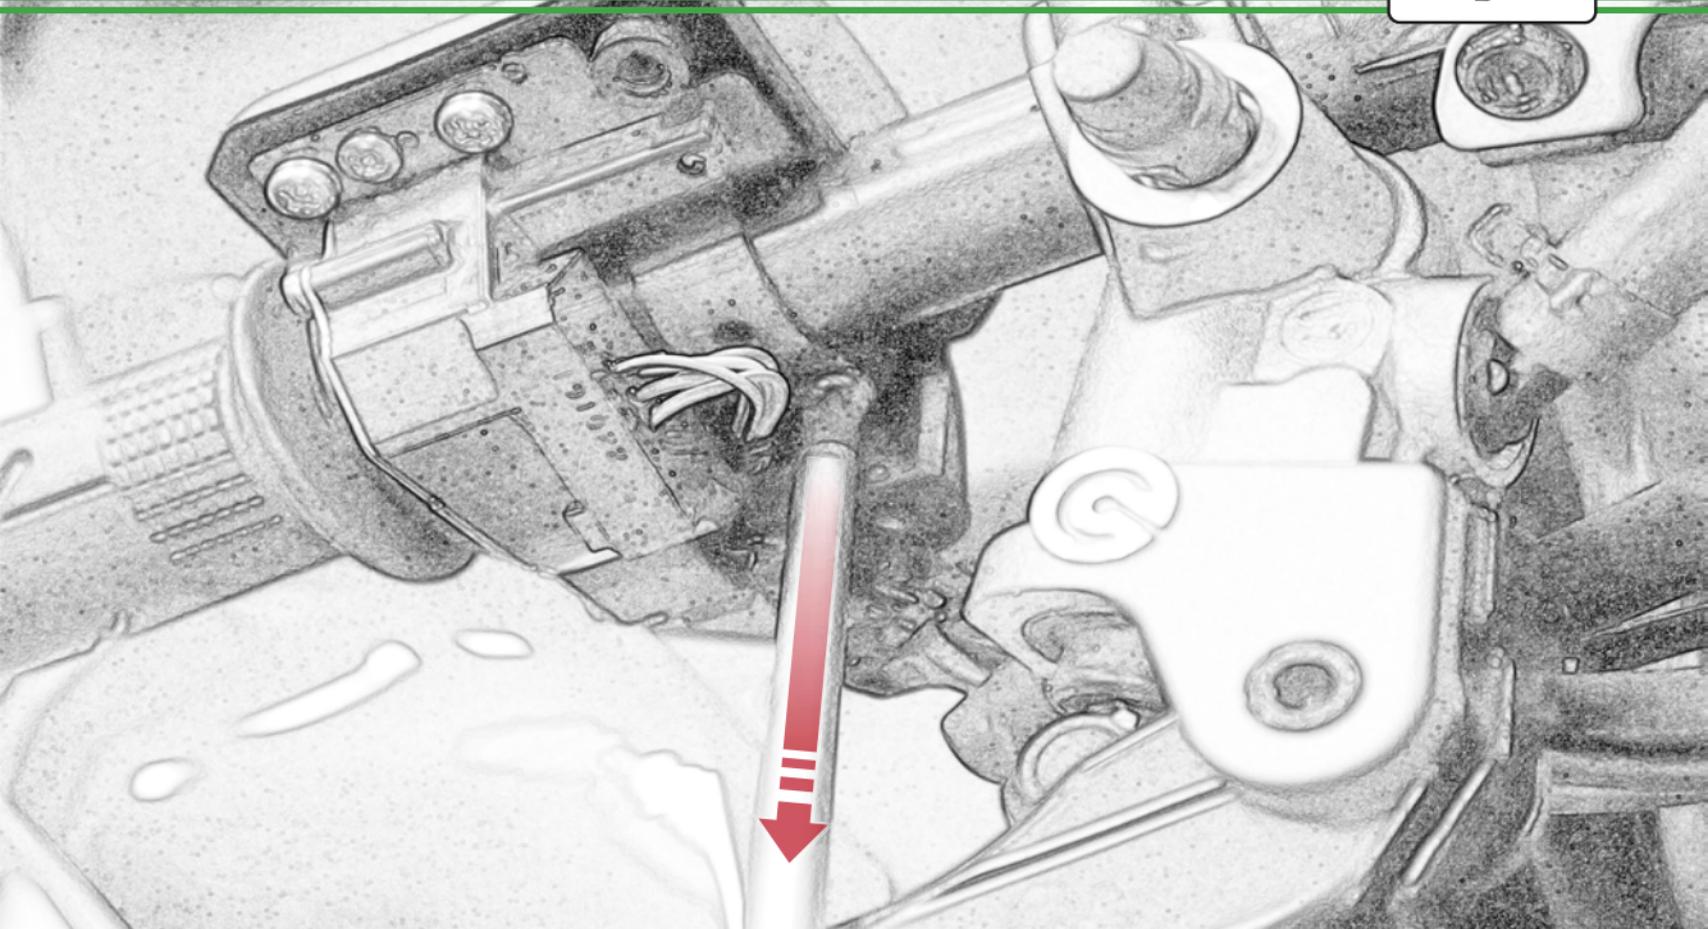


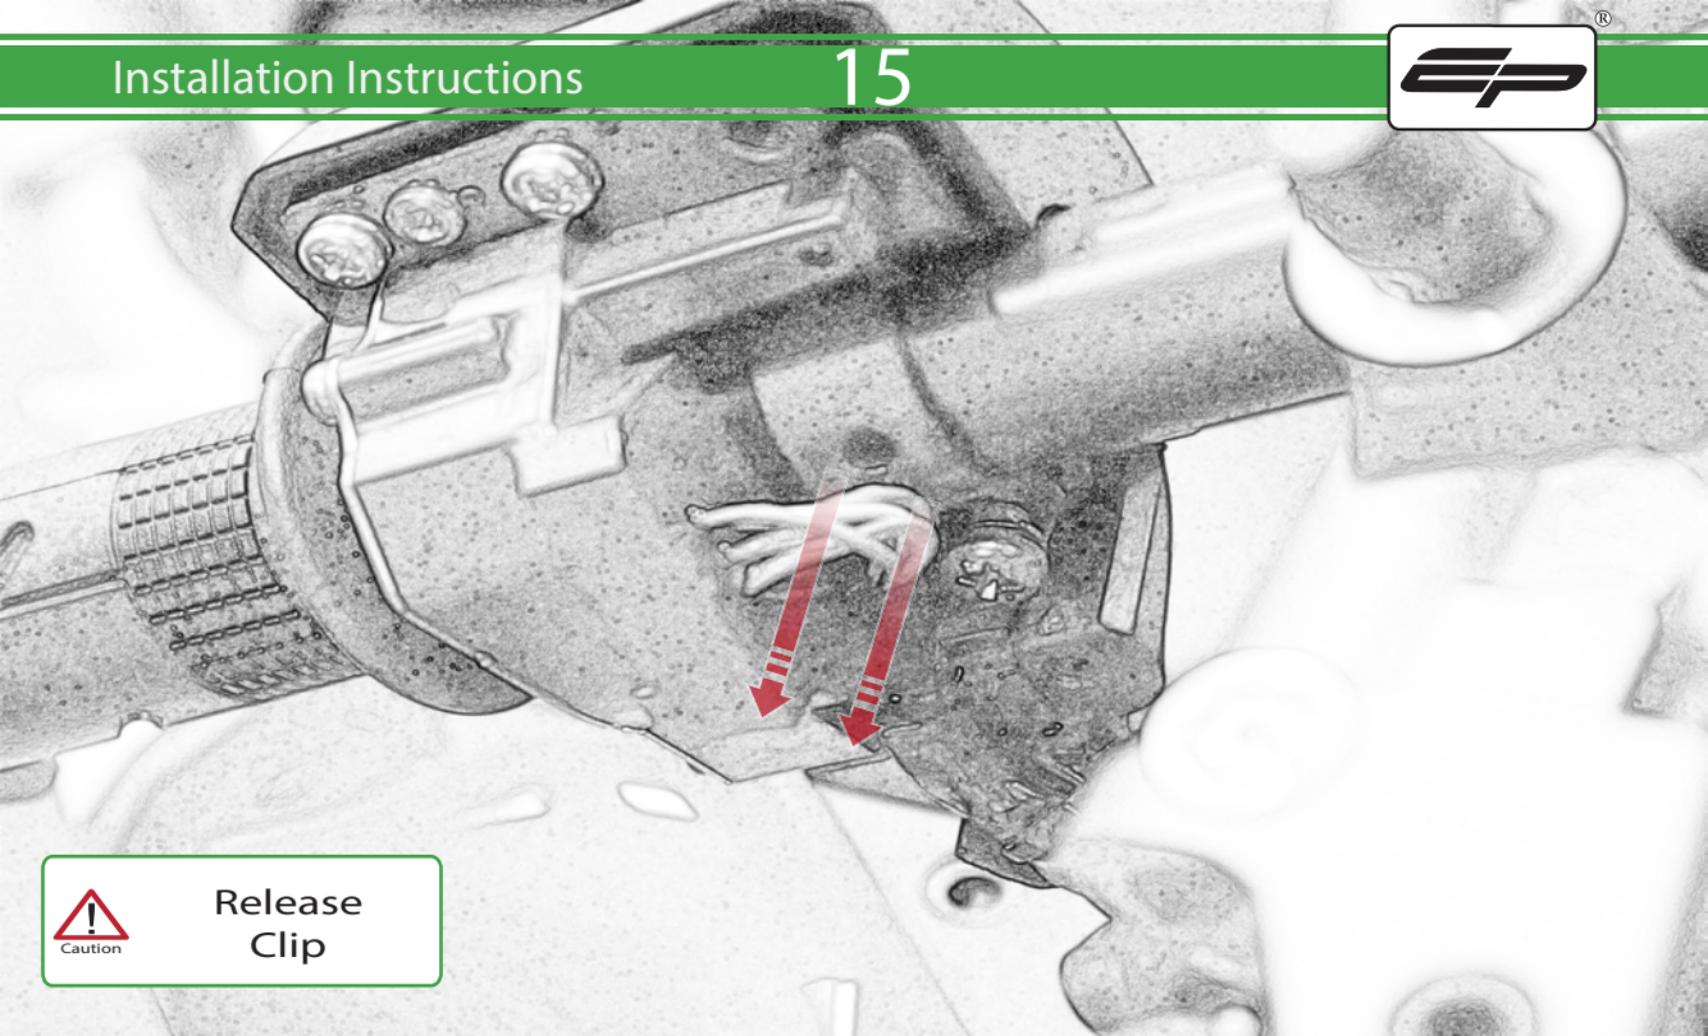

Caution


Release
Clip

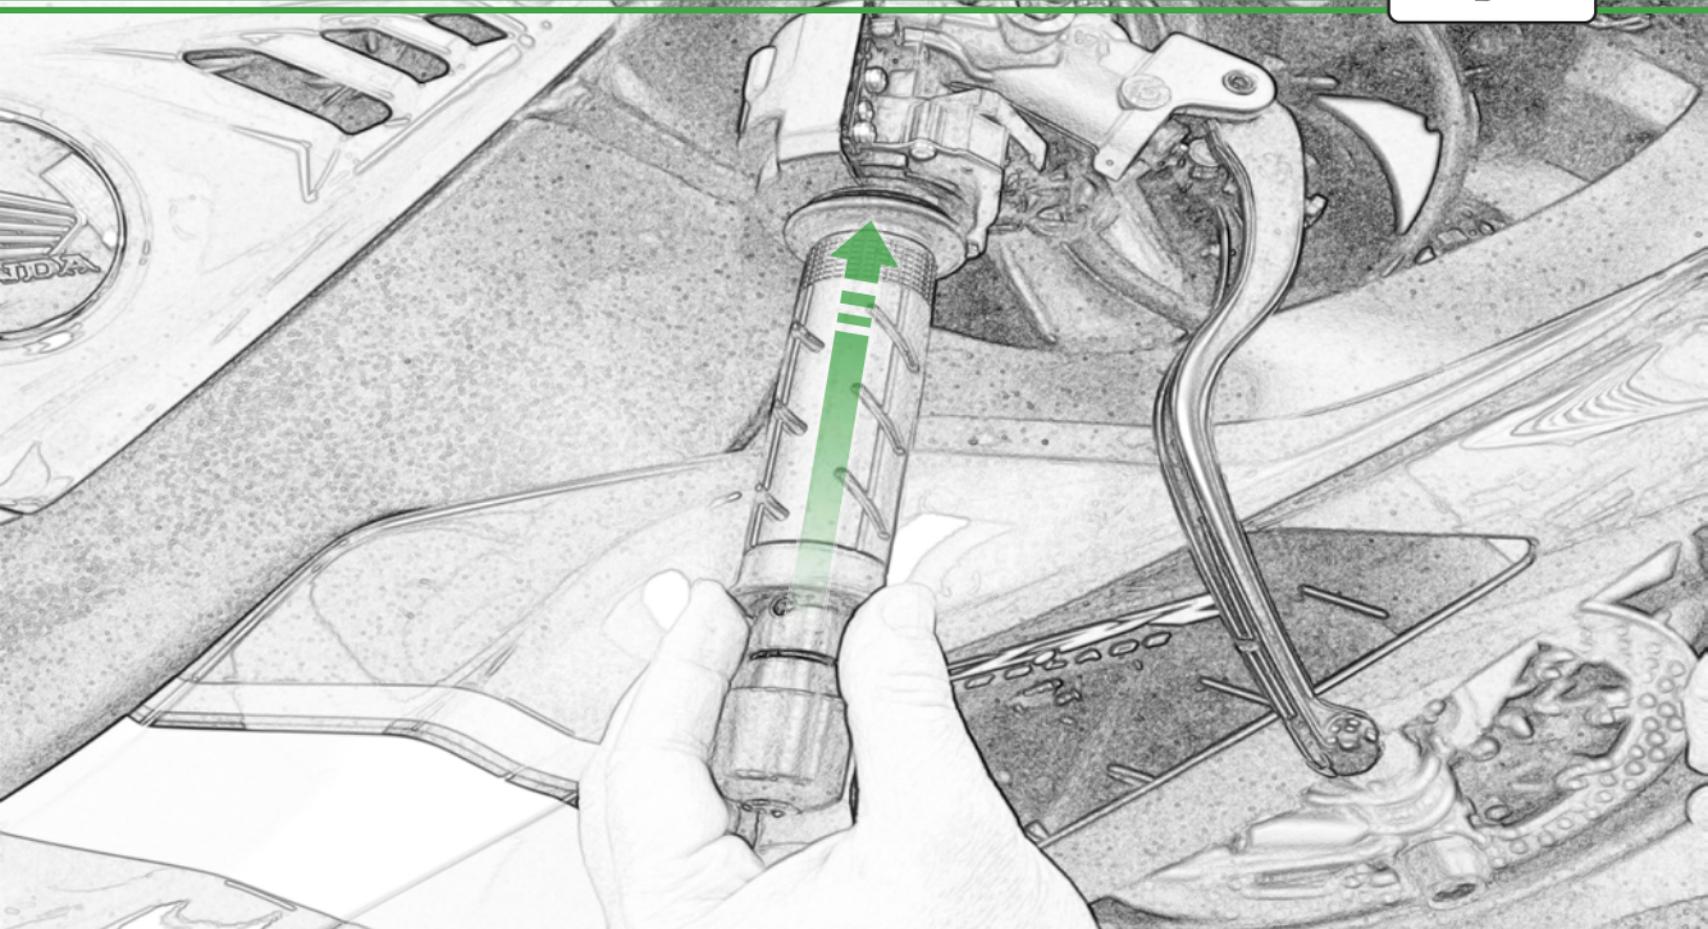

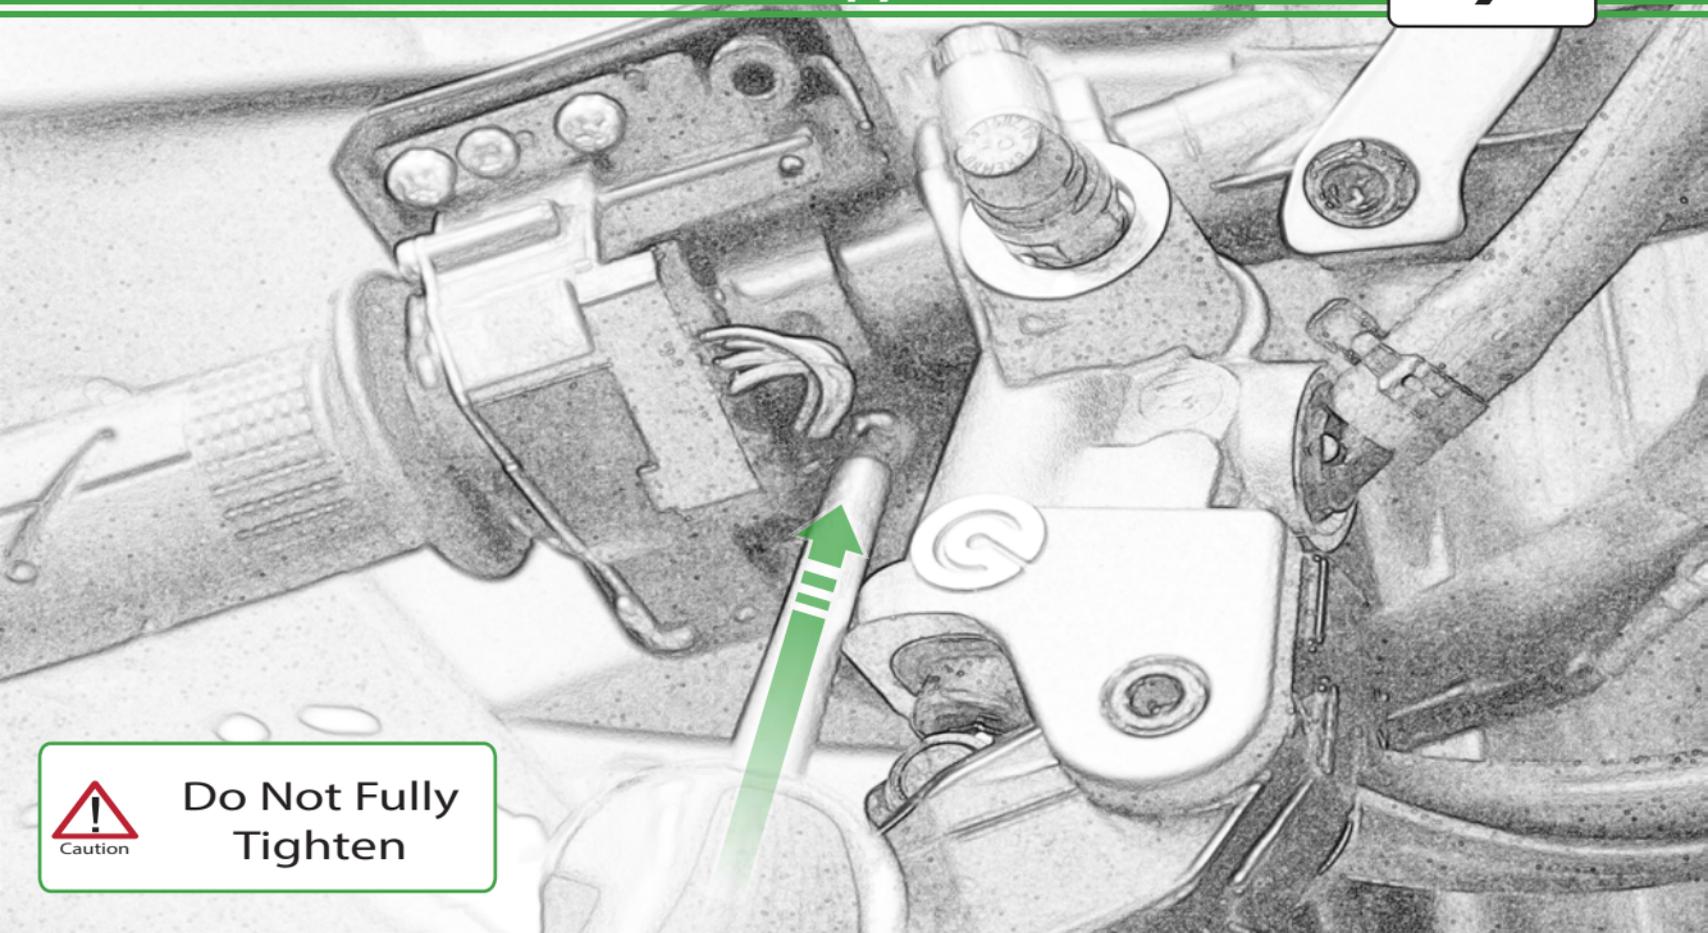



Caution


Do Not Fully
Tighten

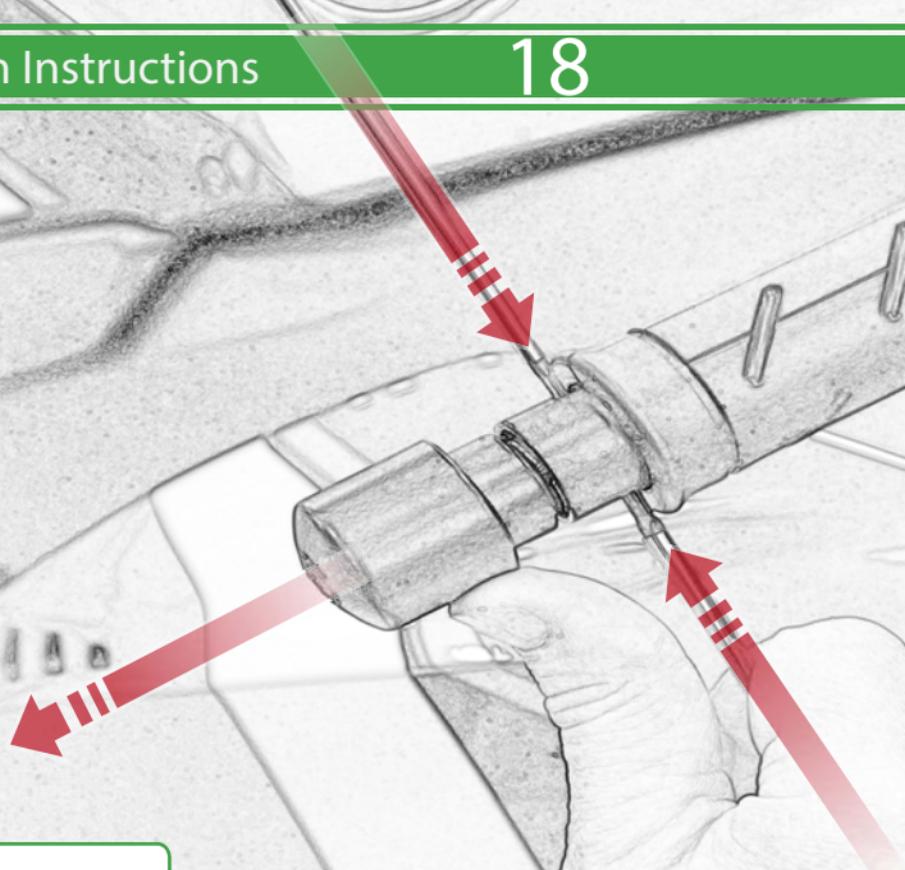



Caution
Compress Tabs
For Removal

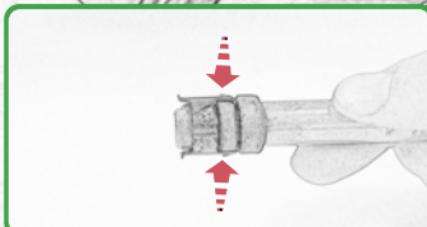


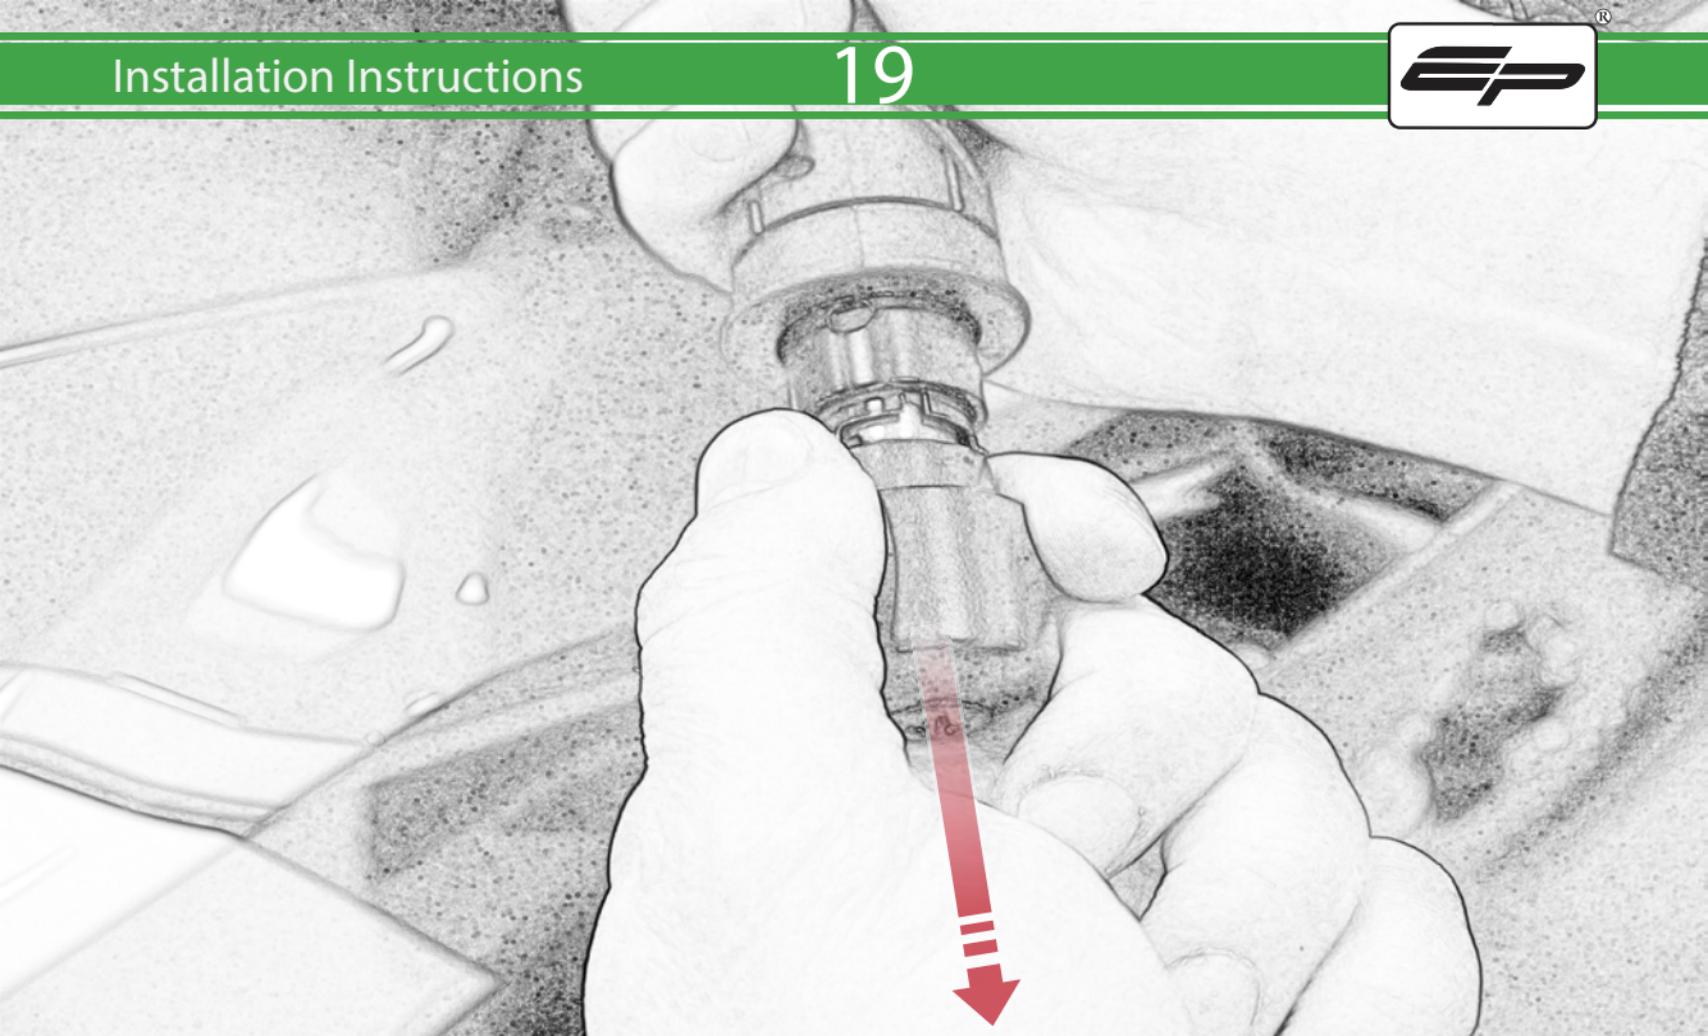

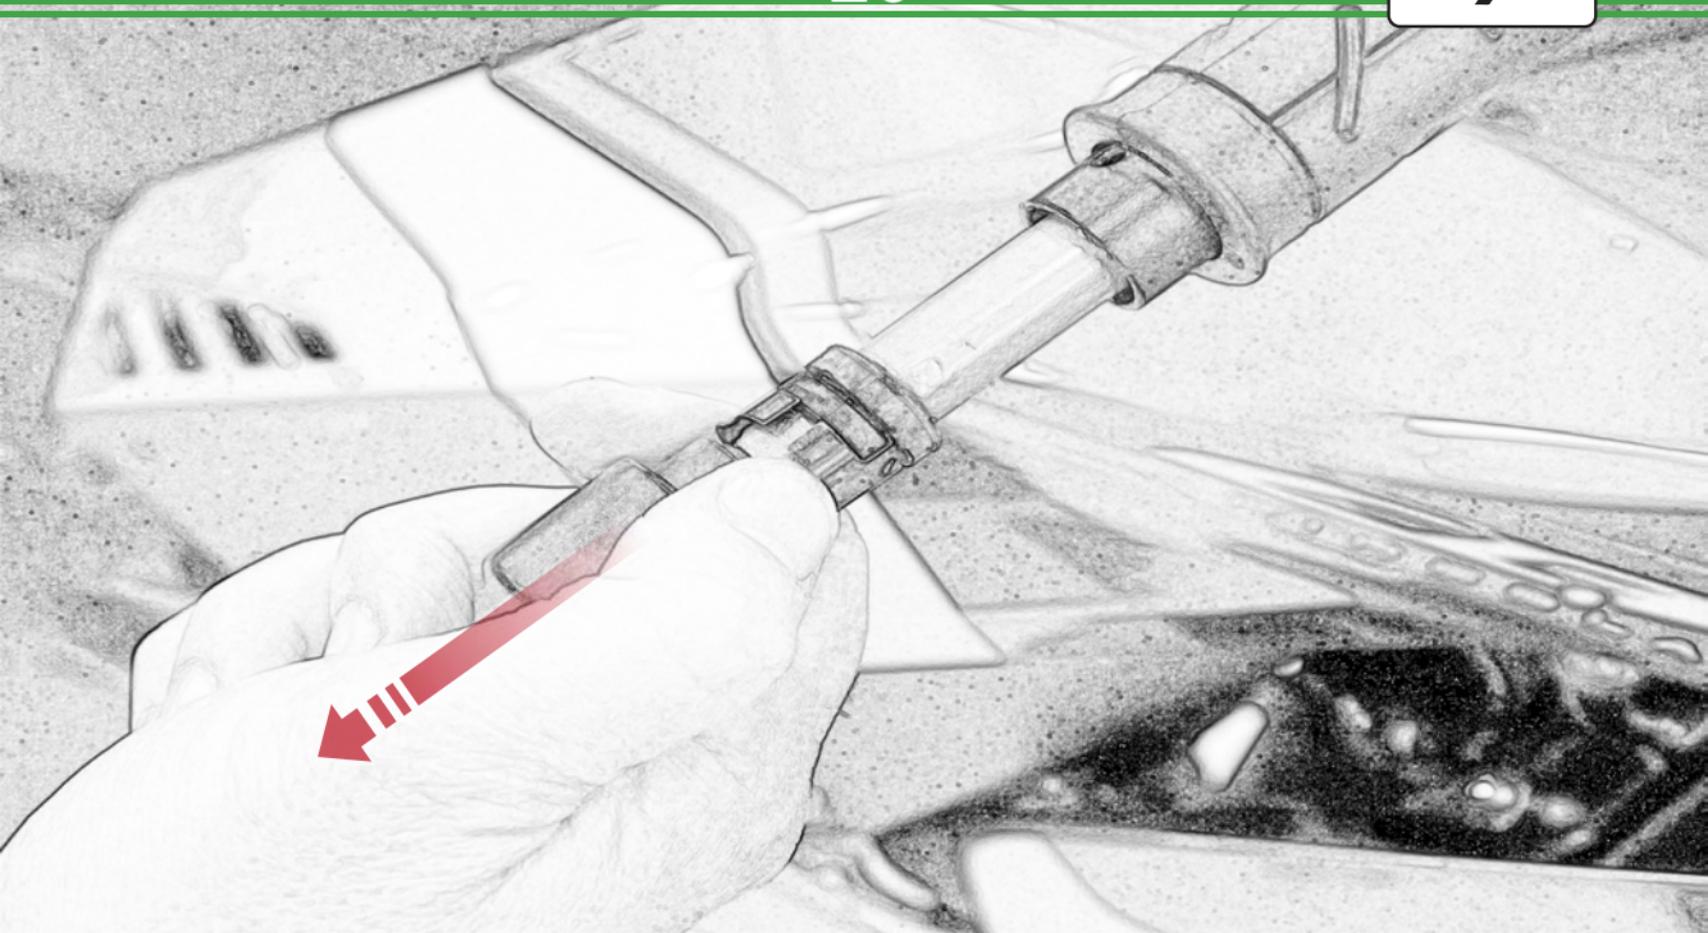


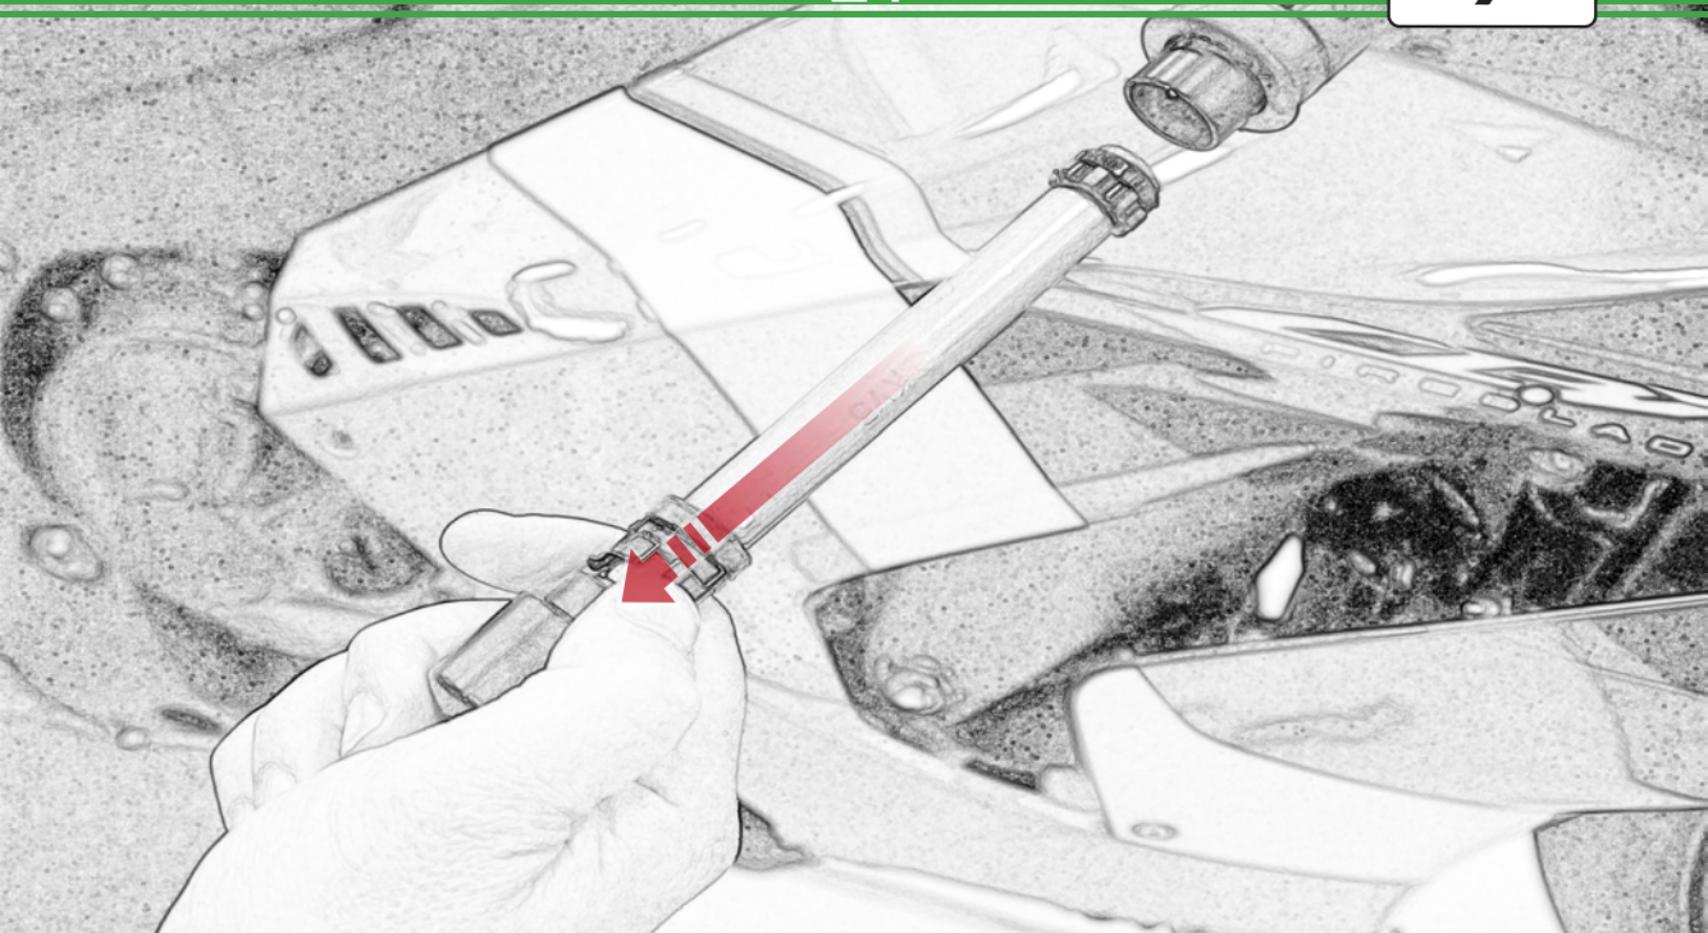


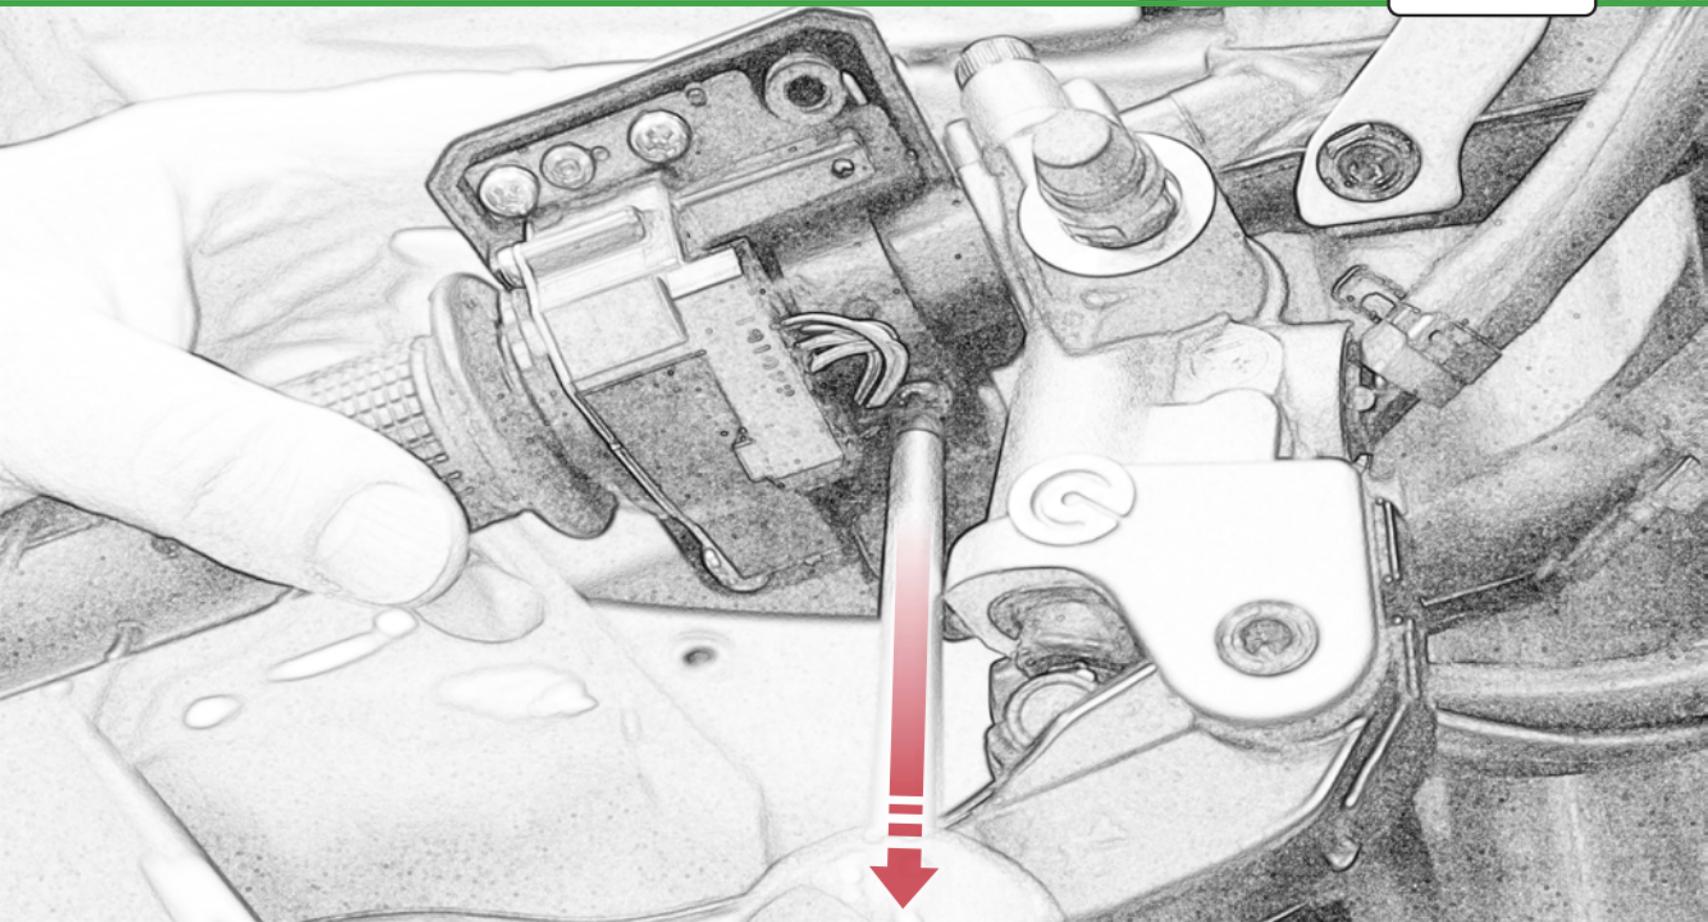

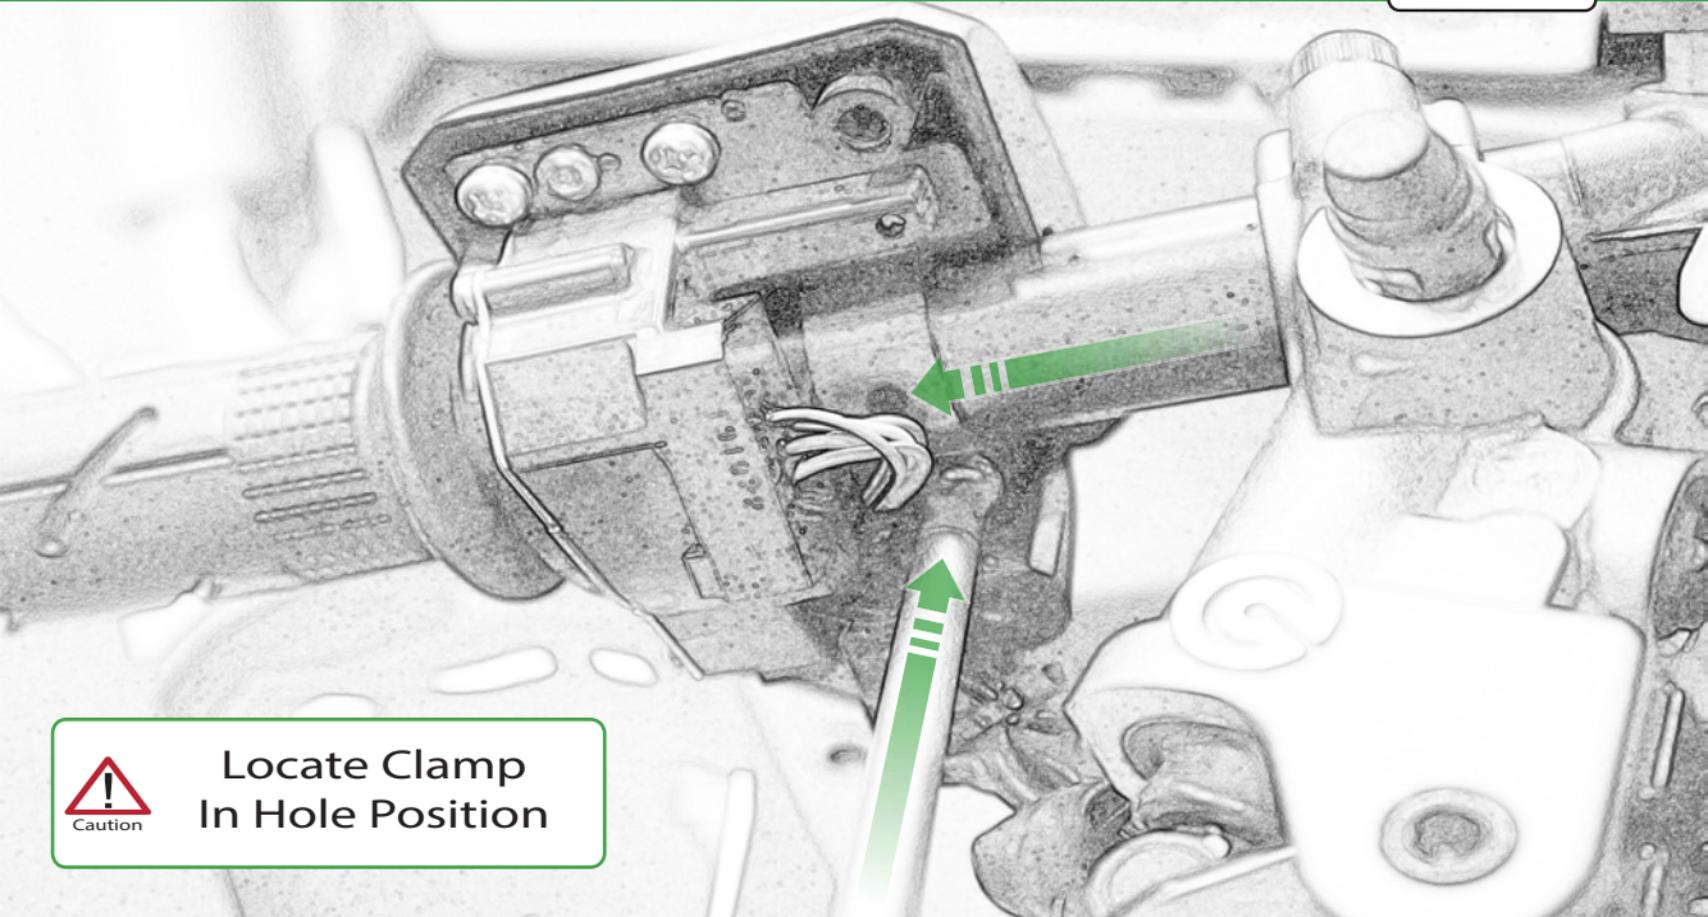



**Locate Clamp
In Hole Position**

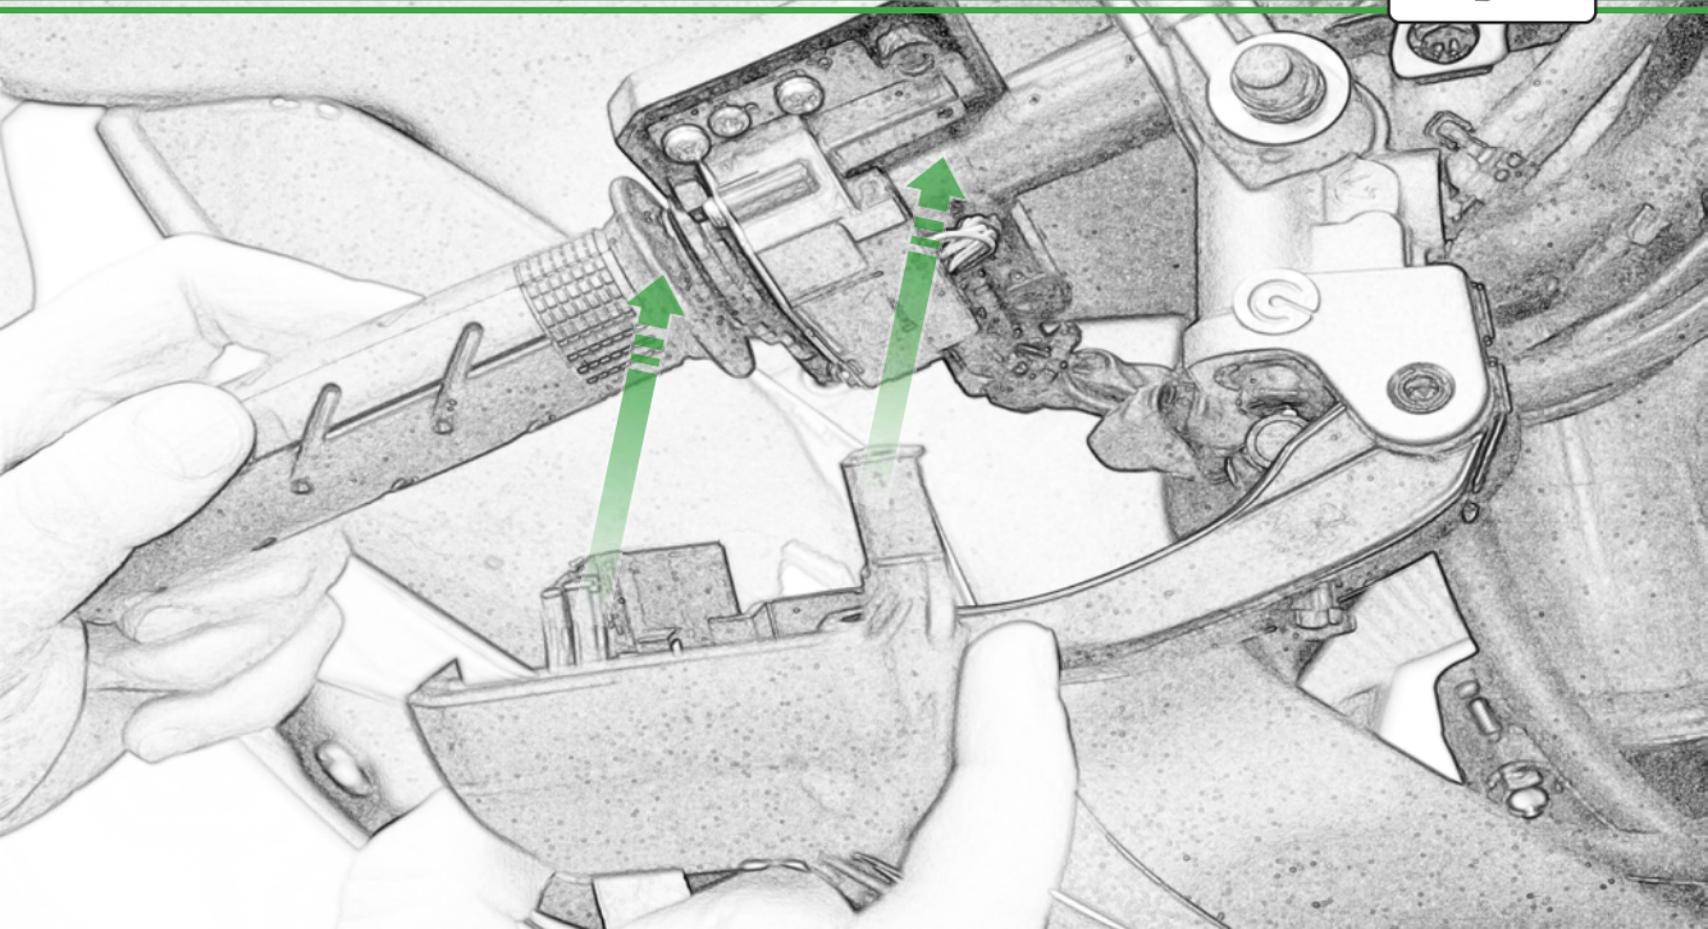


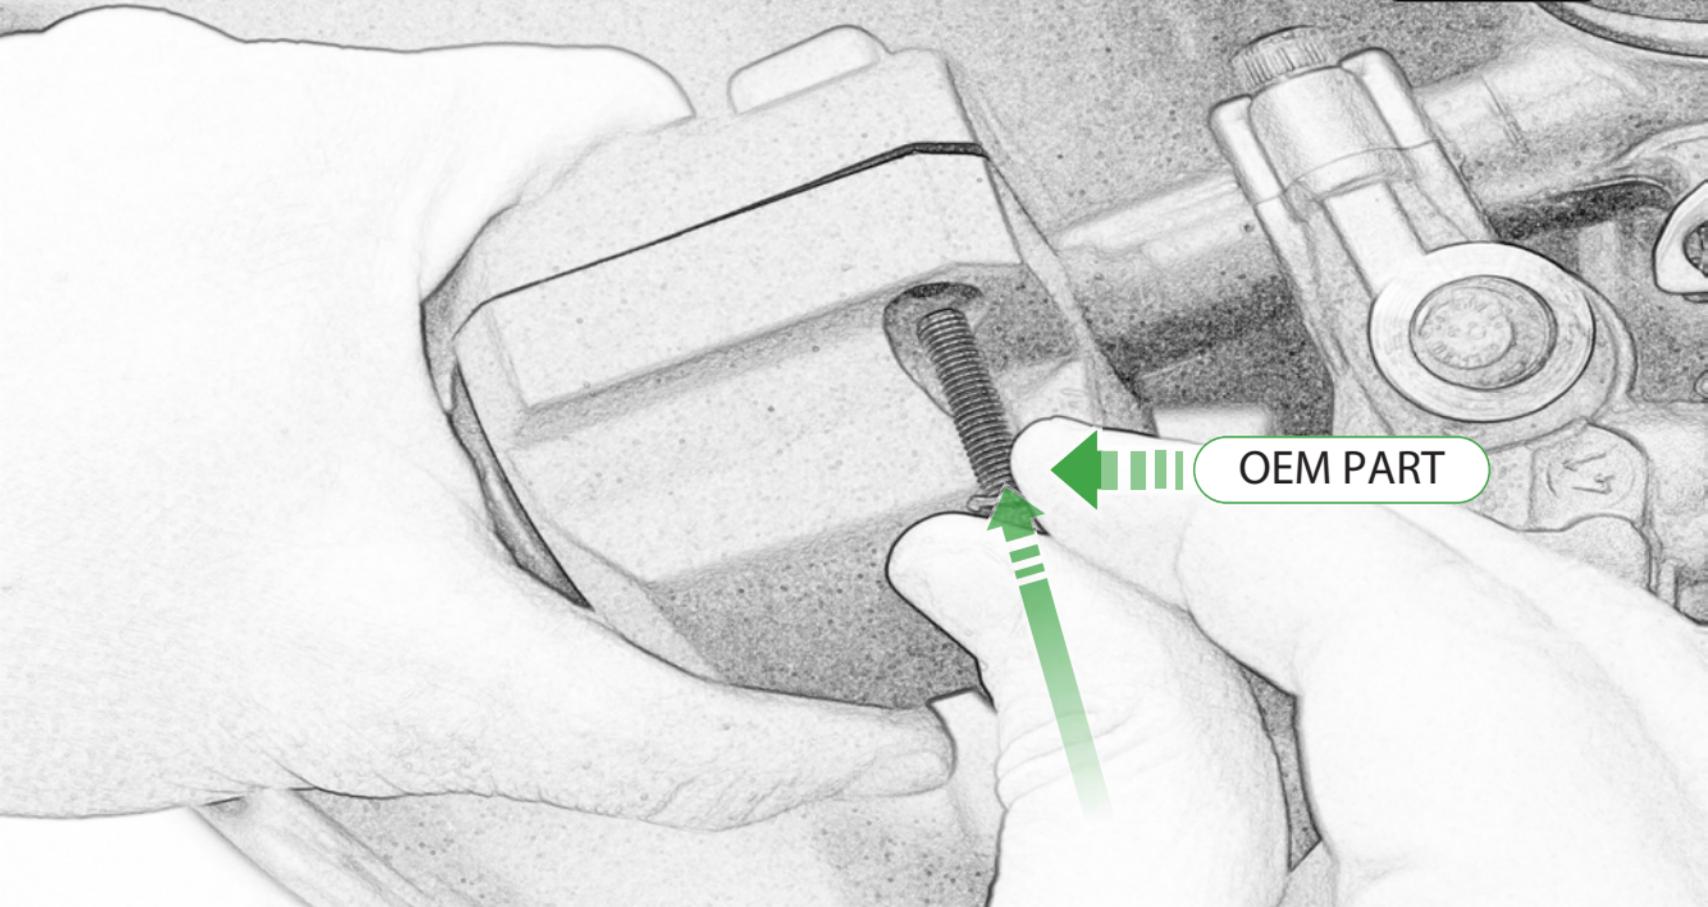


OEM PART

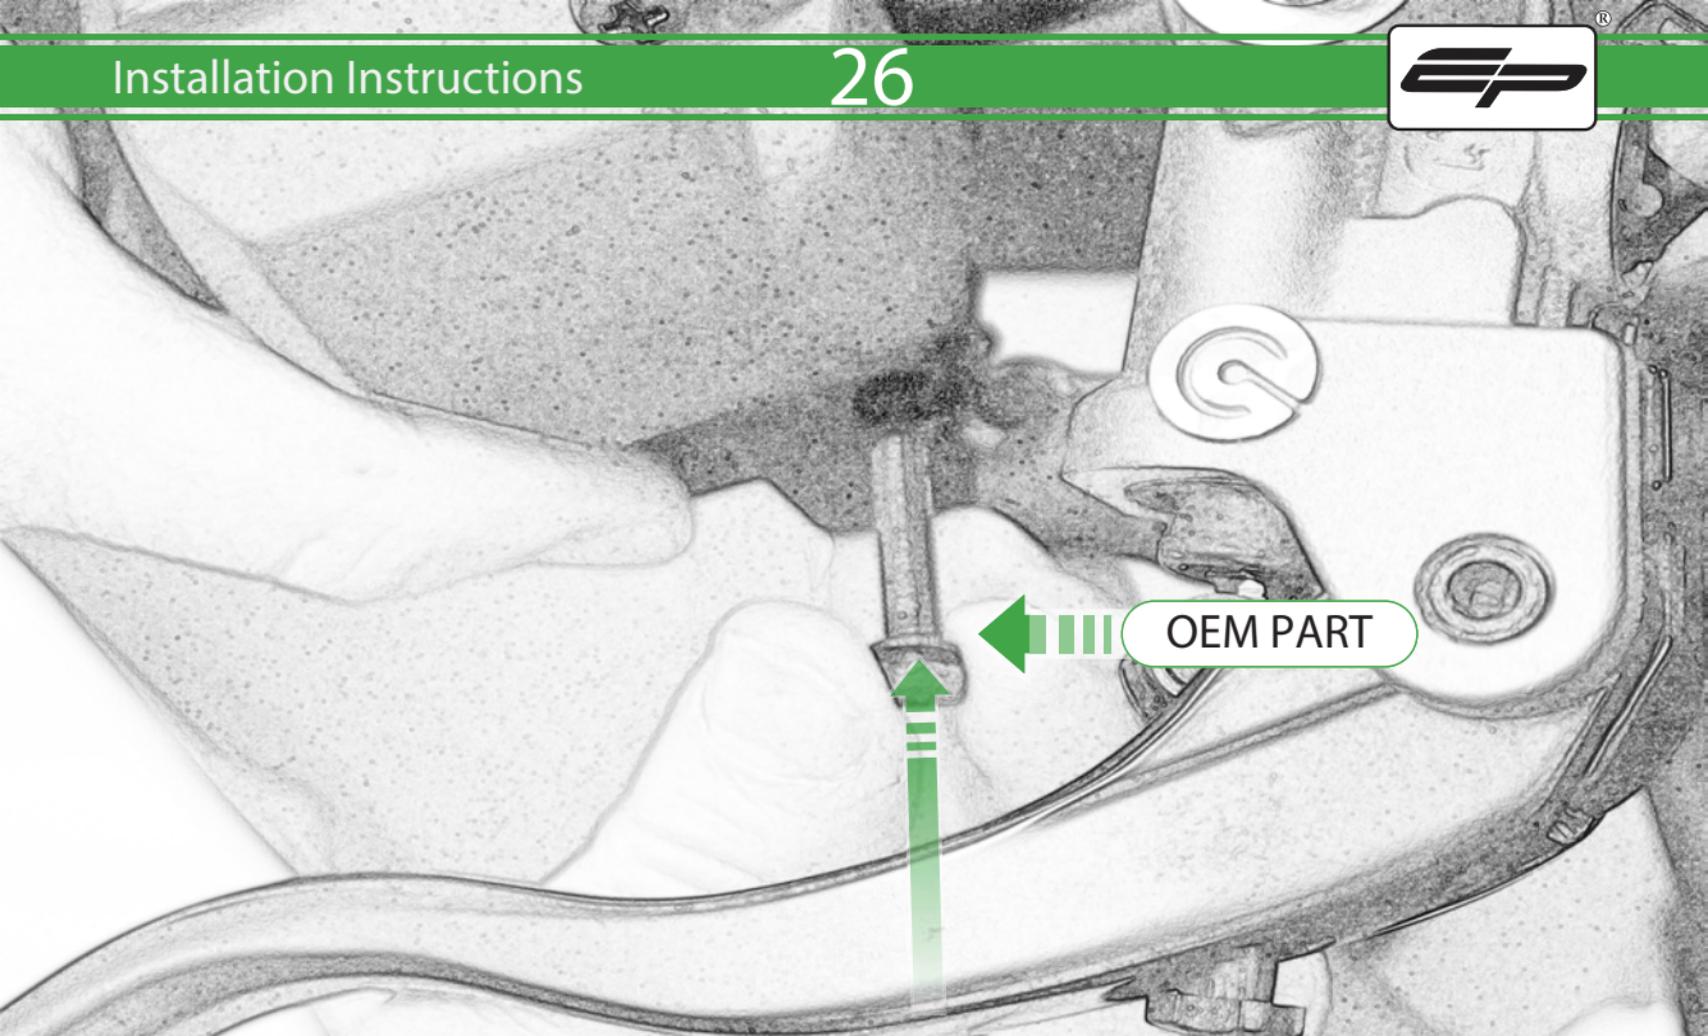

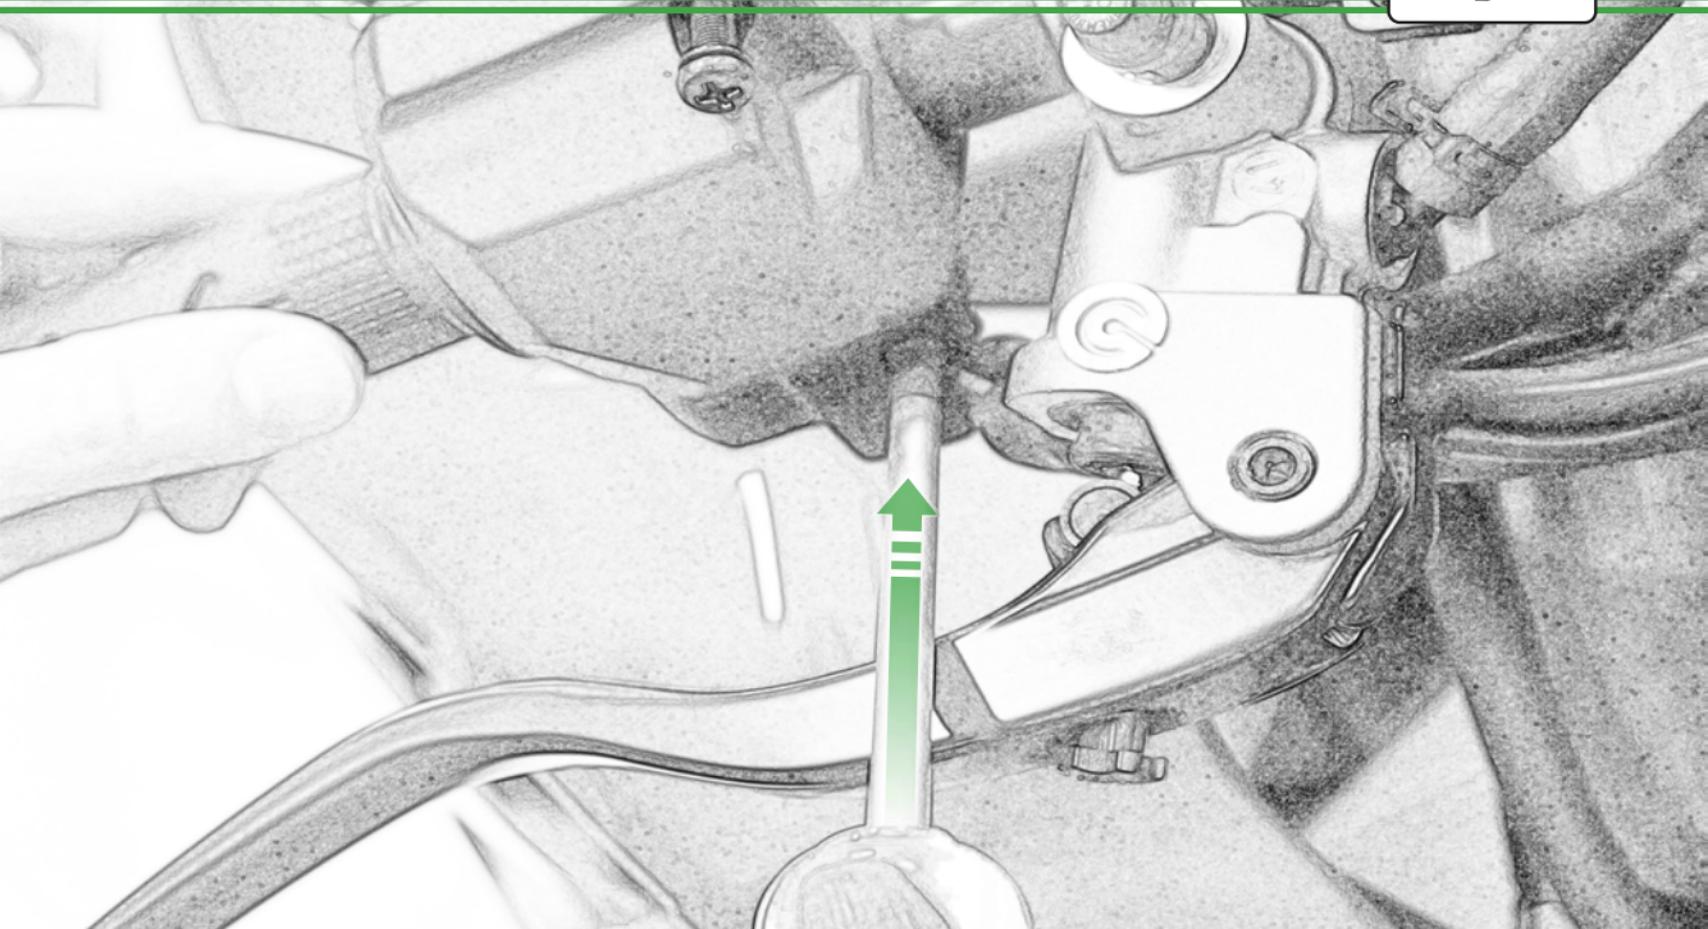

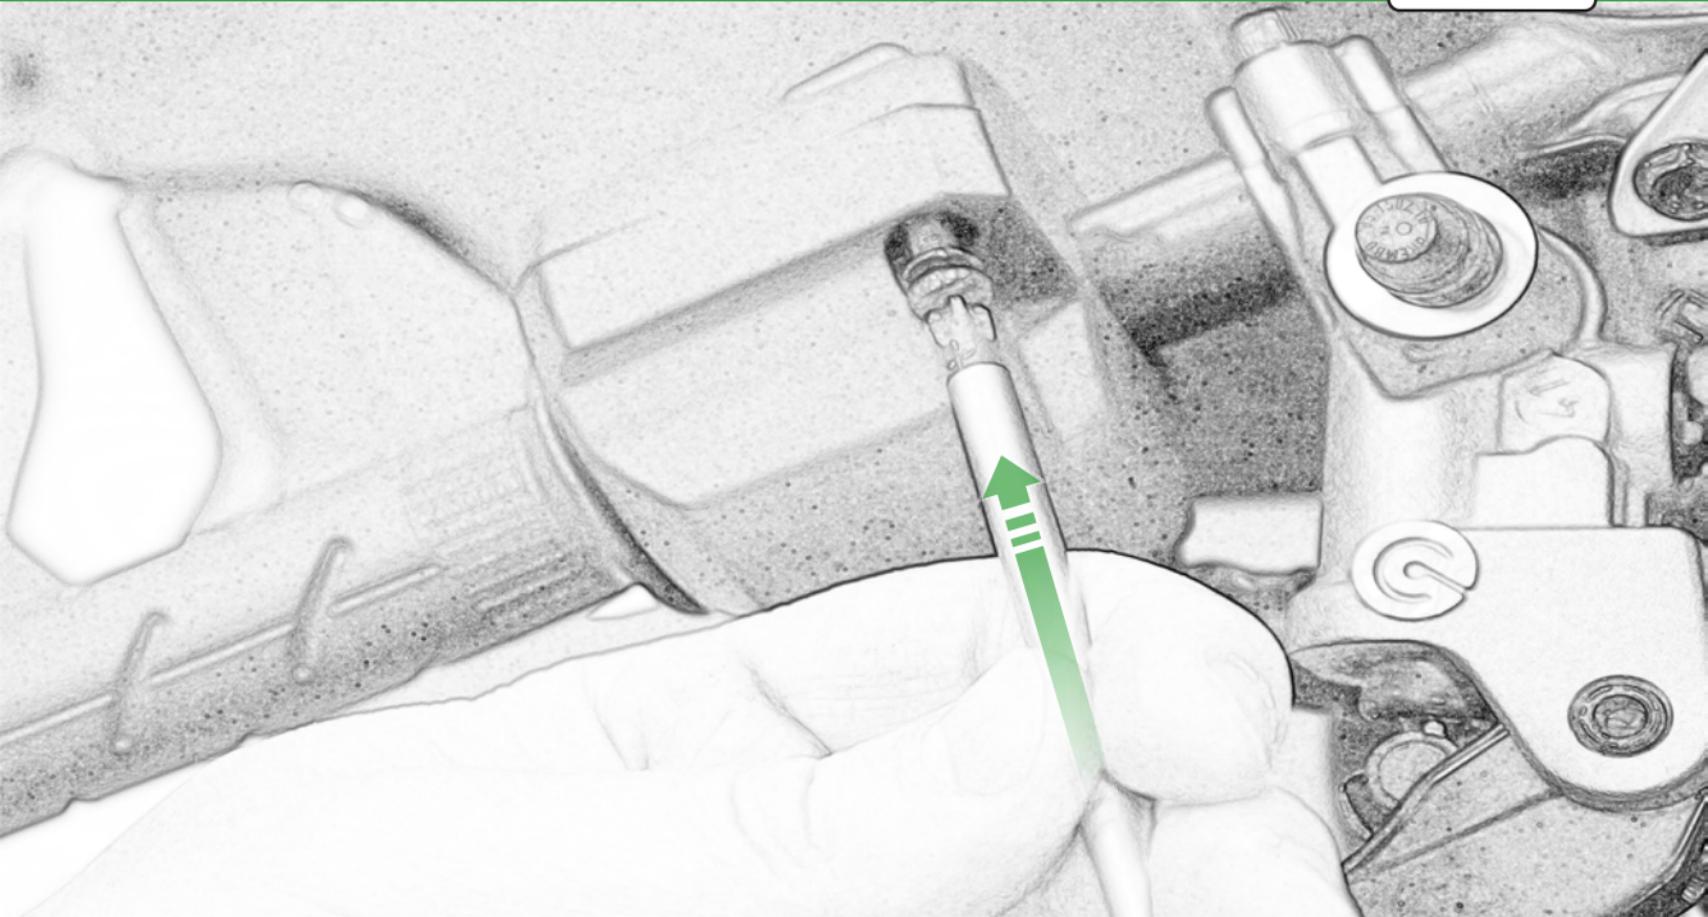


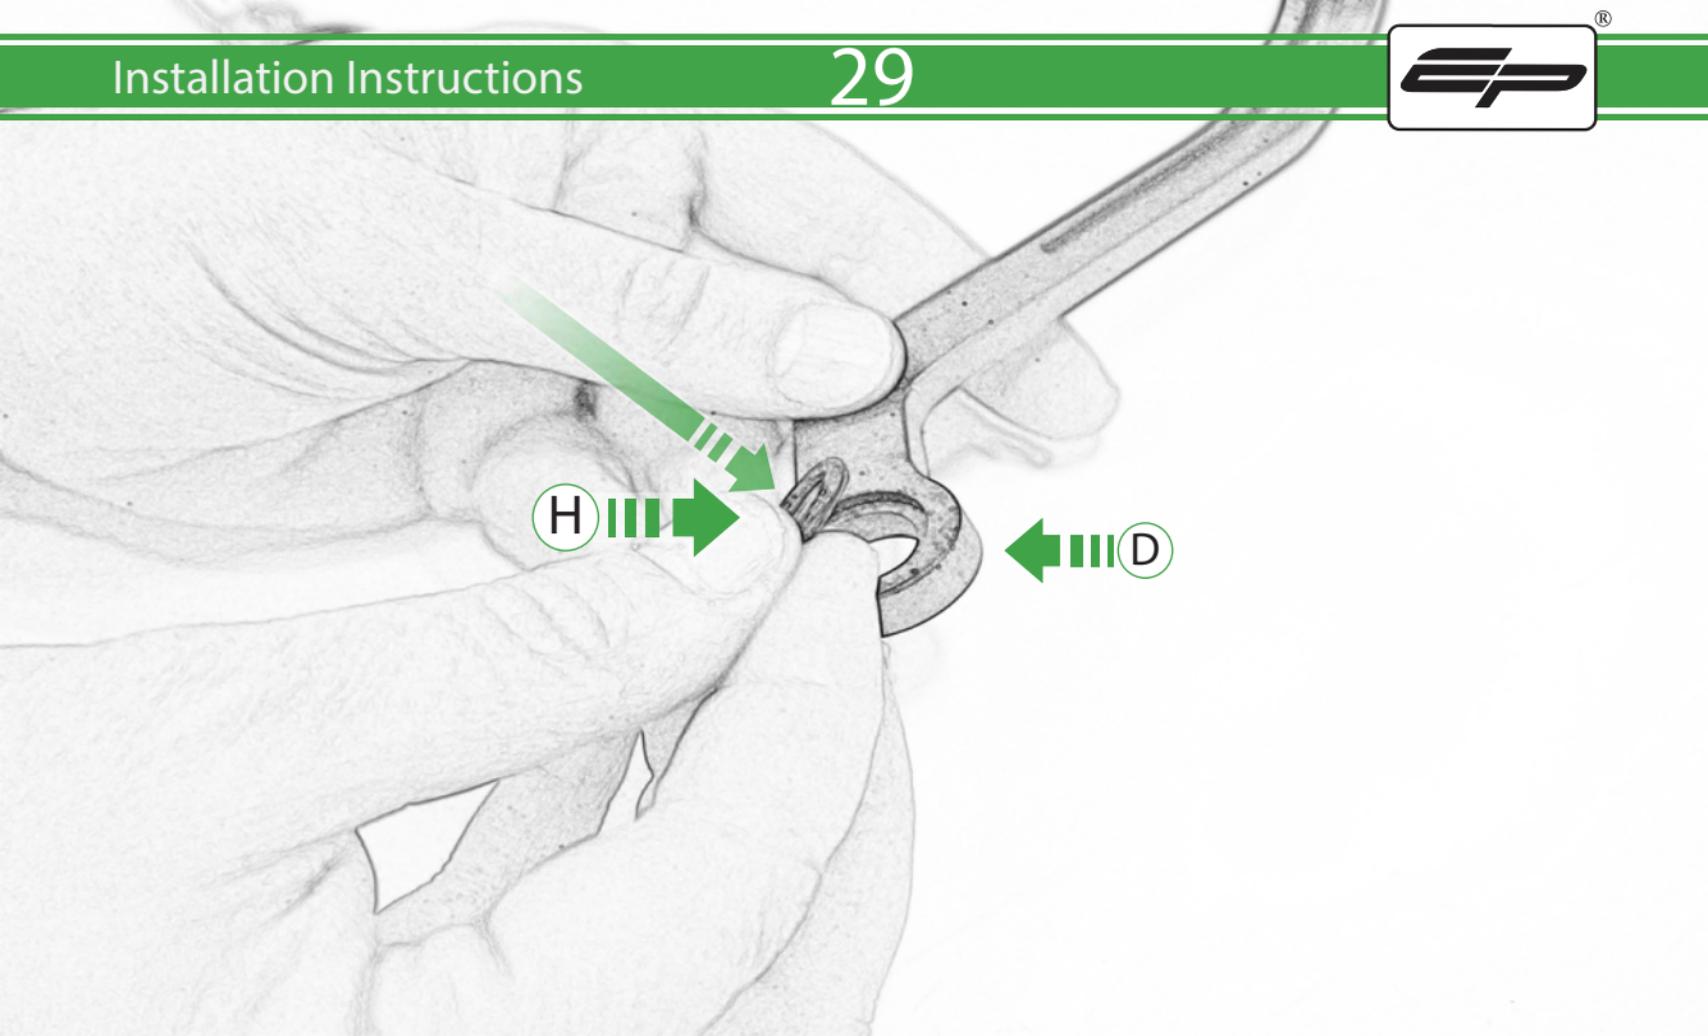



H


D



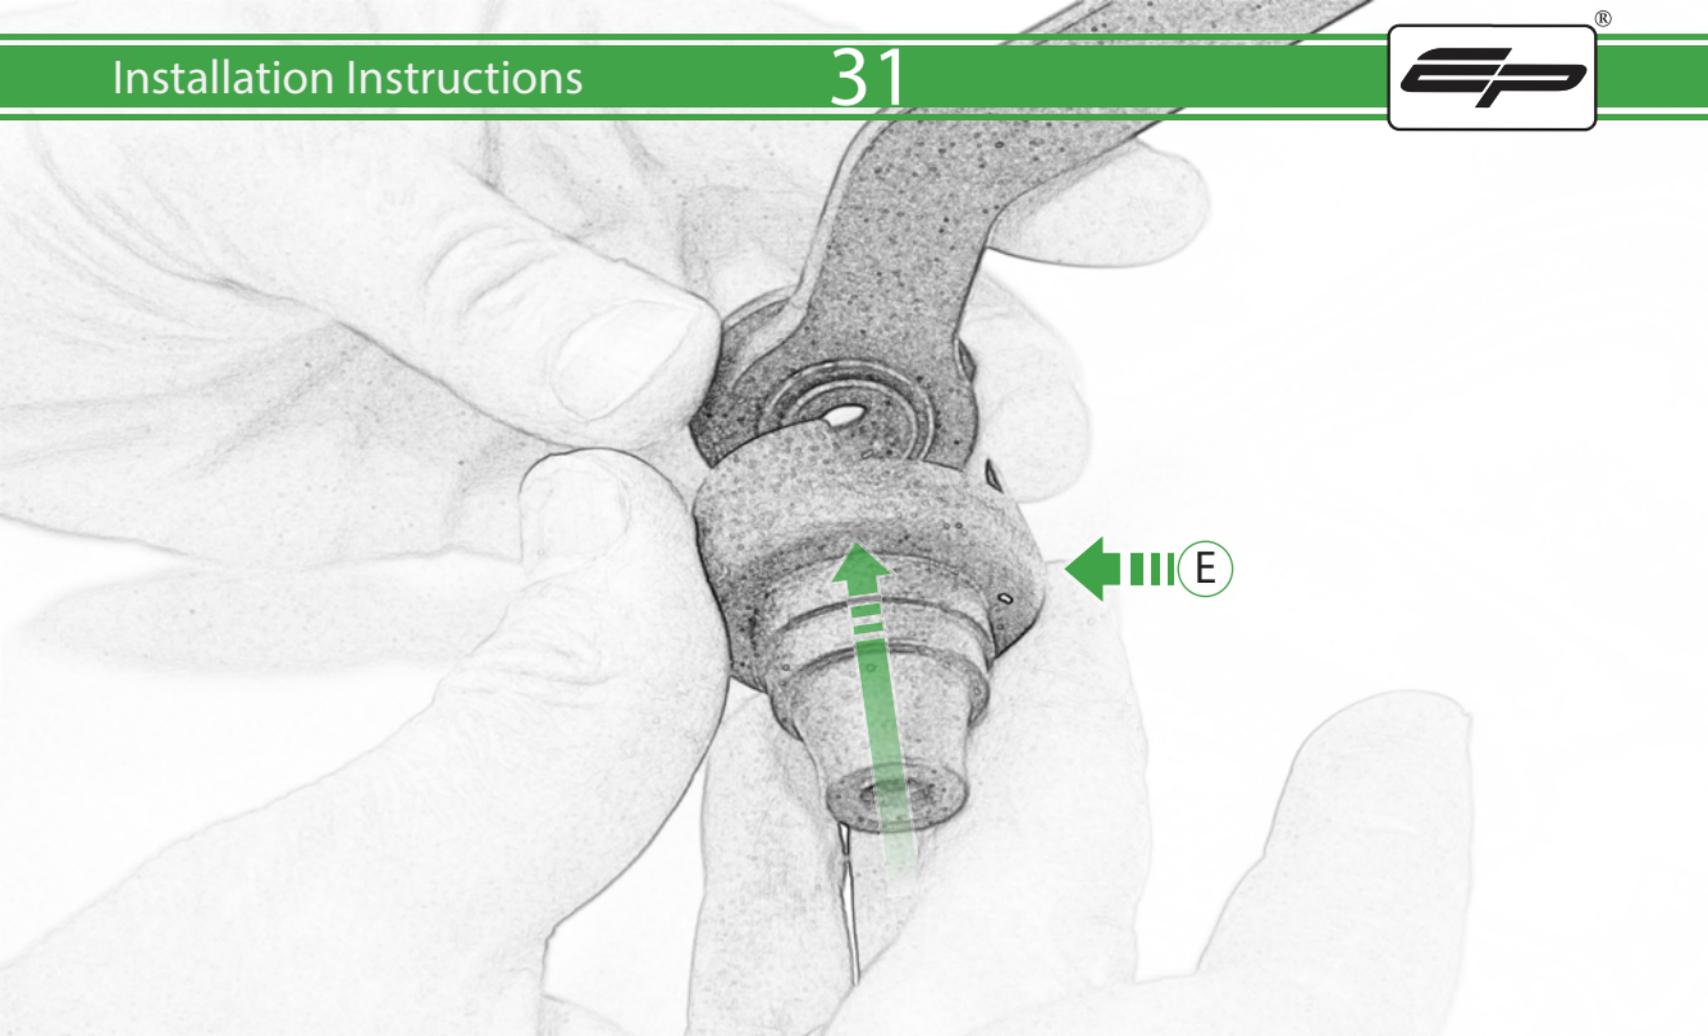


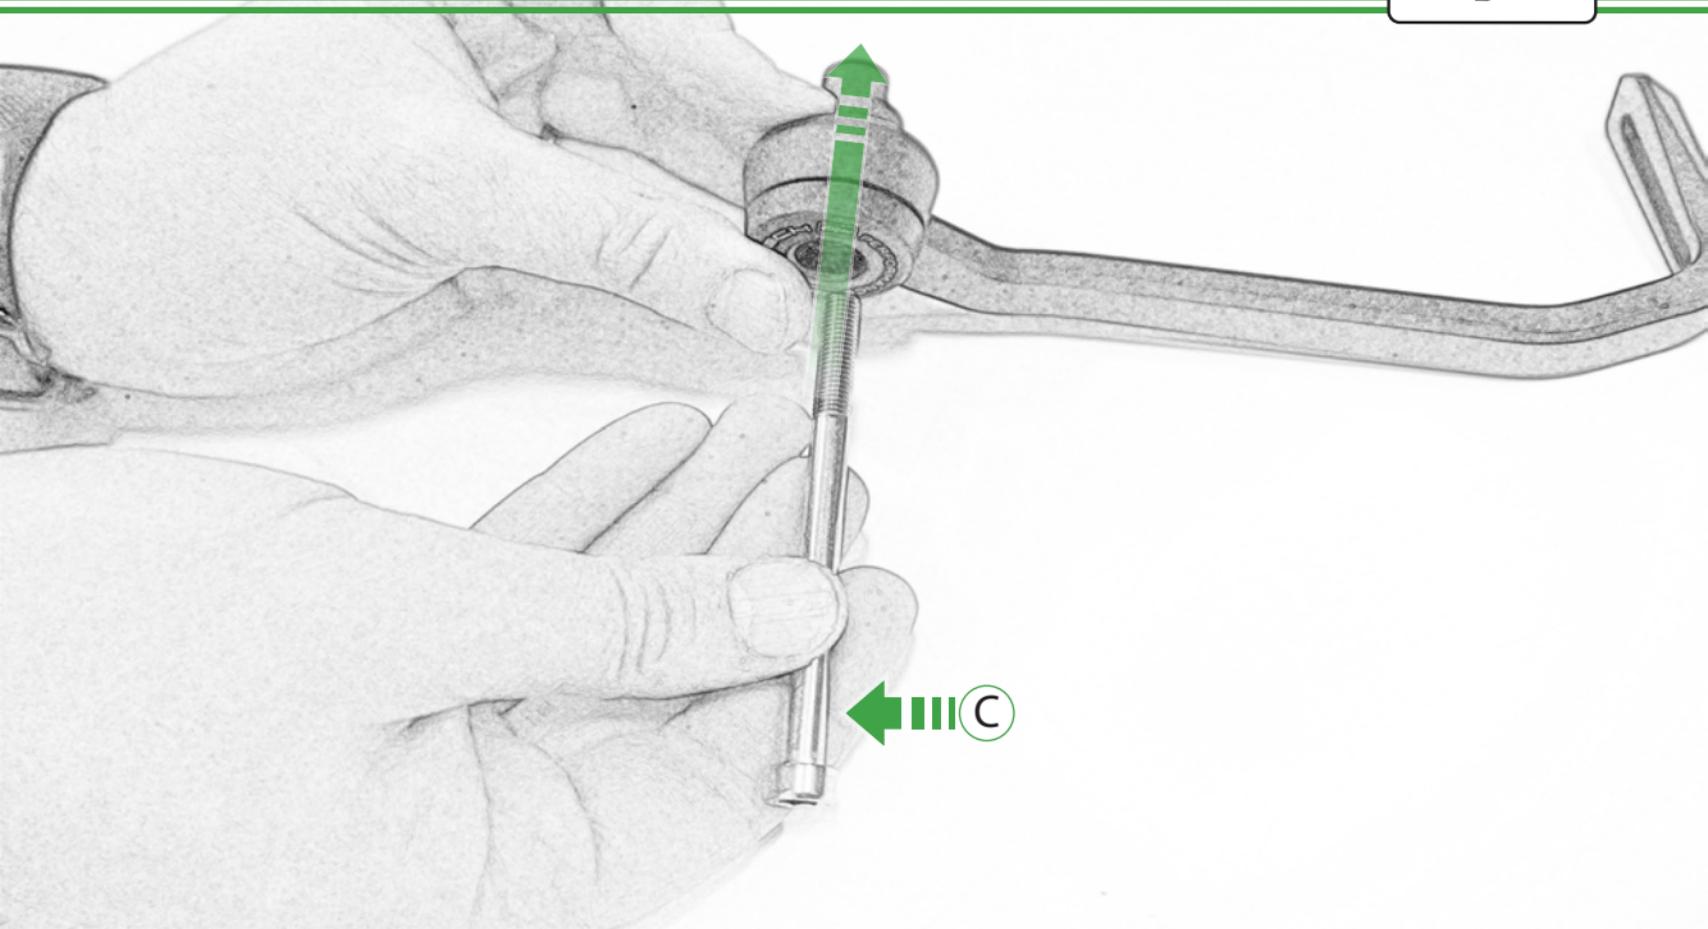


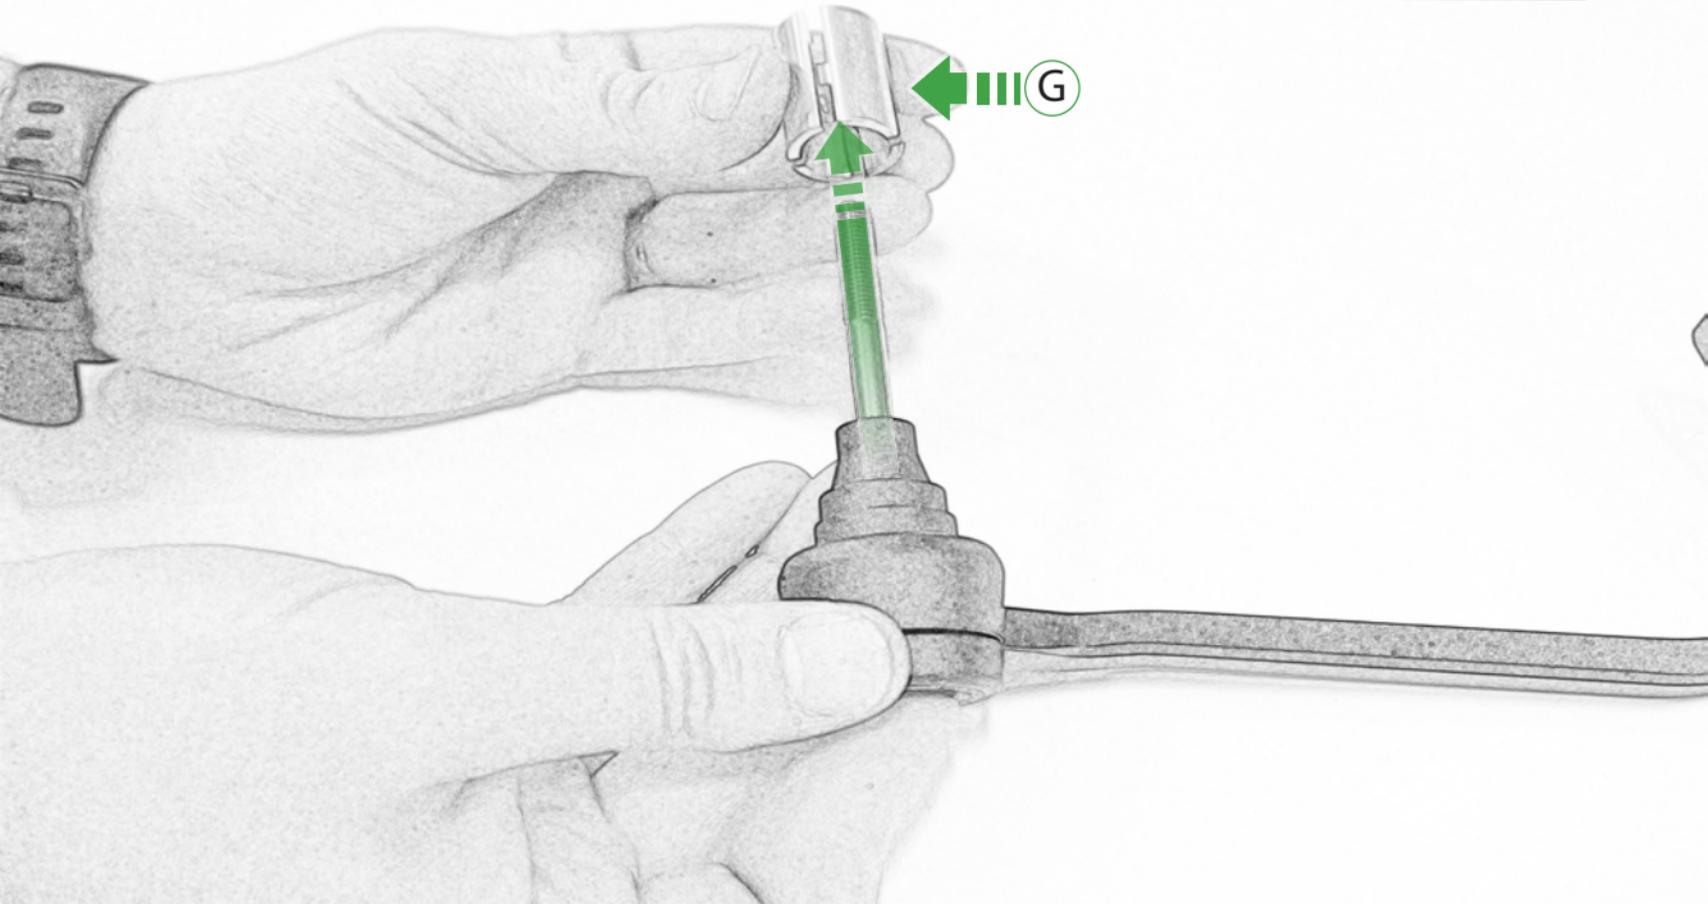

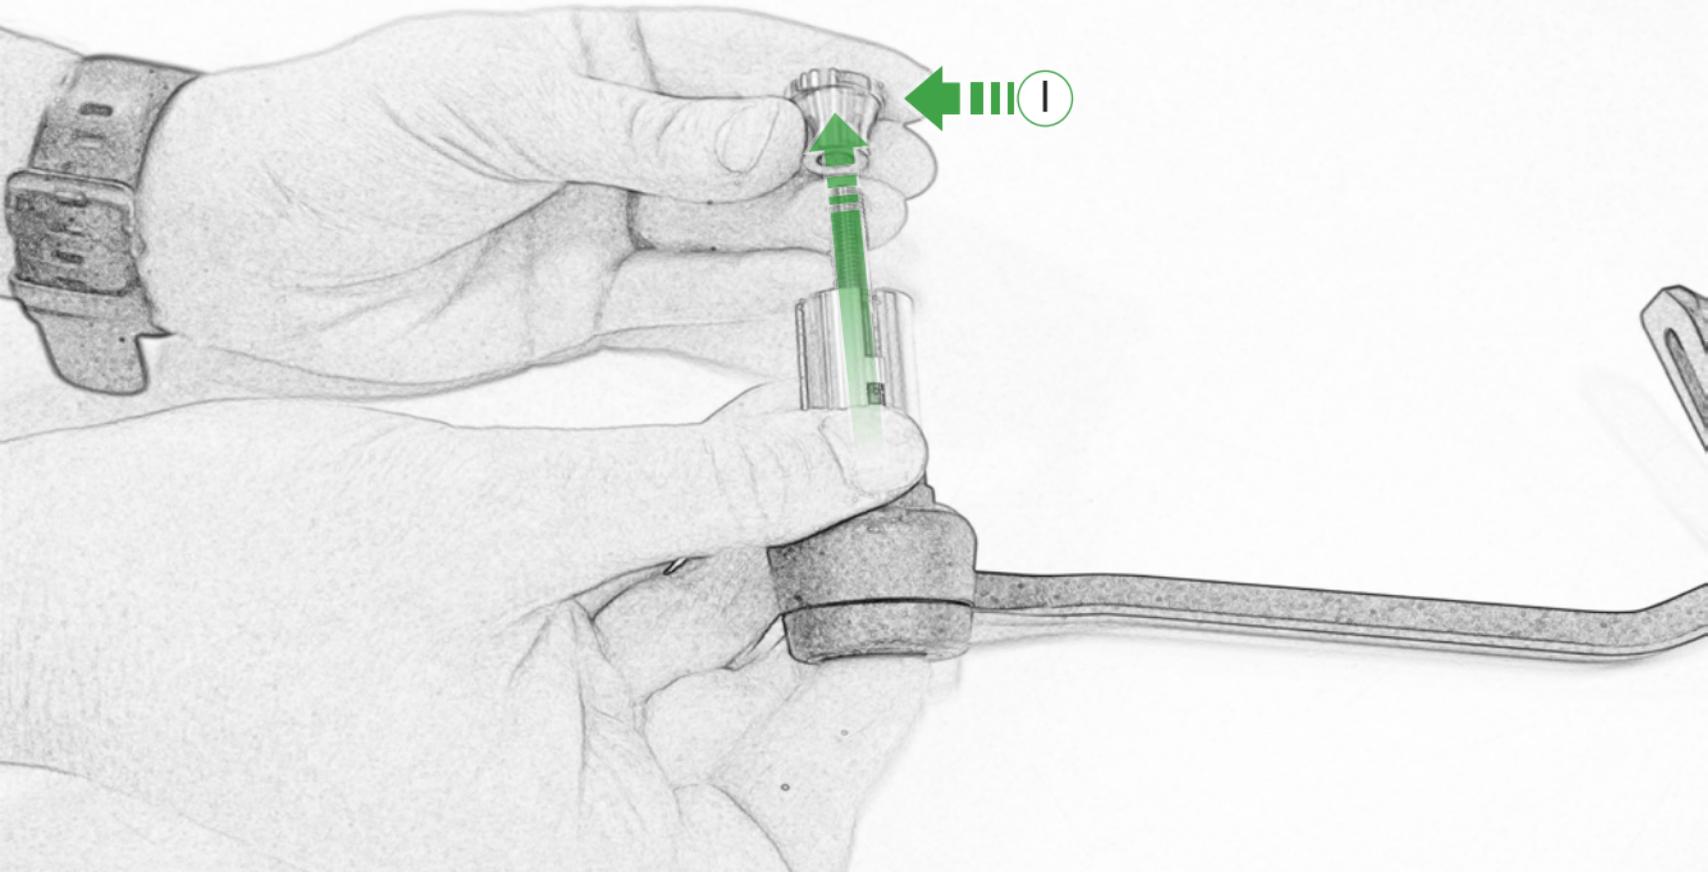




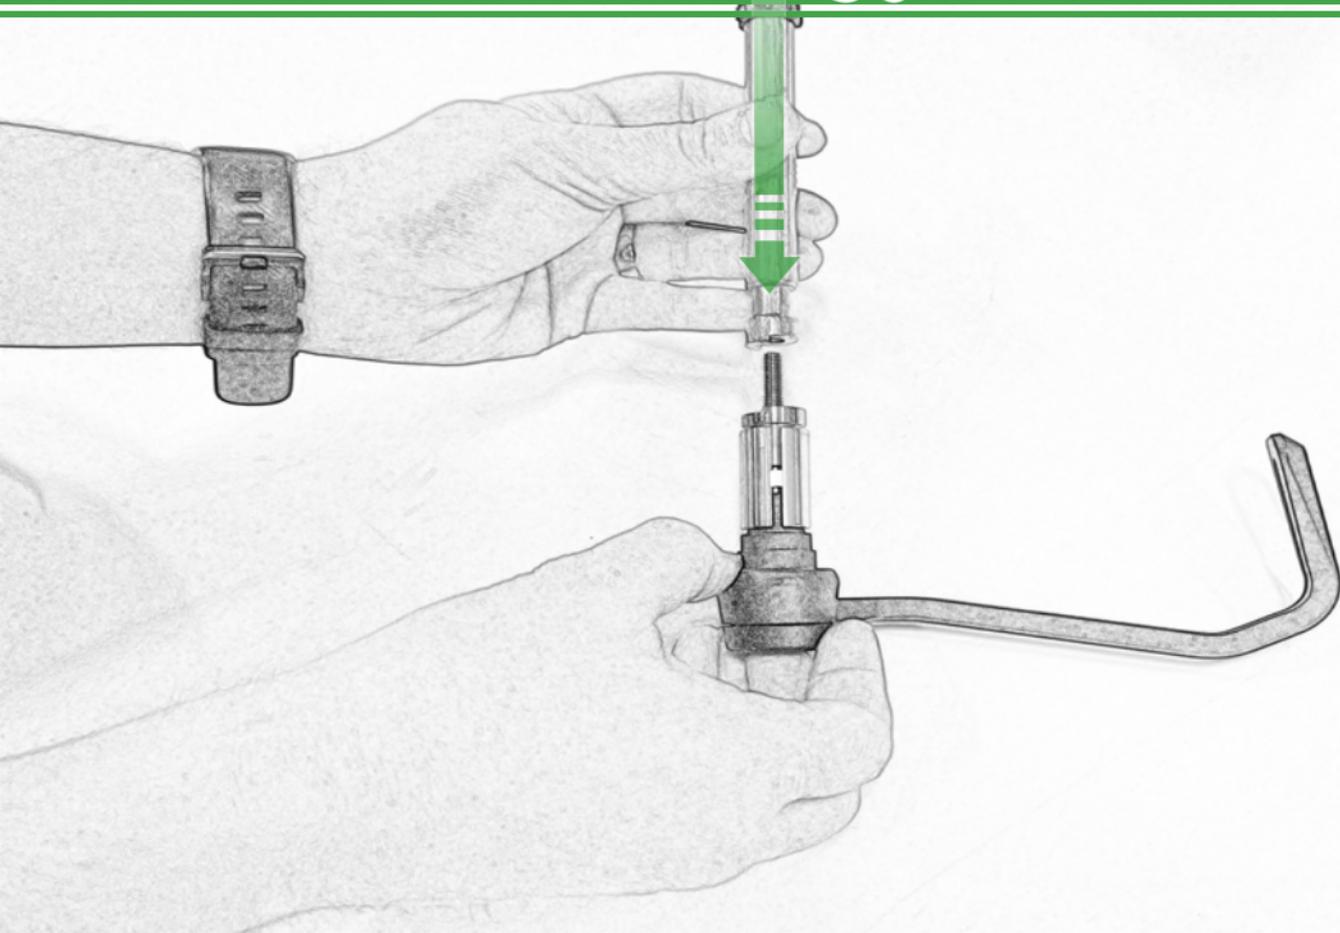

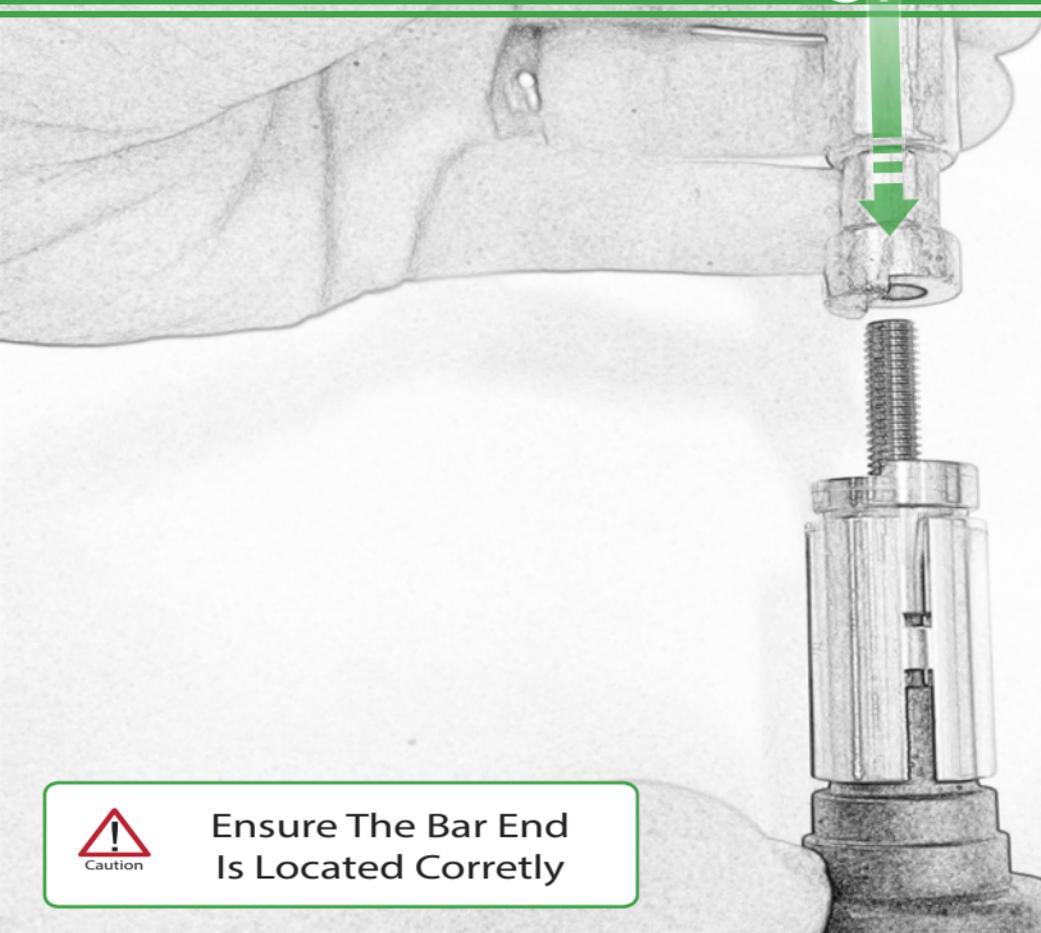

Caution


Ensure The Bar End
Is Located Corretly

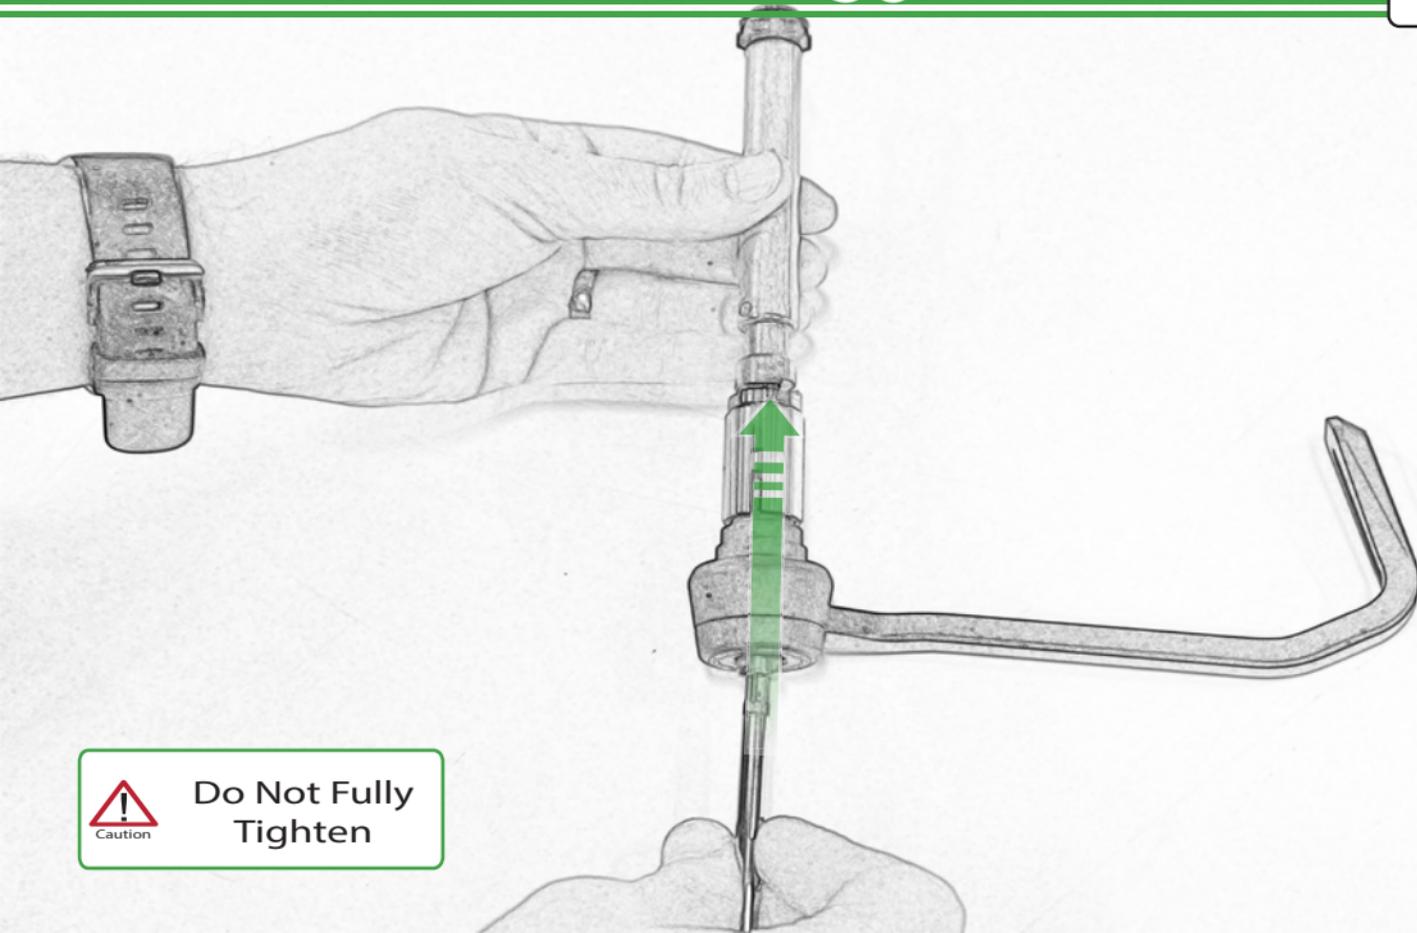

 **Do Not Fully Tighten**


Caution



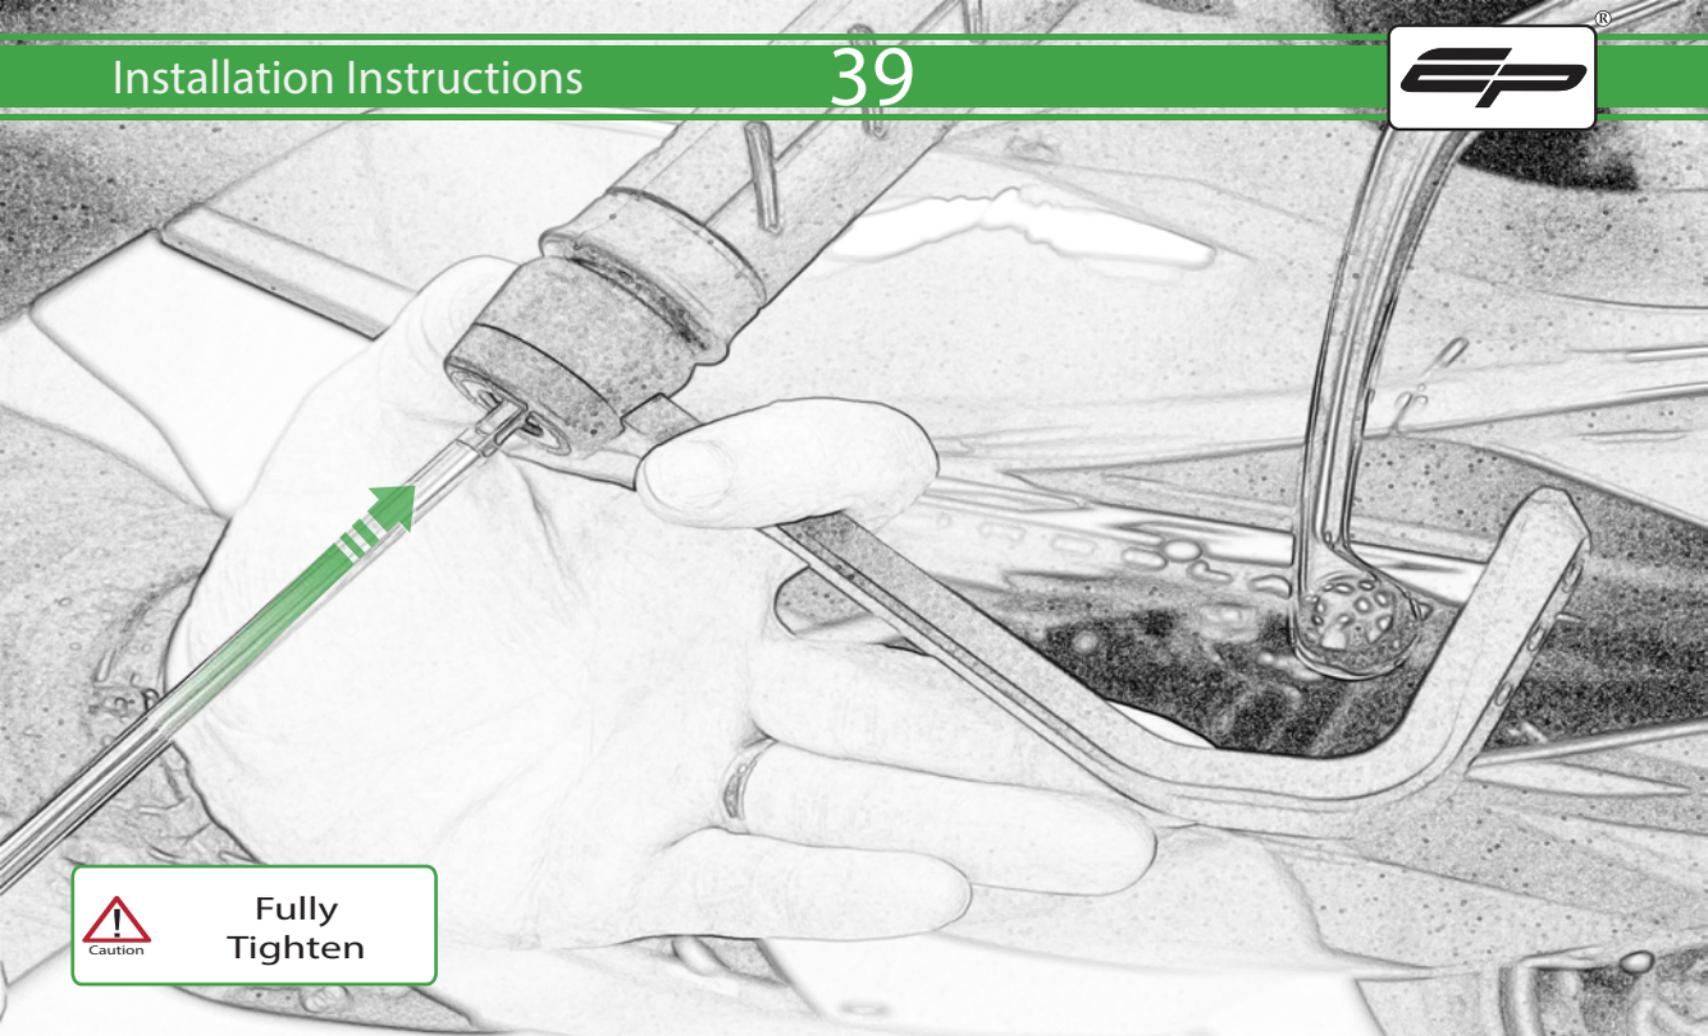


Caution

**Fully
Tighten**

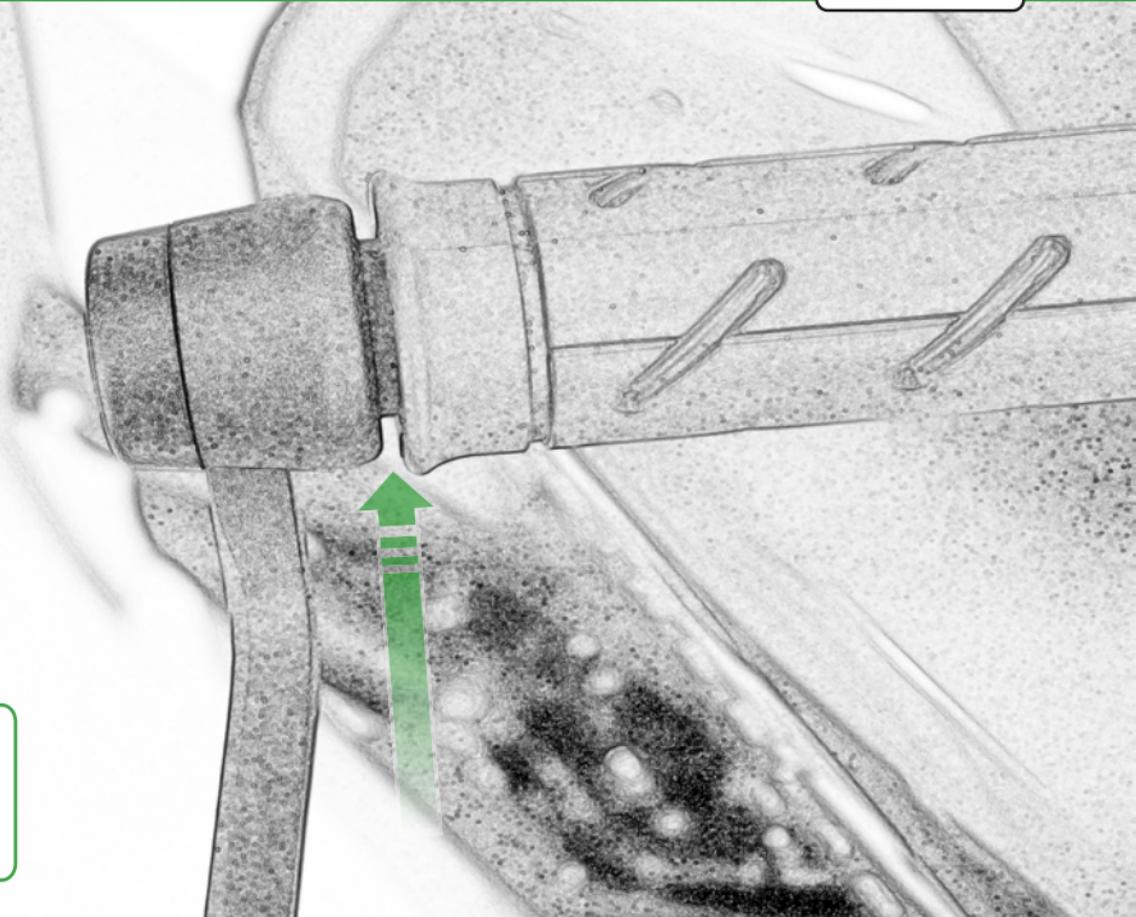

Caution

Minimum
Gap 2.5mm

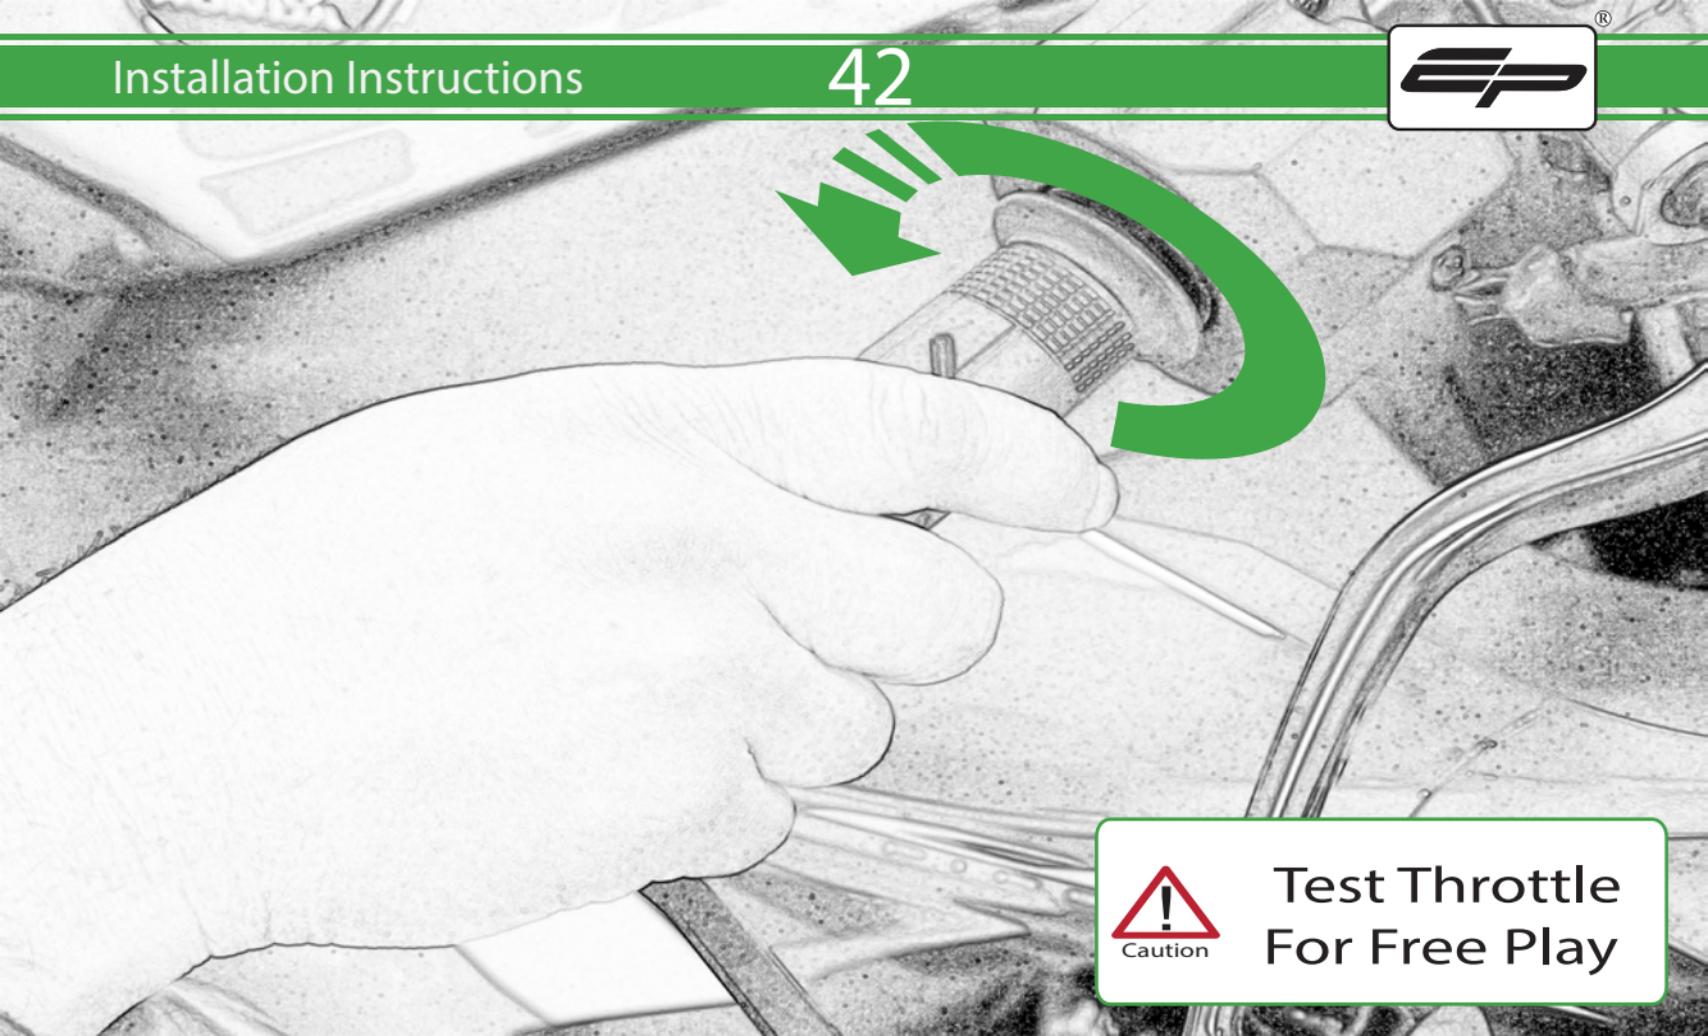

**Test Throttle
For Free Play**



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Before riding the motorcycle ensure the throttle has adequate clearance for rotation.

Plus has free play and doesn't touch our product.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com