



INSTALLATION INSTRUCTIONS

Accessory

ENGINE GUARD
P/N 08F44-MFY-100

Application

VT1300CR/CT

Publications No.


MII 13073

Issue Date

February 2010

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

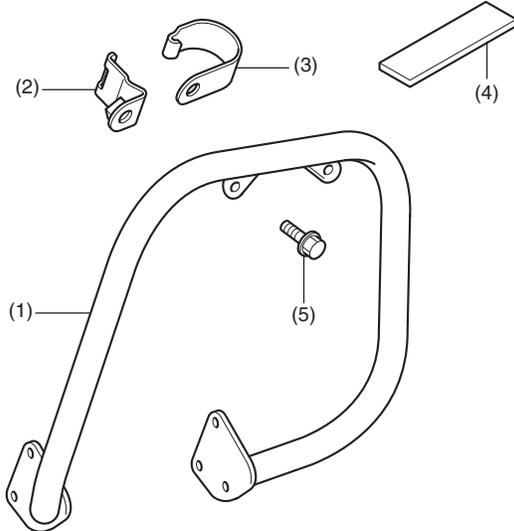

No.	Description	Qty
(1)	Engine guard	1
(2)	Stay	2
(3)	Band	2
(4)	Rubber	2
(5)	8 mm flange bolt	2

TOOLS AND SUPPLIES REQUIRED

Socket (12 mm)
Ratchet
Marker
Tape
Ruler
Scissors
Isopropyl alcohol
Shop towel
Torque wrench

USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.

TORQUE CHART


Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N-m	kgf-m	lbf-ft
8 mm flange bolt	27	2.8	20


INSTALLATION

CAUTION:


- To prevent burns, allow the engine, exhaust system, radiator, etc. to cool before installing the accessory.
- Remove the right footpeg bar as shown.

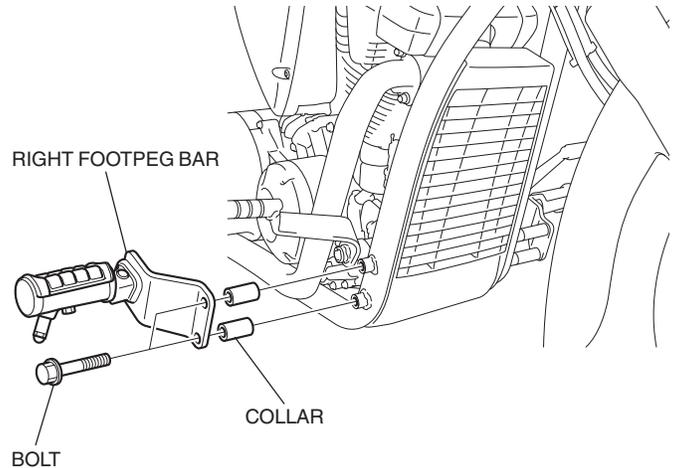


- Repeat on the left side.
- Assemble the band with the stay as shown.

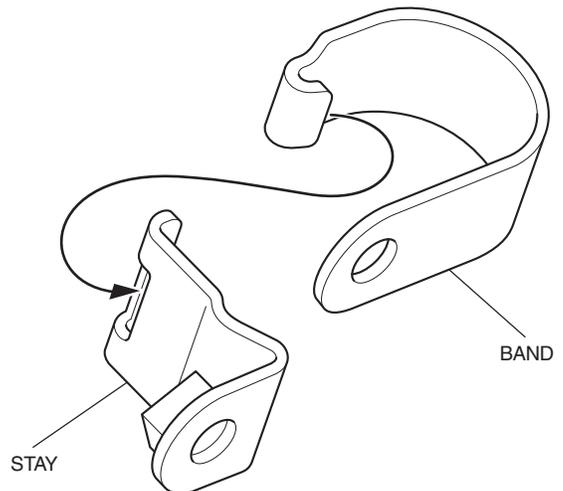



4. Loosely install the assembled bands as shown.

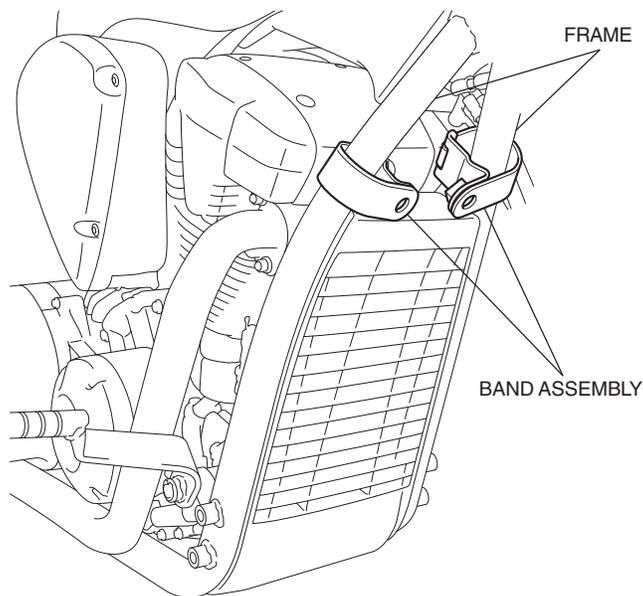



5. Loosely install the engine guard.

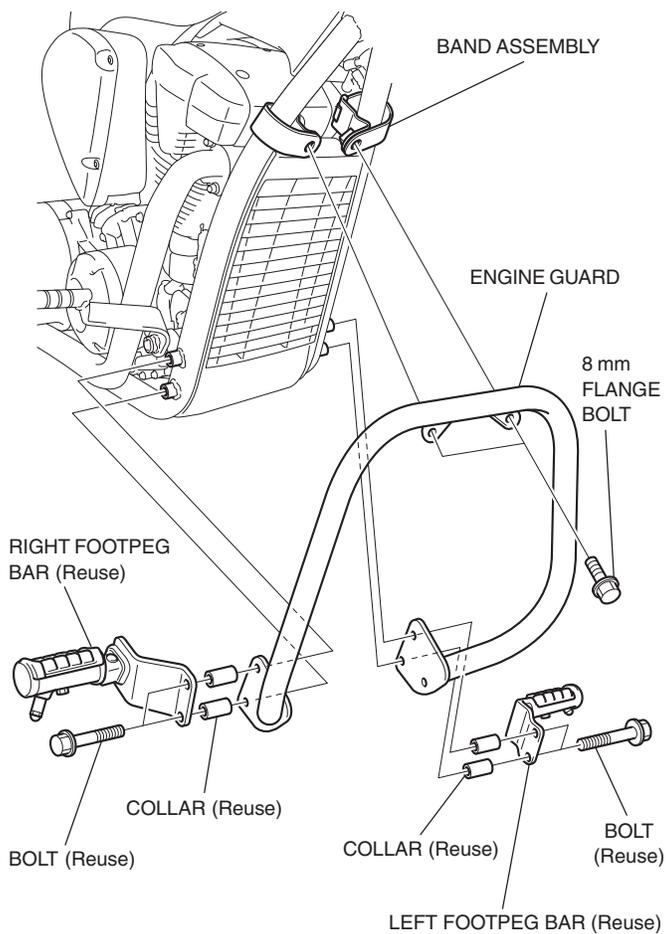


6. Attach tape to the frame downtubes in the positions shown.

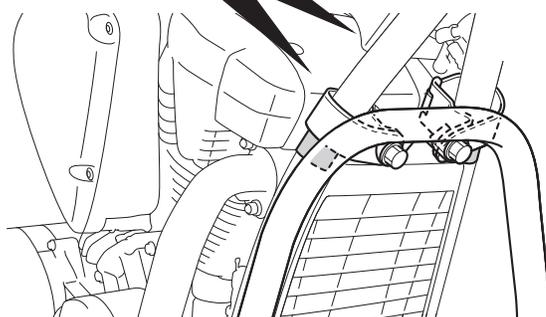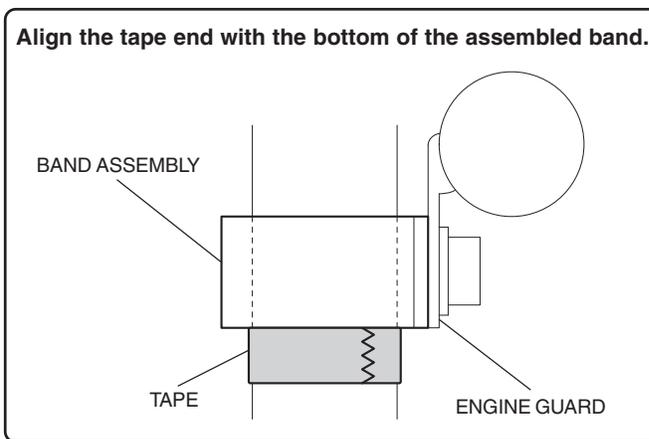



7. Mark the frame downtubes at the top of the bands as shown.

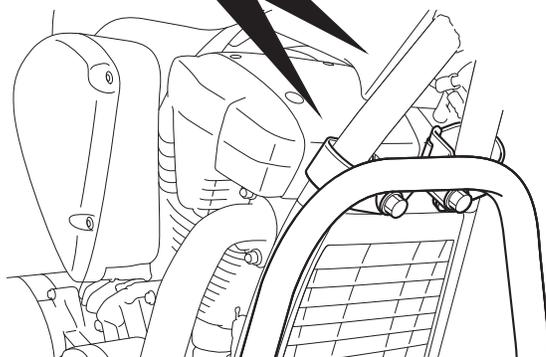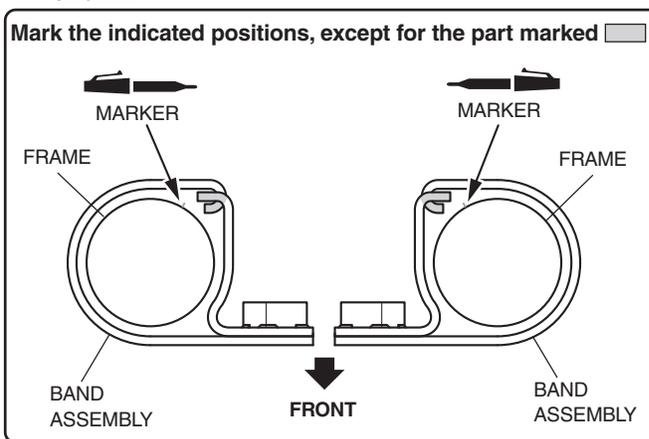

8. Cut the rubber to the dimension shown.

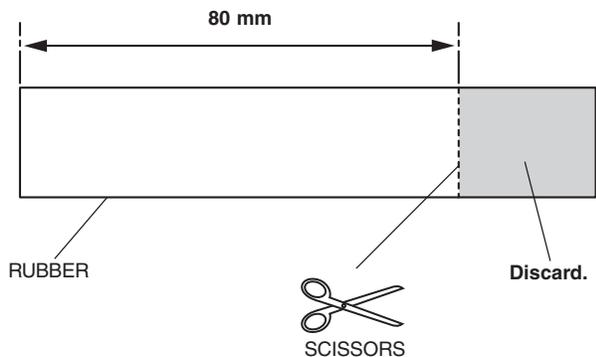

9. Remove the engine guard and assembled bands, and attach the rubbers in the positions shown.

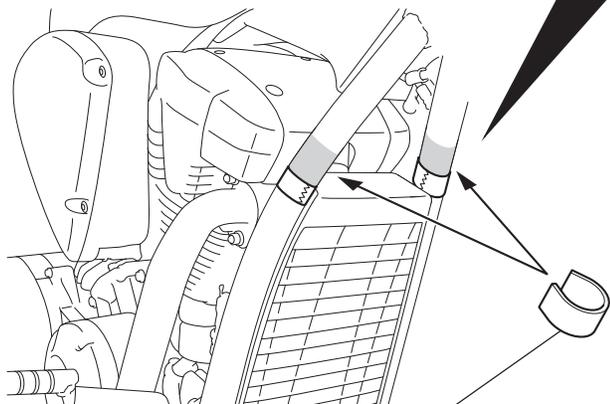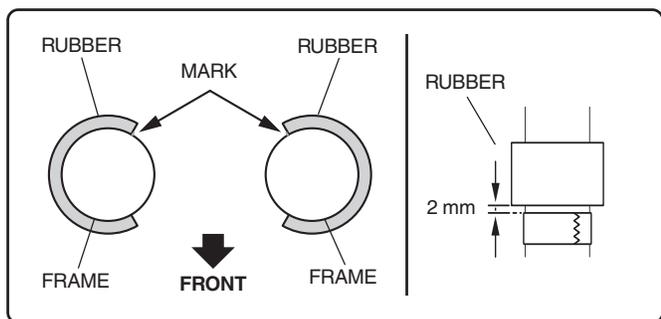

RUBBER
Clean the attachment surface thoroughly and attach after removing the adhesive backing.

10. Remove the tapes, and loosely install the assembled bands and engine guard.

11. Tighten all mounting to the specification in the torque table after adjusting the overall fit of the accessory.