



INSTALLATION INSTRUCTIONS

Accessory

FRAME SKID PLATE SET
P/N 08P51-HP0-100A

Application

TRX500 (all)

Publications No.


MII 13263

Issue Date

May 2010

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

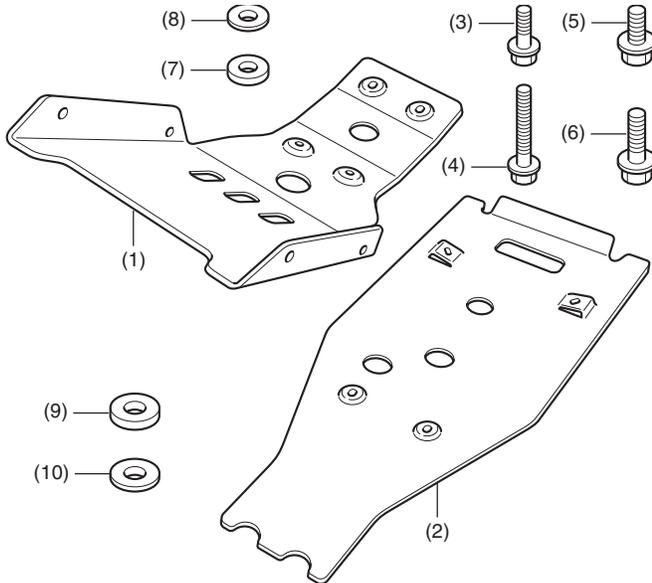

| No. | Description | Qty |
|------|--------------------------|-----|
| (1) | Front frame skid plate | 1 |
| (2) | Middle frame skid plate | 1 |
| (3) | 6 mm flange bolt (short) | 2 |
| (4) | 6 mm flange bolt (long) | 4 |
| (5) | 8 mm flange bolt (short) | 2 |
| (6) | 8 mm flange bolt (long) | 4 |
| (7) | 6 mm Collar (thick) | 12 |
| (8) | 6 mm Collar (thin) | 2 |
| (9) | 8 mm Collar (thick) | 4 |
| (10) | 8 mm Collar (thin) | 2 |

TOOLS REQUIRED

Socket (10 and 12 mm)

Ratchet

Box-end wrench (10 mm)

Hondalock 2 or equivalent thread lock

Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

| Item | N-m | kgf-m | lbf-ft |
|------------------|-----|-------|--------|
| 6 mm flange bolt | 12 | 1.2 | 9 |
| 8 mm flange bolt | 27 | 2.8 | 20 |

USE AND CARE INFORMATION

- Check the accessory mounts frequently and retighten if necessary.

SAFETY MESSAGES

As you read these instructions, you will see WARNINGS, CAUTIONS, NOTICES, and NOTES. These safety messages identify the hazard, indicate how to avoid the hazard, and advise of the probable consequence of not avoiding it. Each safety message has a specific purpose:

- WARNINGS are safety messages that indicate a potentially hazardous situation, which, if not avoided, could result in serious injury or death.
- CAUTIONS are safety messages that indicate a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.
- NOTICES are messages to avoid vehicle or property damage.
- NOTES are additional information to help you complete a procedure.


Please work safely!

INSTALLATION


CAUTION:

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.


1. Remove the front skid plate as shown.

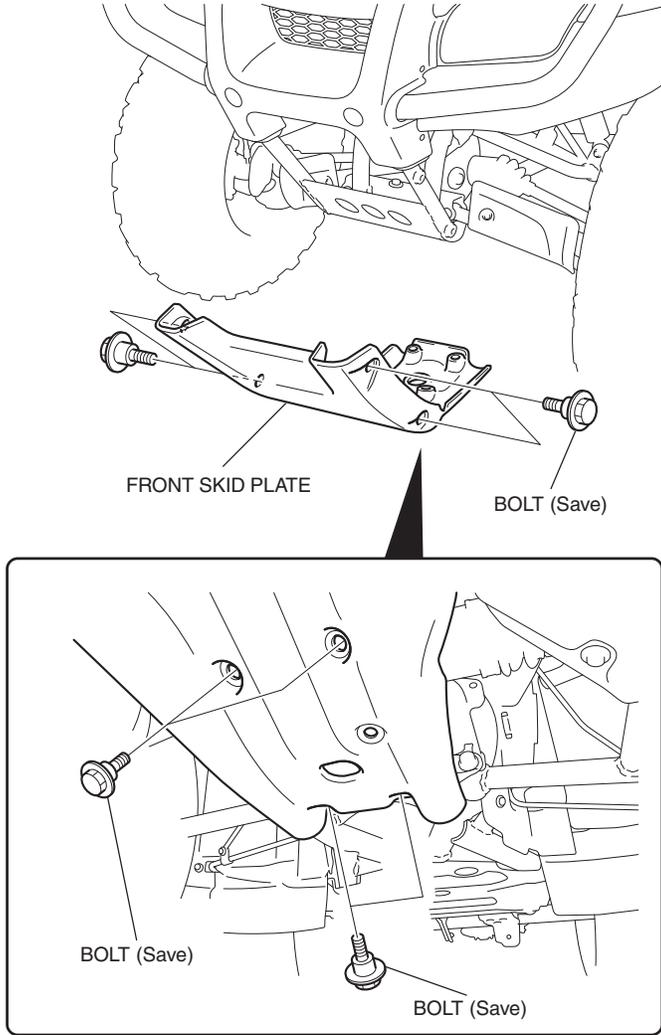

2. Remove the engine guard as shown.

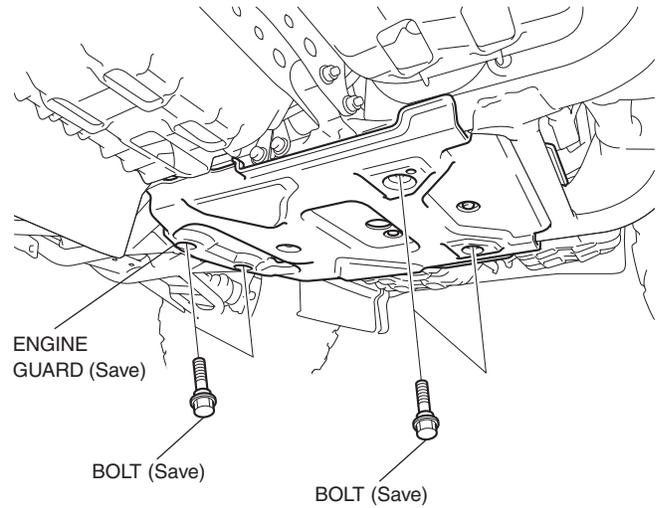

3. Install the middle frame skid plate as shown.

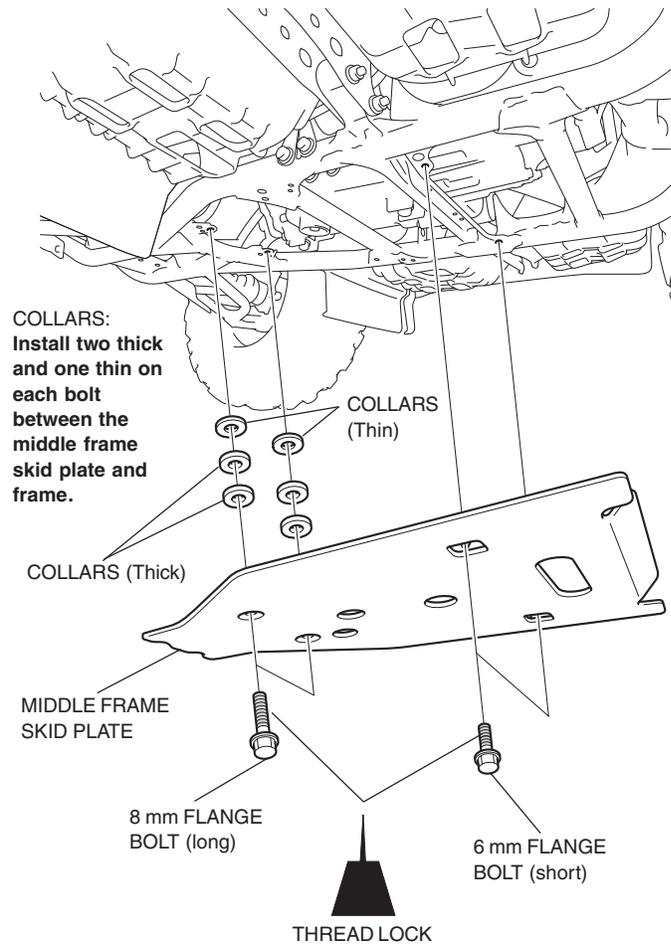

4. Install the front frame skid plate as shown.

8 mm FLANGE BOLT (short)
Repeat on the right side.

