



INSTALLATION INSTRUCTIONS

Accessory

SWINGARM GUARD
P/N 08P51-HP0-100B

Application

2012-2013 TRX500 (all types)

Publications No.


MII 13263

Issue Date

May 2010

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

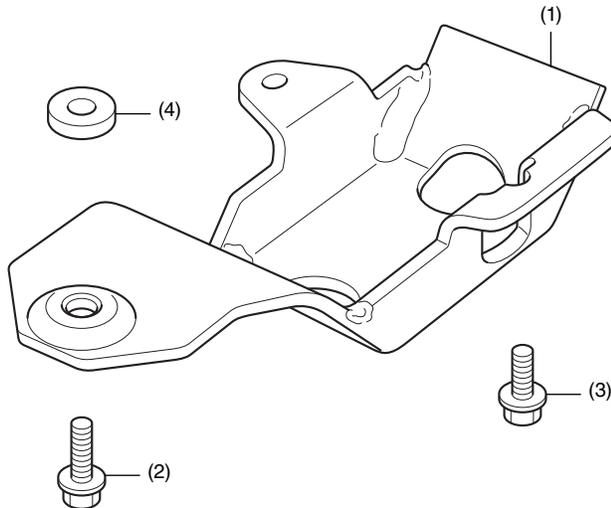

No.	Description	Qty
(1)	Swingarm guard	1
(2)	8 mm flange bolt (long)	1
(3)	8 mm flange bolt (short)	2
(4)	Collar	1

TOOLS REQUIRED

Socket (12 mm)

Ratchet

Box-end wrench (12 mm)

Hondalock 2 or equivalent thread lock

Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


Item	N-m	kgf-m	lbf-ft
8 mm flange bolt	27	2.8	20

USE AND CARE INFORMATION


- Check the accessory mounts frequently and retighten if necessary.

INSTALLATION


1. Remove the brake panel guard as shown.

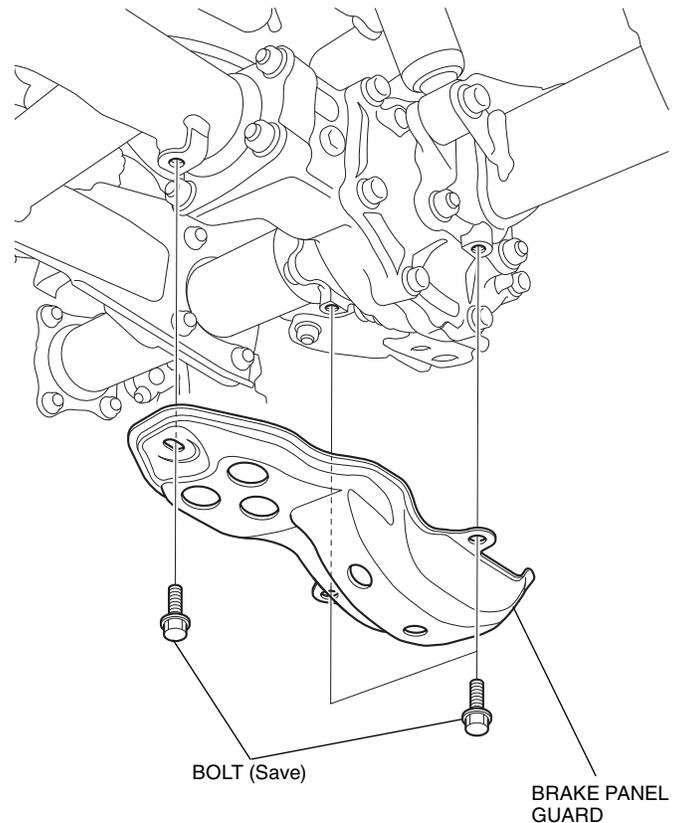

2. Loosely install the bolt as shown. Do not completely install the bolt.

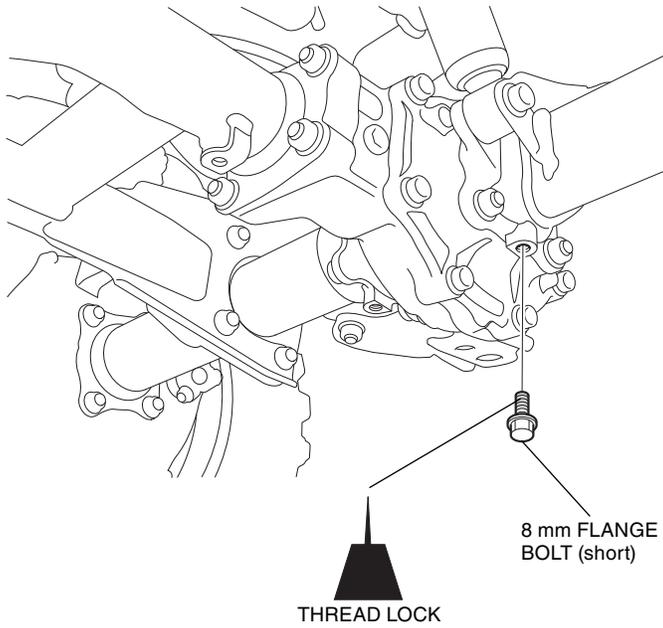

3. Set the swingarm guard so the open space goes against the previously installed flange bolt as shown.

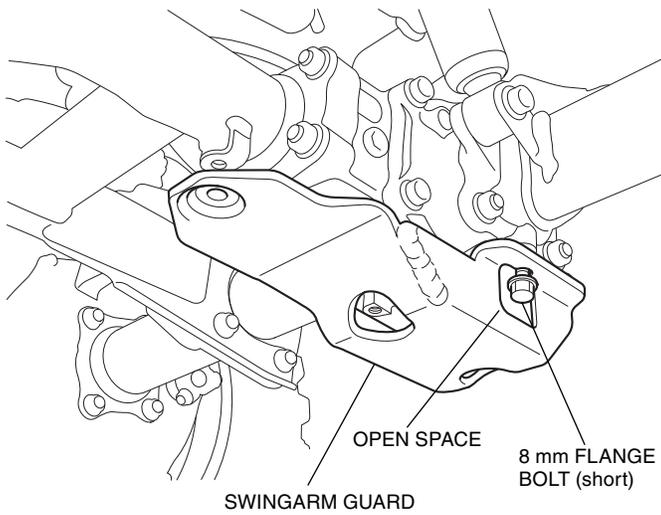

4. Install the bolts and collar as shown.

