


**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

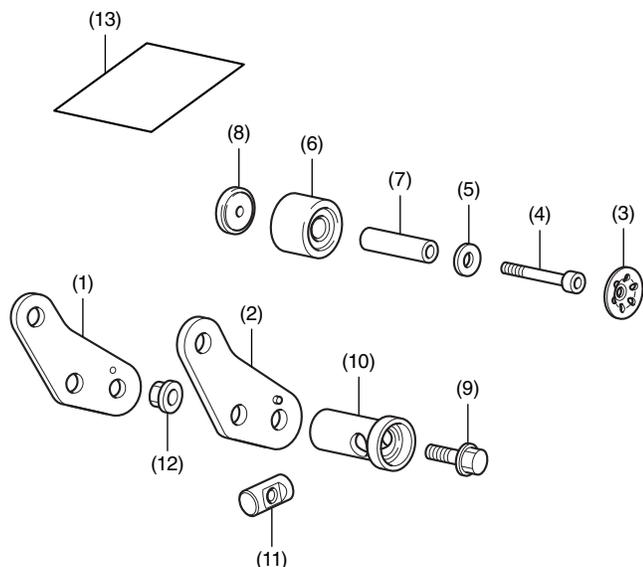

No.	Description	Qty
(1)	Right frame slider plate	1
(2)	Left frame slider plate	1
(3)	Engine guard cap	2
(4)	8 mm socket bolt	2
(5)	Washer	2
(6)	Frame slider body	2
(7)	Collar	2
(8)	Cushion	2
(9)	10 mm flange bolt	2
(10)	Frame slider base	2
(11)	Pivot pin	2
(12)	10 mm flange nut	2
(13)	Installation Instruction URL	1

## TOOLS AND SUPPLIES REQUIRED

Socket (14 mm)  
 Ratchet  
 Box-end wrench (14 mm)  
 Hex wrench (6 mm)  
 Isopropyl alcohol  
 Shop towel  
 Torque wrench

## TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
8 mm socket bolt	22	2.2	16
10 mm flange bolt	39	4.0	29

## INSTALLATION

### ▲ CAUTION


- To prevent burns, allow the engine and exhaust system to cool before installing the accessory.

### NOTE:


- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.

- Remove the motorcycle's parts as shown.


### <Left side>

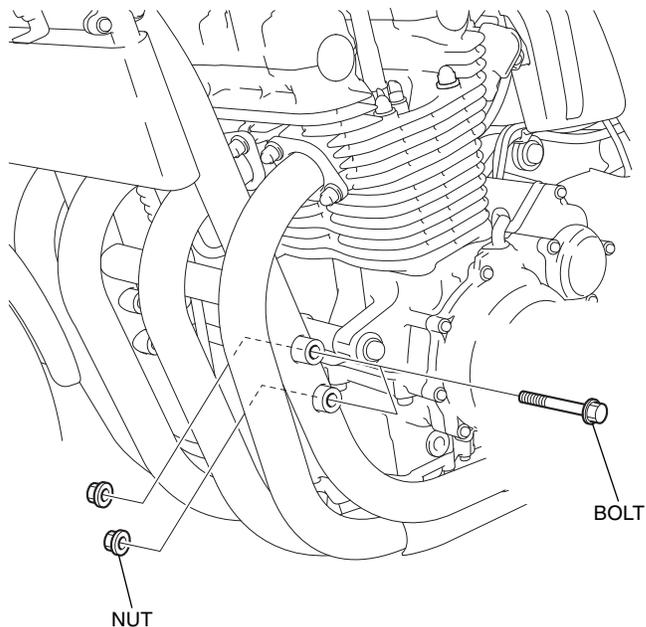


2. Install the left frame slider plate as shown.

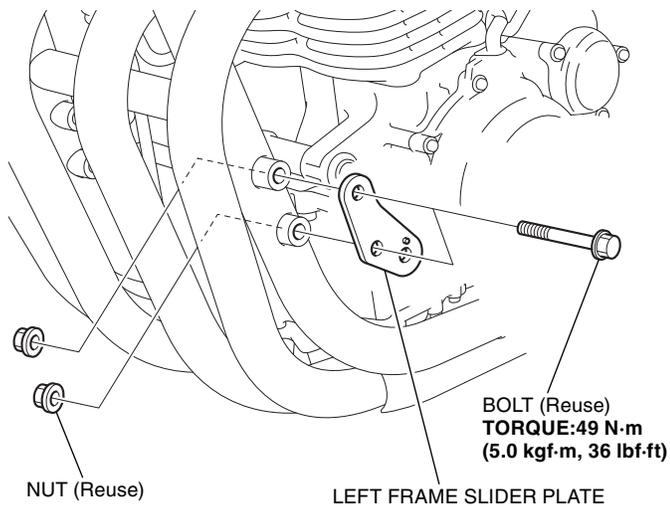



3. Install the engine guard base as shown.

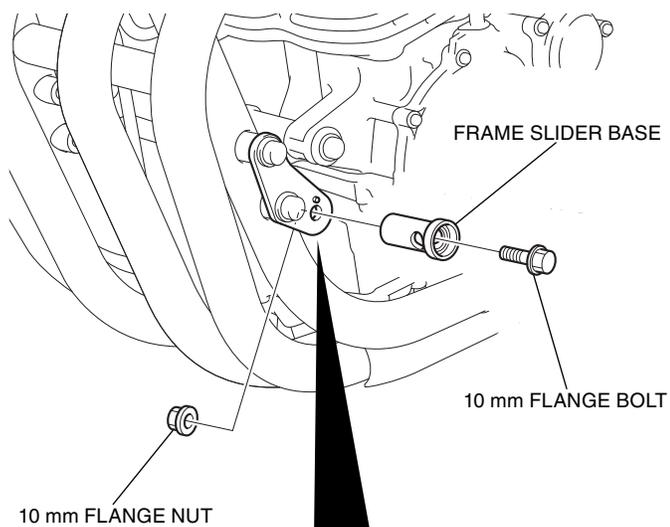


**Align the hole of the frame slider base with the projection of the left frame slider plate as shown.**

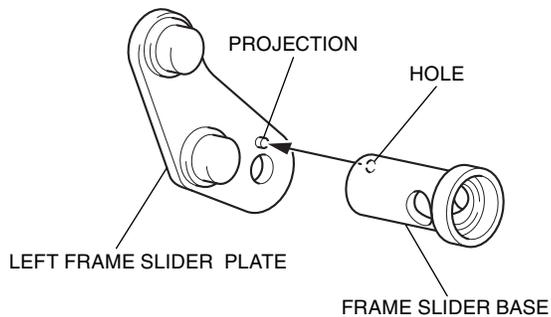

4. Install the frame slider body as shown.

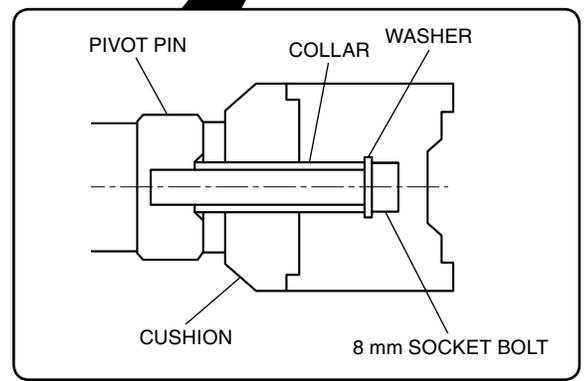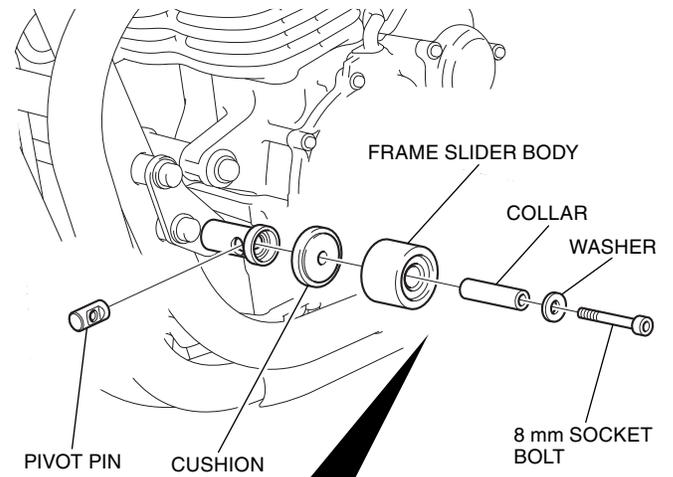

5. Install the frame slider cap as shown.

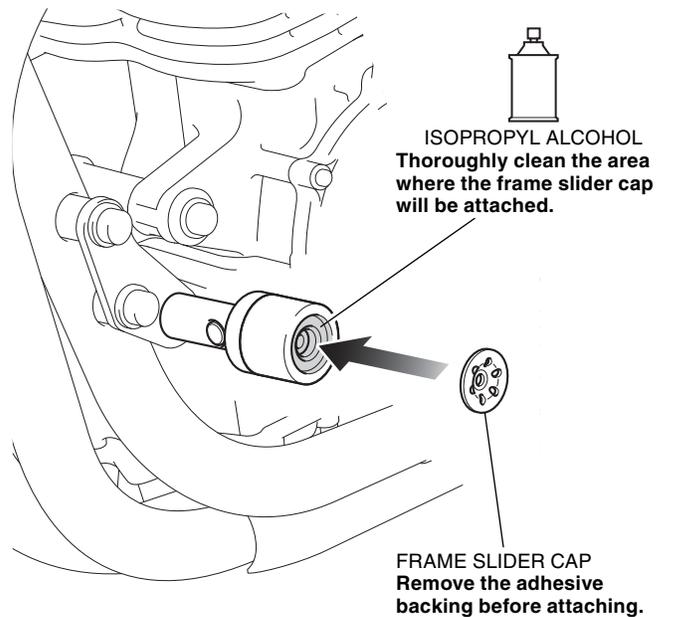

6. Repeat on the right side.