


Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

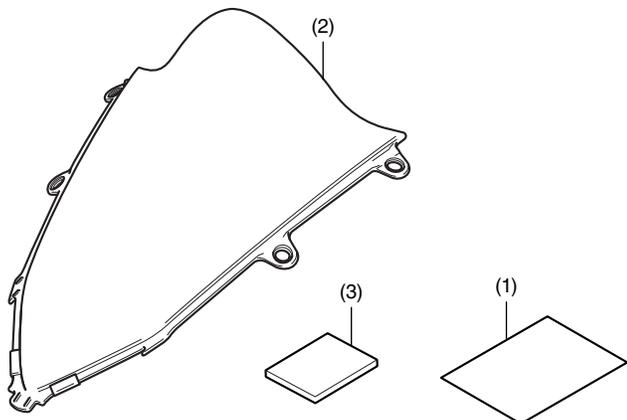

No.	Description	Qty
(1)	Installation Instructions URL	1
(2)	High windscreen	1
(3)	Aluminium tape	1

SUPPLIES REQUIRED

Primer
Isopropyl alcohol
Shop towel

TORQUE CHART


Refer to the Service Manual for the torque values of the removed parts.

INSTALLATION


NOTE:

- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.
- Make sure your customer is aware of this

1. Remove the parts as shown.

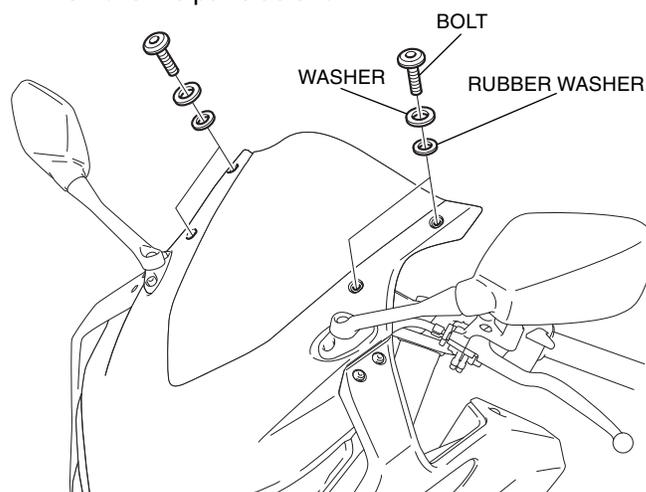


2. Remove the windscreen as shown.

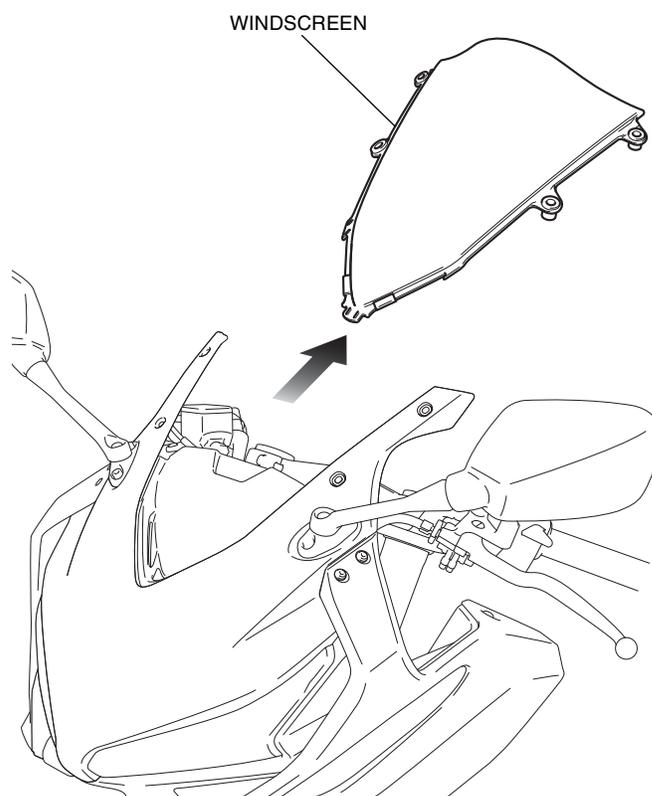


3. Remove the bolts as shown.
- Repeat on the right side.

<Left side>

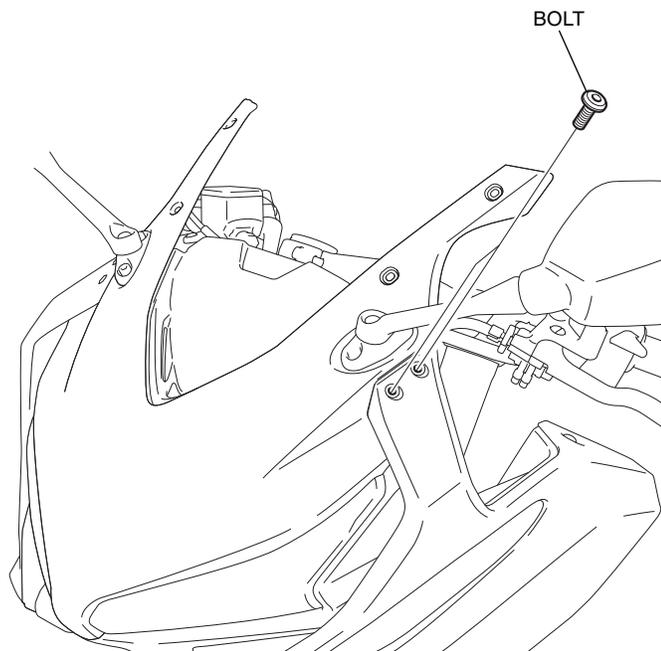


4. Open the left middle cowl as shown and remove the screw.

- Repeat on the right side.

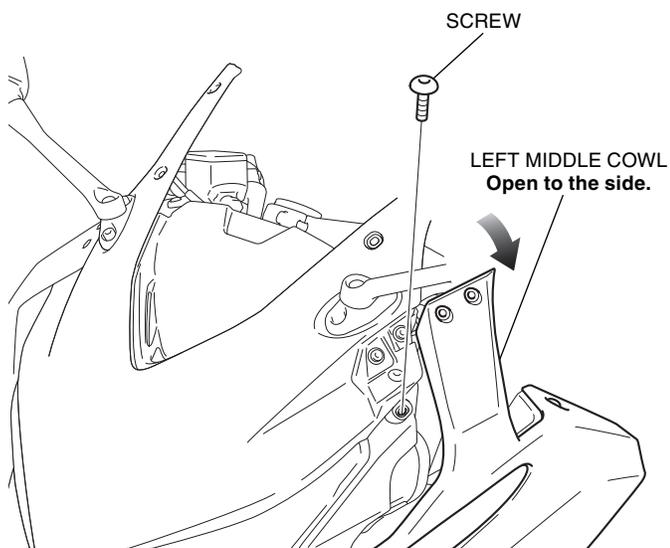


5. Remove the clip as shown.

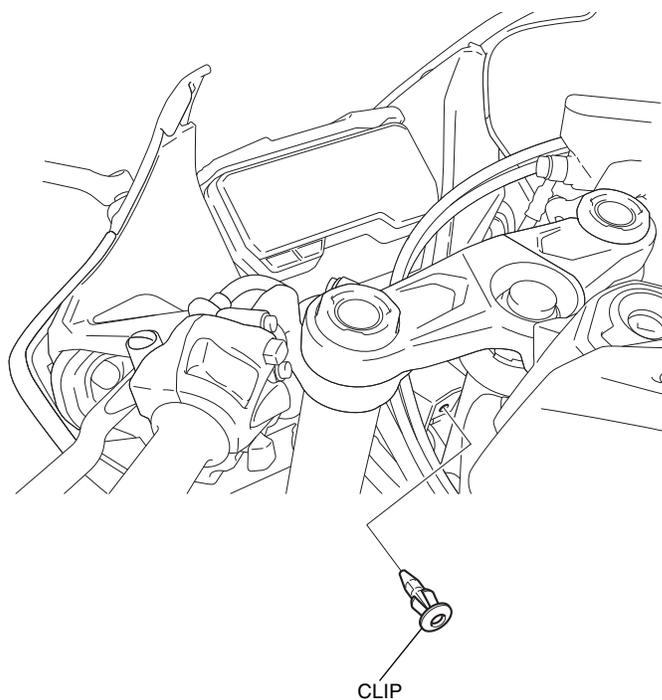


6. Remove the meter as shown.

METER
Disconnect the connector.

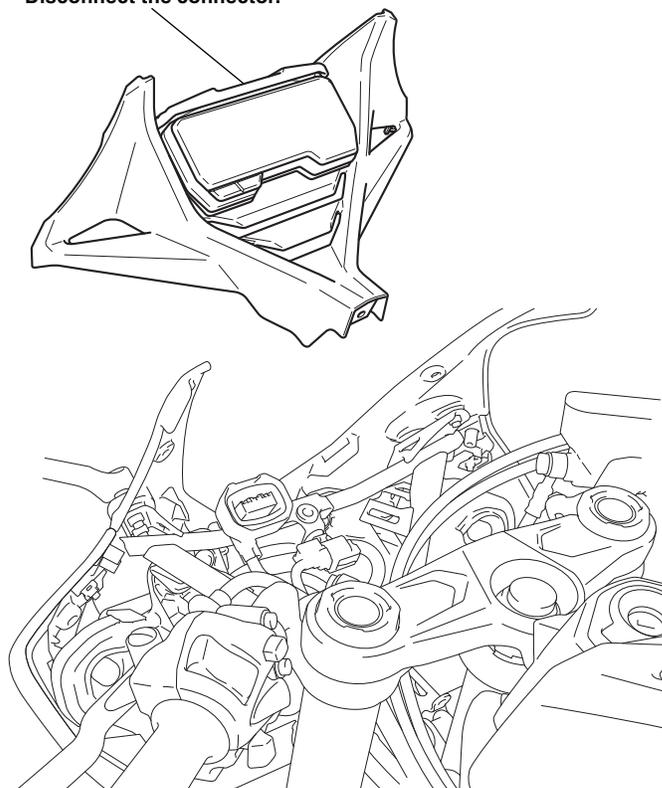


7. Clean the surface of the area shown using isopropyl alcohol.

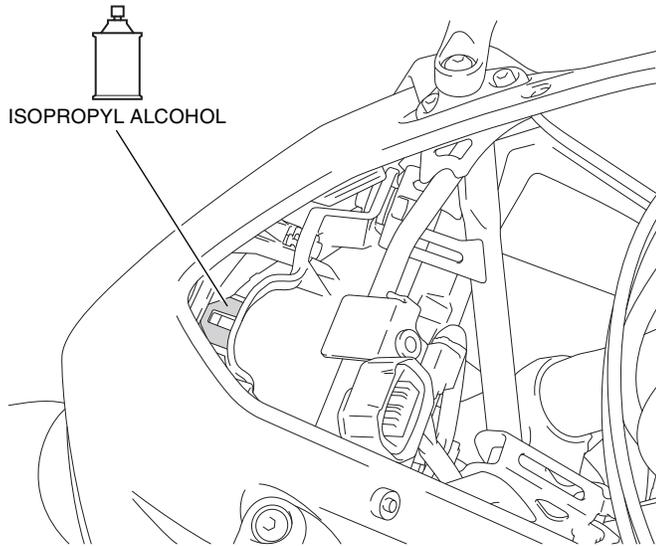


8. Apply primer to the area shown.

- **After applying, allow the primer to dry for at least 10 minutes.**

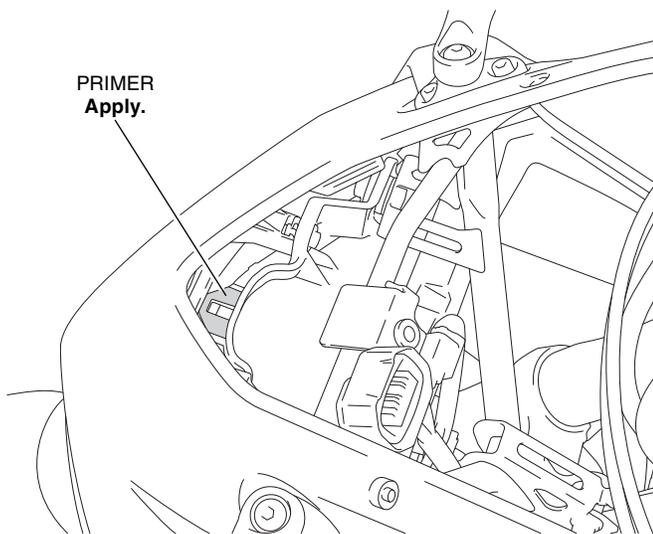

9. Attach the aluminium tape as shown.


ALUMINIUM TAPE
Remove the adhesive
backing before attaching.

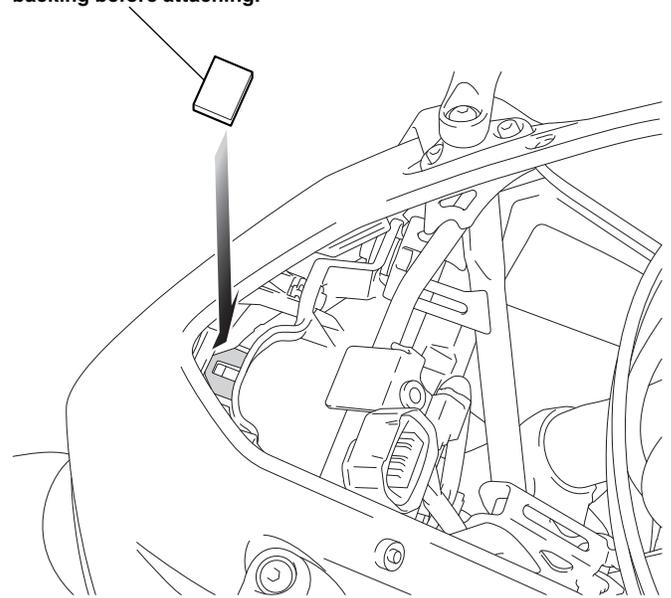


10. Install the meter in the reverse order of removal.

11. Install the right and left middle cowl in the reverse order of removal.


12. Remove the well nuts as shown.

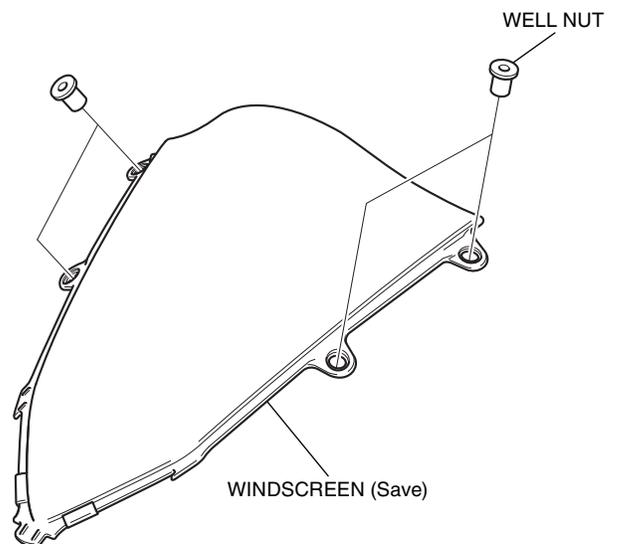

13. Install the well nuts as shown.

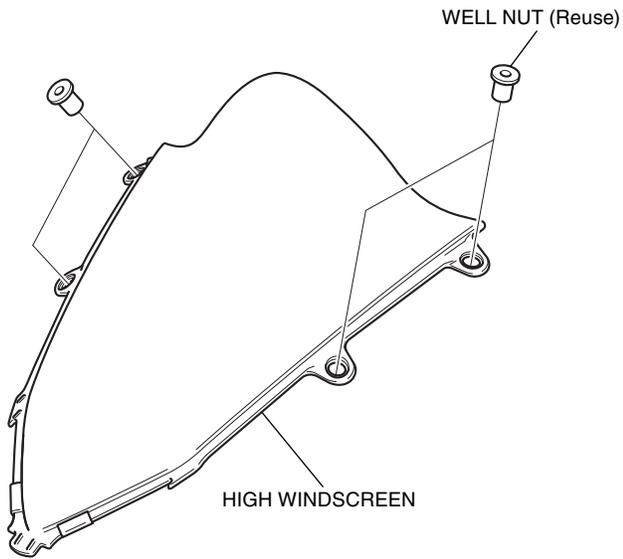

14. Install the high windscreen as shown.

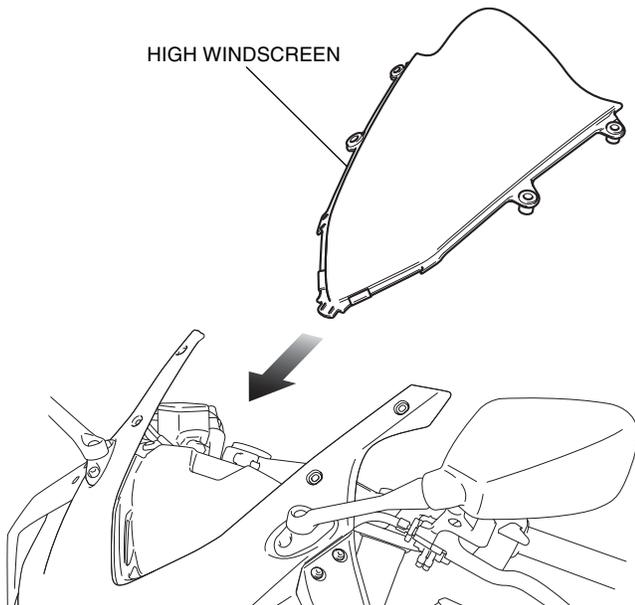

15. Install the parts as shown.

